 


PARTS LIST JS200Y DIRT BIKE

Figure Ref #Description


Price

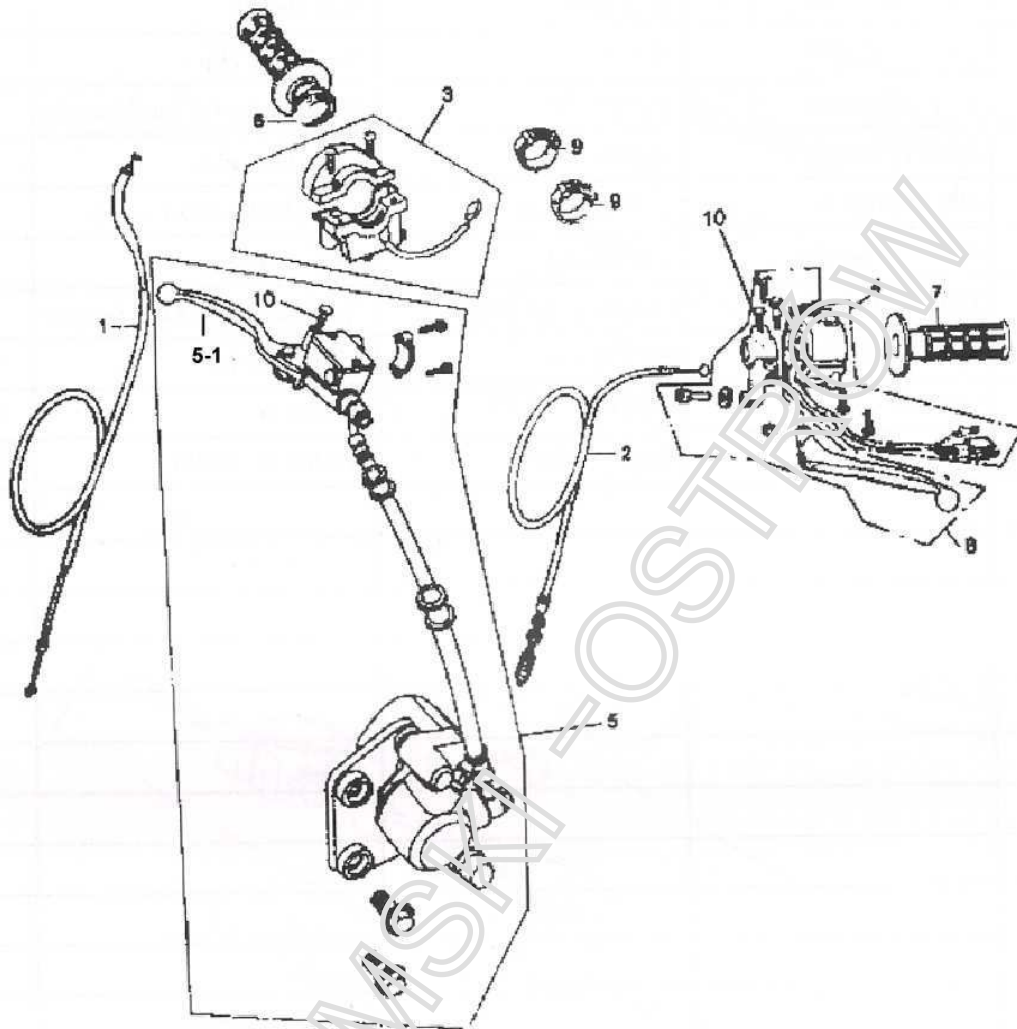


F-1	1 Throttle cable	24.00
	2 Clutch cable	22.00
	3 Right handle bar switch	50.52
	4 Stop switch	24.00
	5 Front brake assy	363.84
	5-1 Brake lever	24.00
	Front brake master cylinder	172.00
	Front brake caliper	168.00
	Front brake pad - set	32.00
	6 Right grip assy	16.00
	7 Left grip	9.00
	8 Left handlebar	23.76
	9 Handlebar tube hoop	2.00

10 Screw hole top Cap

 1.00

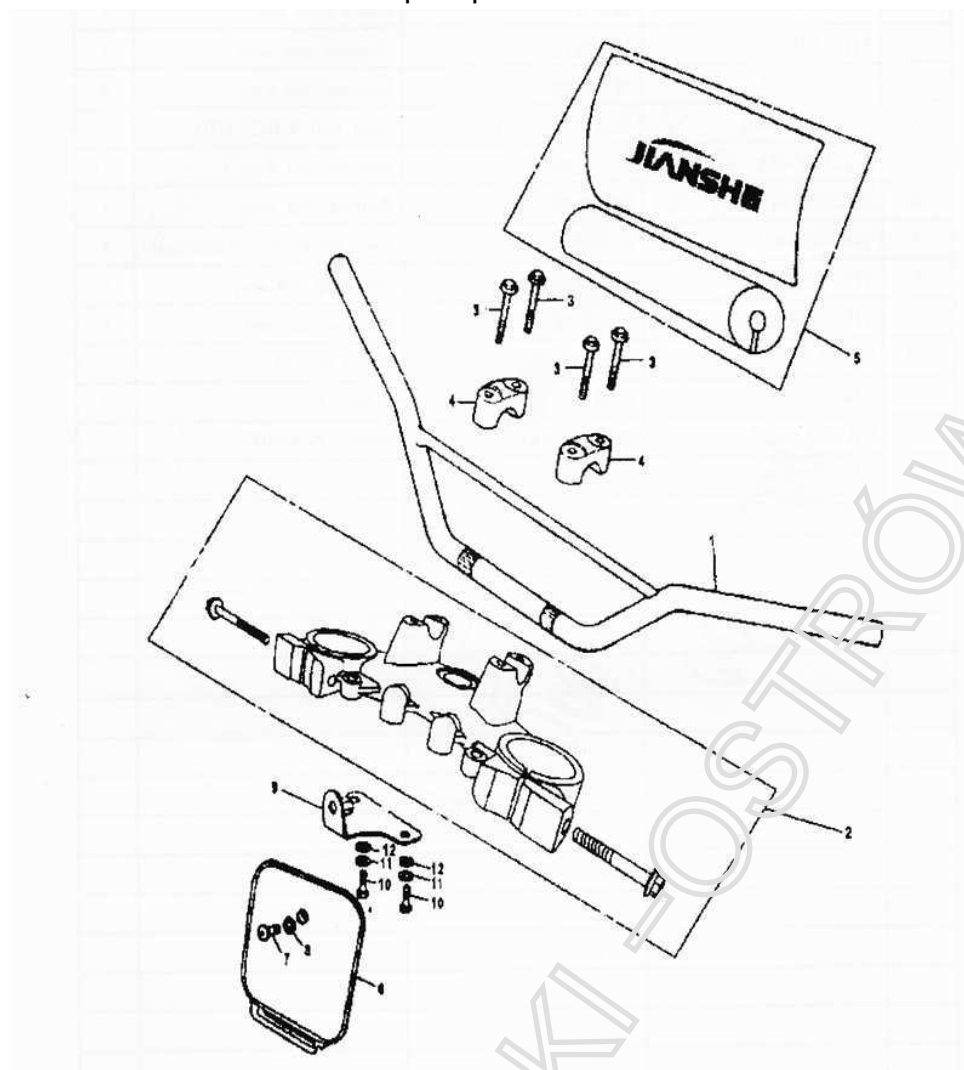


F-2	1 Handlebar tube assy	58.56
	2 upper connecting plate	74.04
	3 bolt m8x35	1.00
	4 handlebar clip	7.20
	5 protecting hood of handlebar tube	34.80
	6 front face plate	9.23
	7 big cylinder head screw	1.00
	8 rubber washer	1.00
	9 upper bracket assy of frnt face plate	6.24
	10 screw m16x6	1.00
	11 washer 6	1.00
	12 washer 6-140HV	1.00

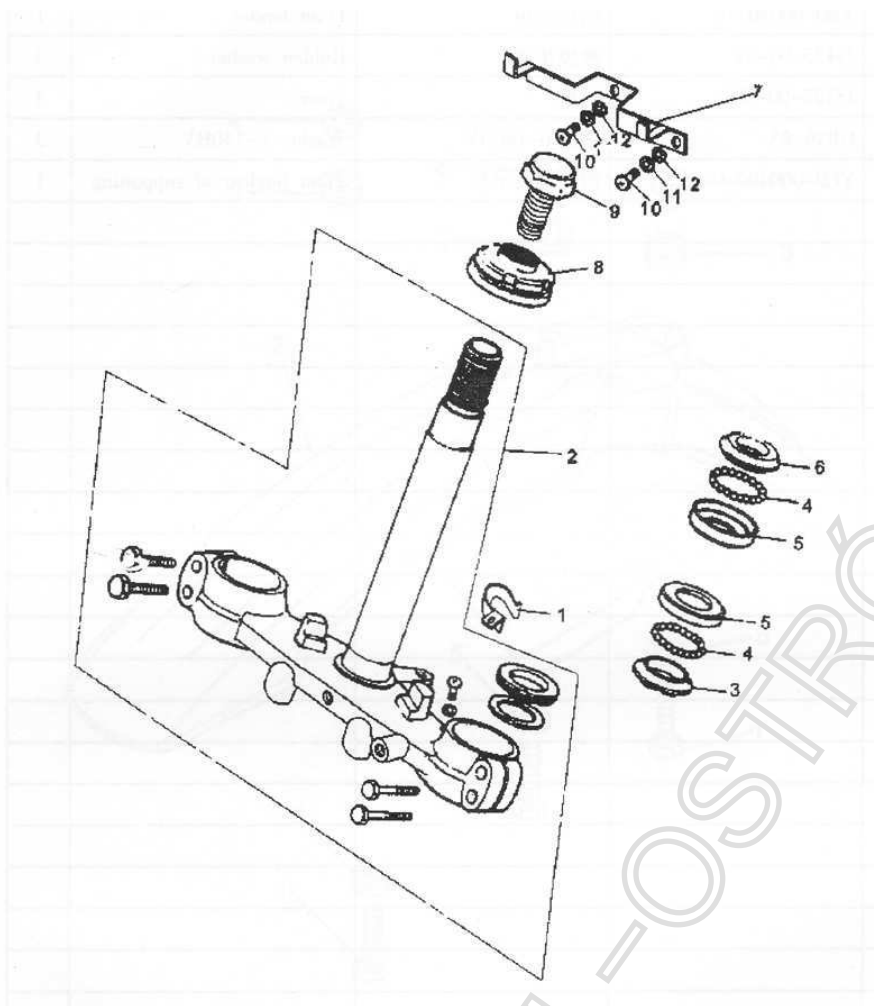 


F-3

1 brake pipe bracket	
2 steering seat assy	124.00
3 bearing seat ring	12.00
4 steel ball 4.7625 g10	5.52
5 bearing seat ring 1	8.00
6 bearing seat ring	8.00
7 lower bracket of front face plate	4.20
8 adjusting nut assy	11.52
9 steering axle nut	7.20
10 screw m6x16	1.00
11 washer 6	1.00
12 washer 6-140HV	1.00

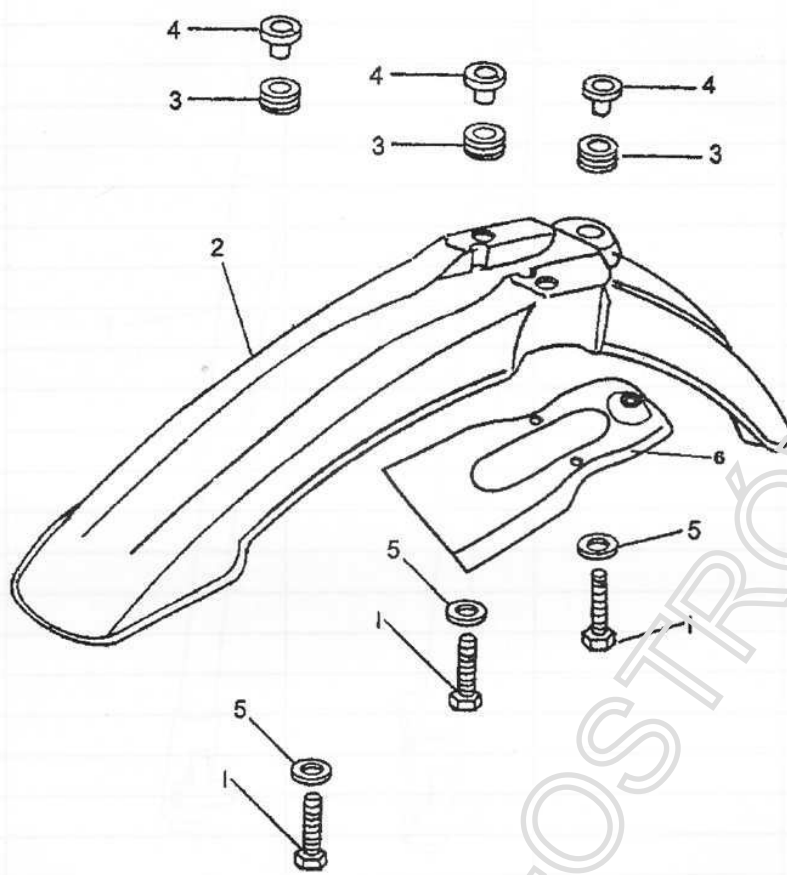 

F-4	1 bolt m6x30	1.00
	2 front fender	51.24
	3 rubber washer	3.84
	4 liner	4.92
	5 washer 6-140HV	2.00
	6 front fender of supporting	16.00

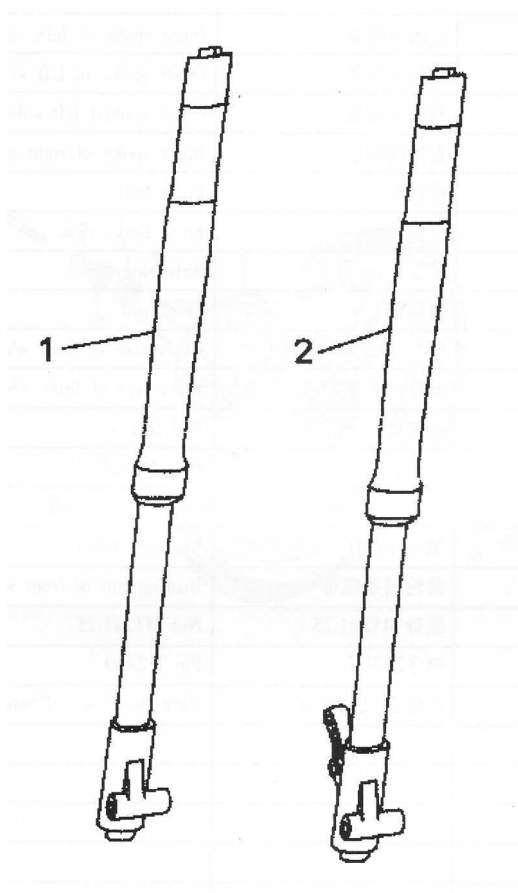 


F-5

1 right front shock
2 left front shock absorber


321.00

 321.00

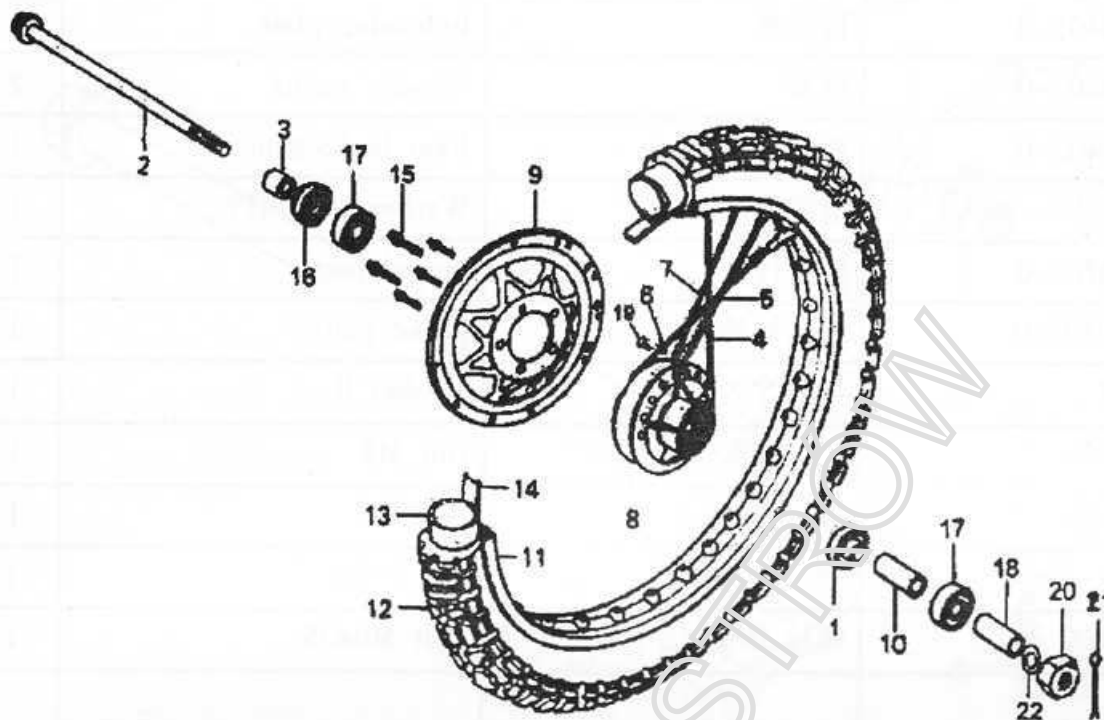


F-6	1 Supporting Ring	2.28
	2 Front Wheel Shaft	12.00
	3 Left Sleeve of Front Wheel	3.23
	4 Inner Spoke of Left Side	n/a
	5 Outer Spoke of Left Side	n/a
	6 Outer Spoke Right Side	n/a
	7 Inner Spoke of Right Side	n/a
	8 Front Hub	n/a
	9 Front Brake Disk	97.68
	10 Axle Sleeve	5.76
	11 Front Rim	222.00
	12 Outer Tyre of Front Wheel	82.00
	13 Inner Tyre of Front Wheel	26.60
	14 Pad Belt	3.00
	15 Bolt M8X25	1.00
	16 Oil Seal 37X23X7	9.00
	17 Bearing 16301	6.00
	18 Bearing Nut of Front Wheel	6.00
	19 (unlabeled part)	
	20 (unlabeled part)	
	21 (unlabeled part)	
	22 (unlabeled part)	

19 Nut M12X1.25	1.32
20 Pin 3.2X30	4.00
21 Right Sleeve Assy of Front Wheel	6.00
22 Front Wheel - COMPLETE	322.00
Front Brake Pad	32.00

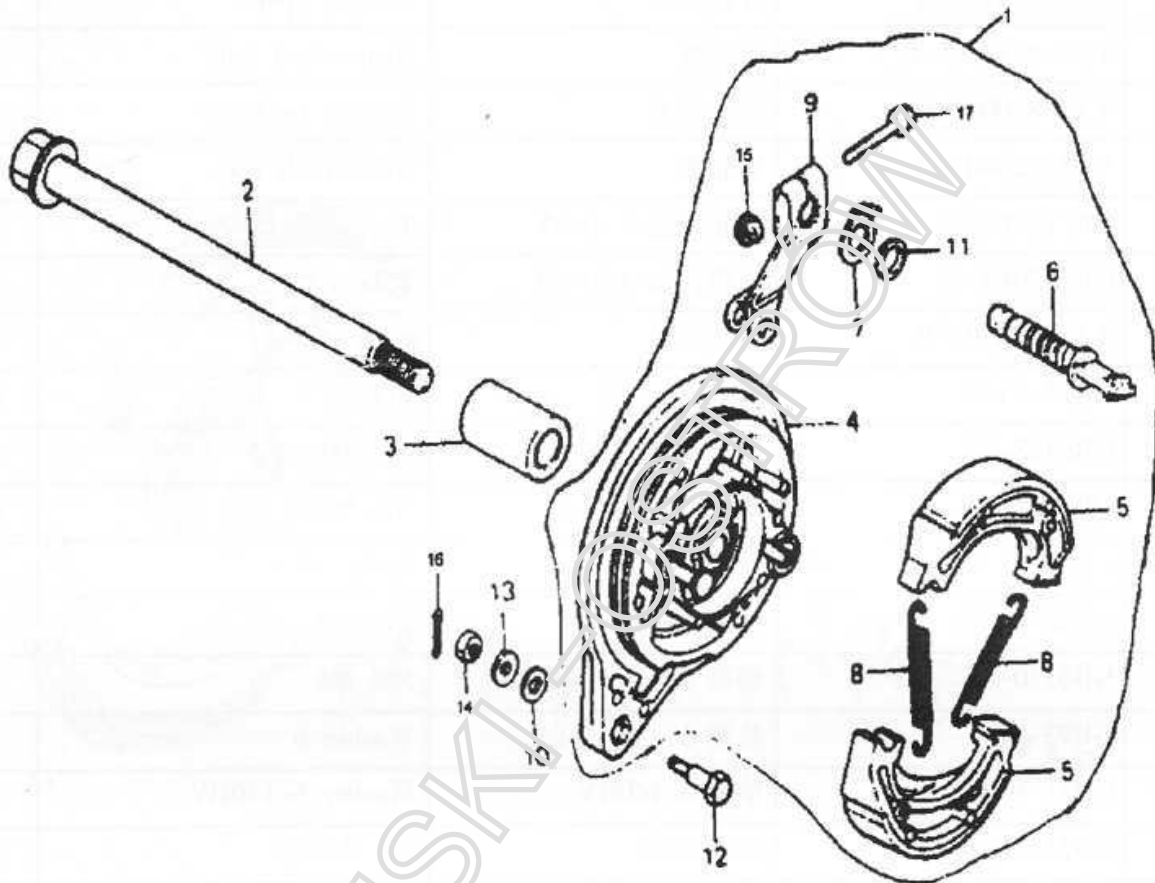 


F-7	1 Rear Brake	81.24
	2 Rear Wheel Shaft	8.88
	3 Right Sleeve of Rear Wheel	4.08
	4 Rear Brake Cover	36.00
	5 Rear Brake Shoe Assy	32.88
	6 Rear Brake Cam	4.00
	7 Indicating Plate	4.00
	8 Tension Spring	4.00
	9 Rear Brake Arm	6.00
	10 Washer 8-140HV	2.00
	11 Sealed Part	4.00
	12 Brake Bolt	5.00
	13 Washer 8-140HV	1.00

14 Nut M8	1.00
15 Nut M6	1.00
16 Pin 2X16	1.00
17 Bolt M6X35	1.00

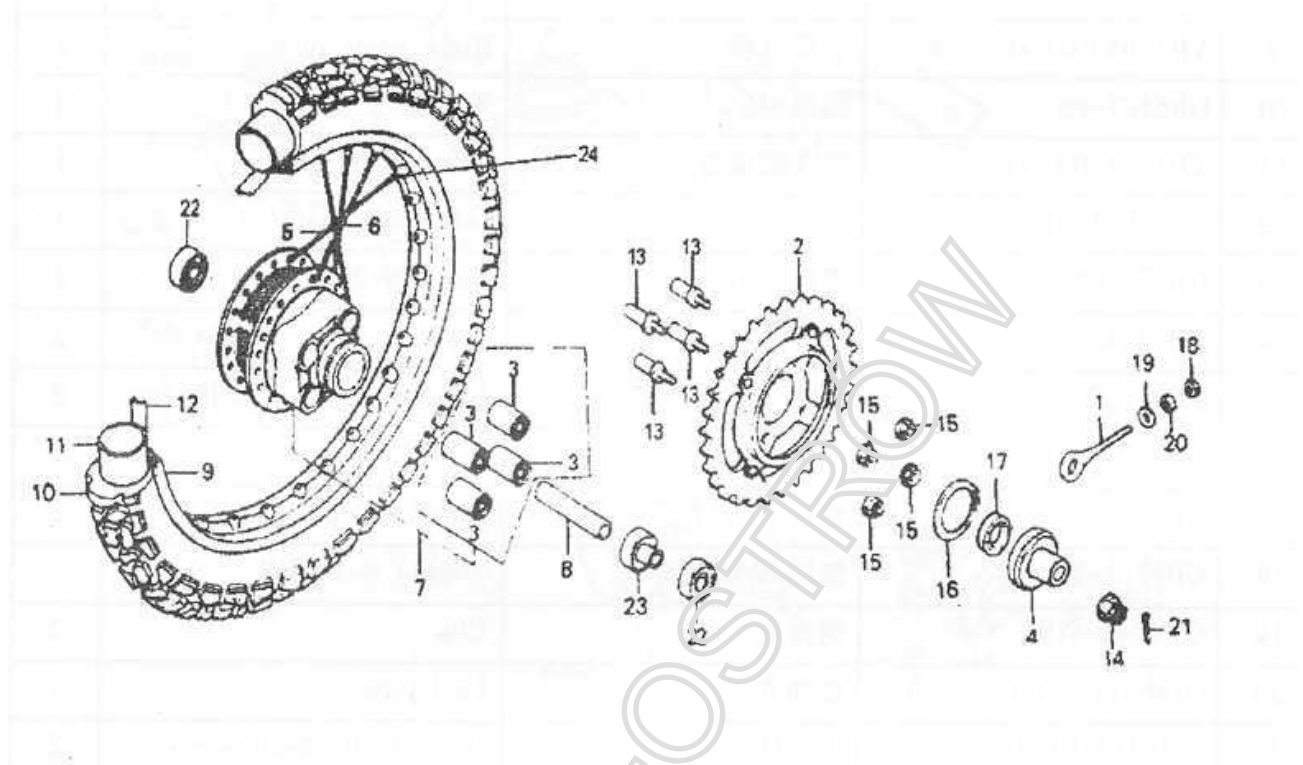 


F-8	1 Chain Adjuster	15.60
	2 Sprocket	80.88
	3 Shock Block	4.80
	4 Left Bushing of Rear Wheel	2.76
	5 Inside Spoke	n/a
	6 Outside Spoke	n/a
	7 Rear Wheel Hub	n/a
	8 Bearing Bushing	4.00
	9 Rear Wheel Rim - COMPLETE	175.08
	10 Tire 4 10-15	88.00
	11 Tube	26.00
	12 Rear Spacer	1.68
	13 Bolt - pressed fit - each	2.75
	14 Nut M15X1.5	2.04
	15 Nut M8	1.00
	16 Circlip 58	1.00
	17 Oil Seal	6.00
	18 Nut M6	1.00
	19 Washer 6	1.00
	20 Washer 6-140HV	1.00
	21 Pin 3.2X30	1.00

22 Bearing 16302	1.00
23 Spacer	11.52
24 Spoke Nut	n/a

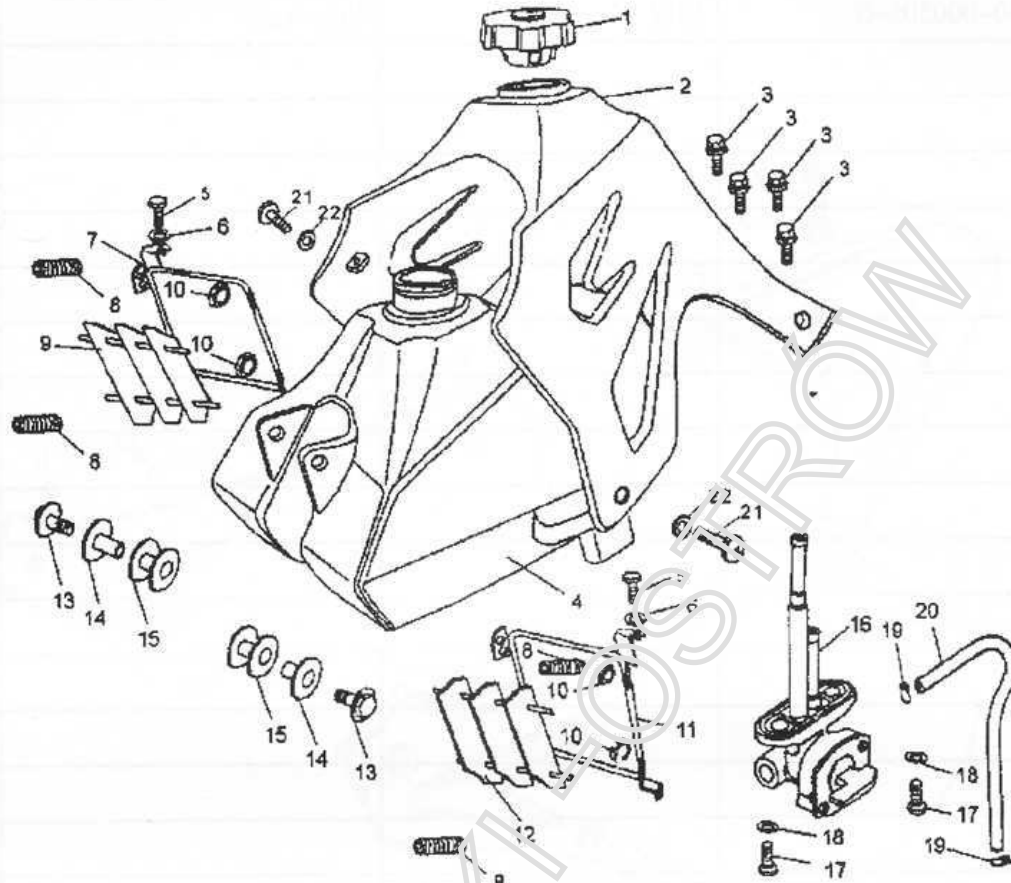 


F-9	1 Fuel Tank Cover Assy	32.28
	2 Decorative Case of Fuel Tank	110.64
	3 Bolt M6X16	1.00
	4 Fuel Tank	251.04
	5 Screw M6X20	1.00
	6 washer 6-140HV	1.00
	7 Right Bracket Assy	4.00
	8 Spring	4.00
	9 Right Guide Plate	8.64
	10 Nut M6	1.00
	11 Left Bracket Assy	4.00
	12 Left Guide Plate	8.64
	13 Bolt M6X25	1.00
	14 Gasket	4.00
	15 Fuel Tank Installing Rubber Ring	4.00
	16 Fuel Cock	22.92
	17 Screw M6X12	1.00

18 washer 6-140HV	1.00
19 Clip	1.00
20 Fuel Pipe	4.00
21 big cylinder head screw	6.48
22 rubber washer	2.88

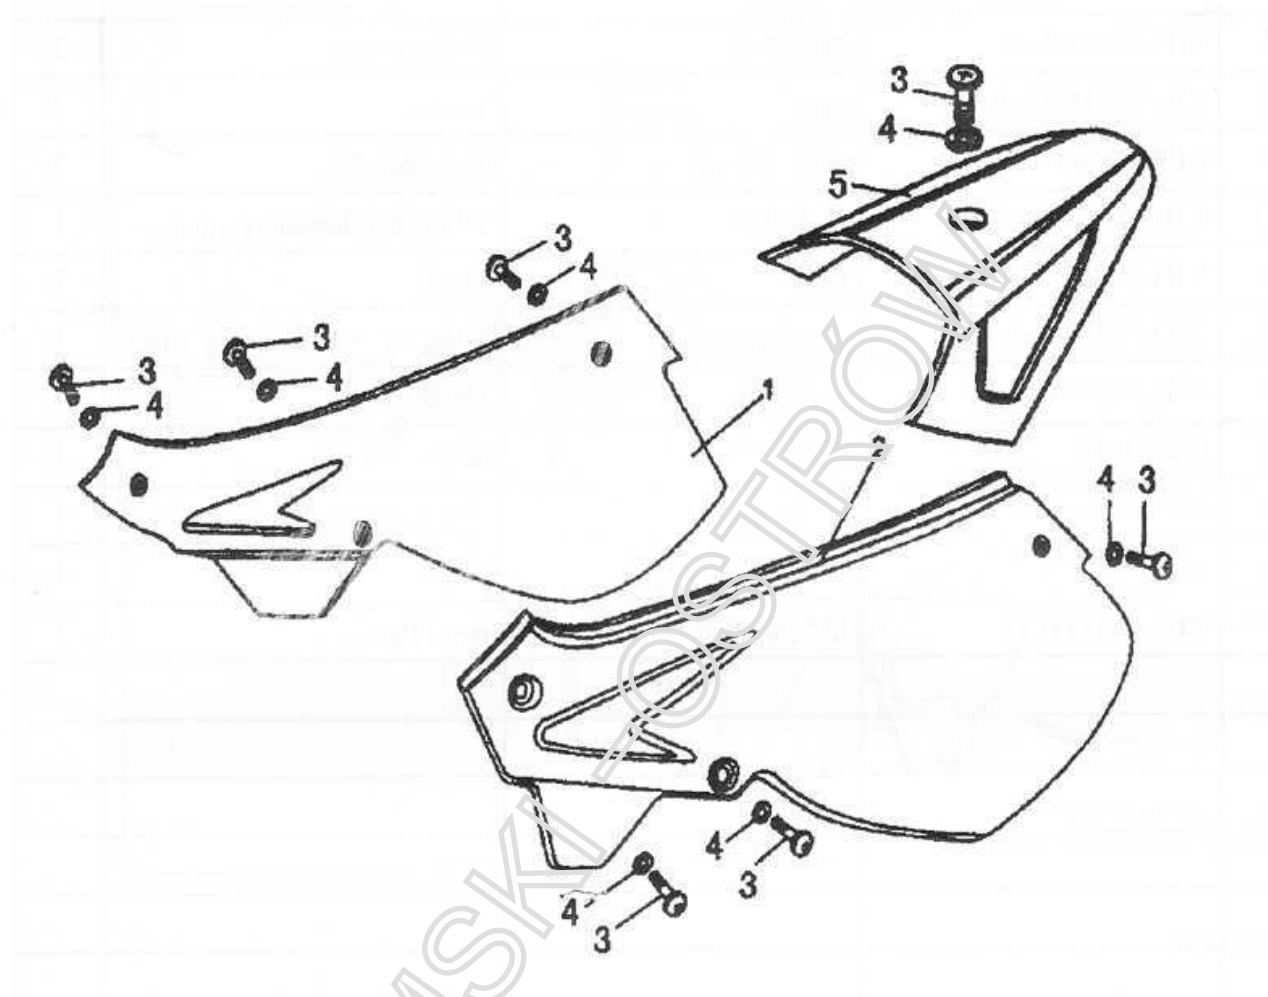 


F-10	1 Right Side Cover	43.92
	2 Left Side Cover	43.92
	3 Fruss Head Screw	2.00
	4 rubber washer	2.88
	5 Rear Case	34.50

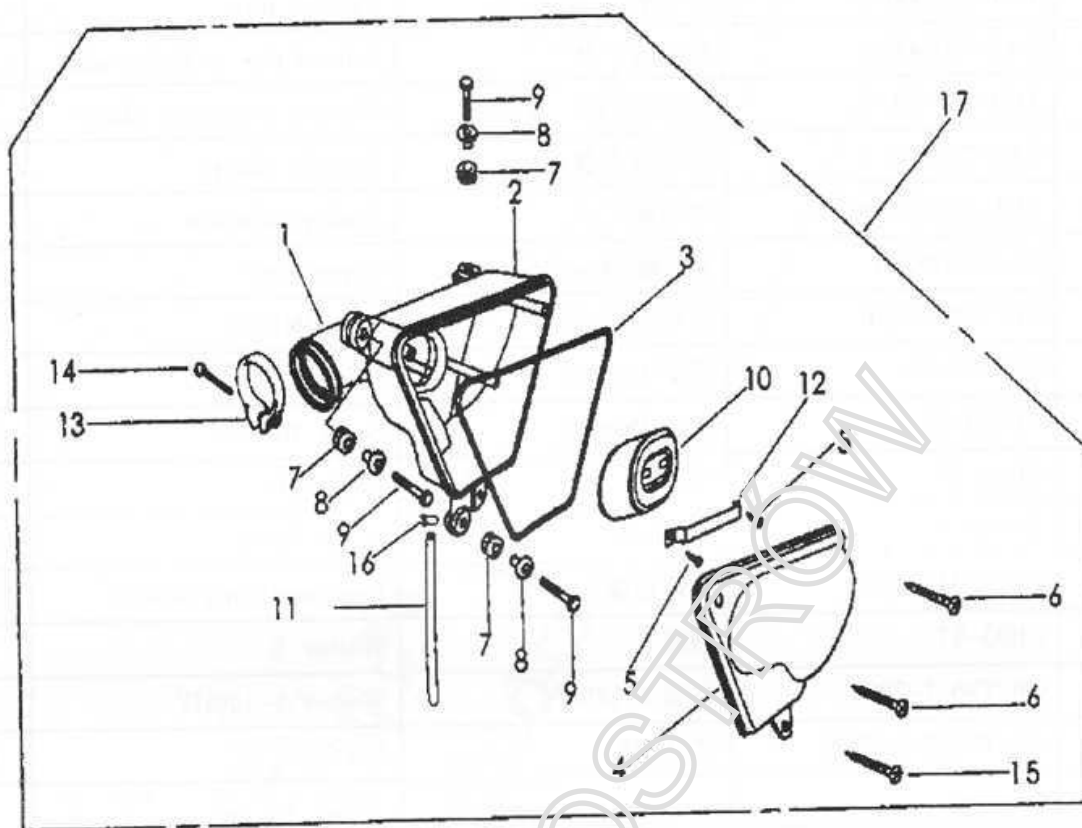 


F-11

1 Connecting Pipe	n/a
2 Case Assy	n/a
3 O-Ring	n/a
4 Case Cover Assy	n/a
5 Self-tapping screw M3.8X12	n/a
6 Self-tapping screw M4.8X25	n/a
7 Rubber Core	n/a
8 Gasket	n/a
9 Bolt M6X25	n/a
10 Filter Net Fastening Plate	n/a
11 Hose	n/a
12 Filtering Net Fastening Plate	n/a
13 Clamp Assy	n/a
14 Screw M4X30	n/a
15 Self-tapping Screw	n/a
16 Clip	n/a
17 Air Filter	75.60

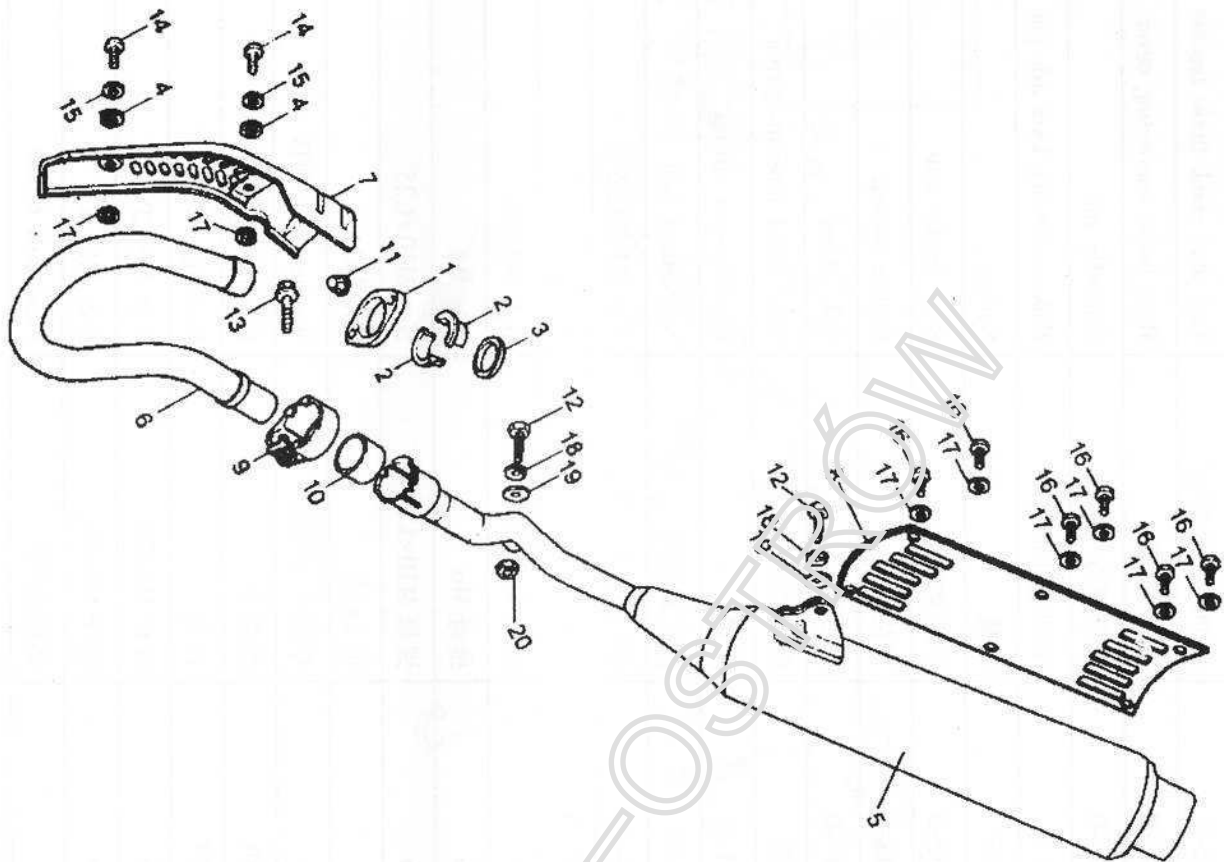 


F-12	1 Silencer Conecting Block	3.00
	2 Silencer Installing Gasket	3.72
	3 Exhaust Pipe Washer	6.00
	4 Washer 6-140HV	1.00
	5 Silencer Assy	278.40
	6 Exhaust Pipe Washer	28.92
	7 Exhaust Pipe protection Plate	14.52
	8 Silencer protectionplate	28.92
	9 silencer clamp	5.76
	10 sealing cartridge	7.20
	11 capped nut	4.00
	12 Bolt DM8X20	1.00
	13 Bolt M8X30	1.00
	14 Screw M6X10	1.00
	15 Washer 6	1.00
	16 Screw M6X6	1.00
	17 Heat-insulating washer	5.00
	18 Washer 8-140HV	1.00
	19 Washer 8-140HV	1.00

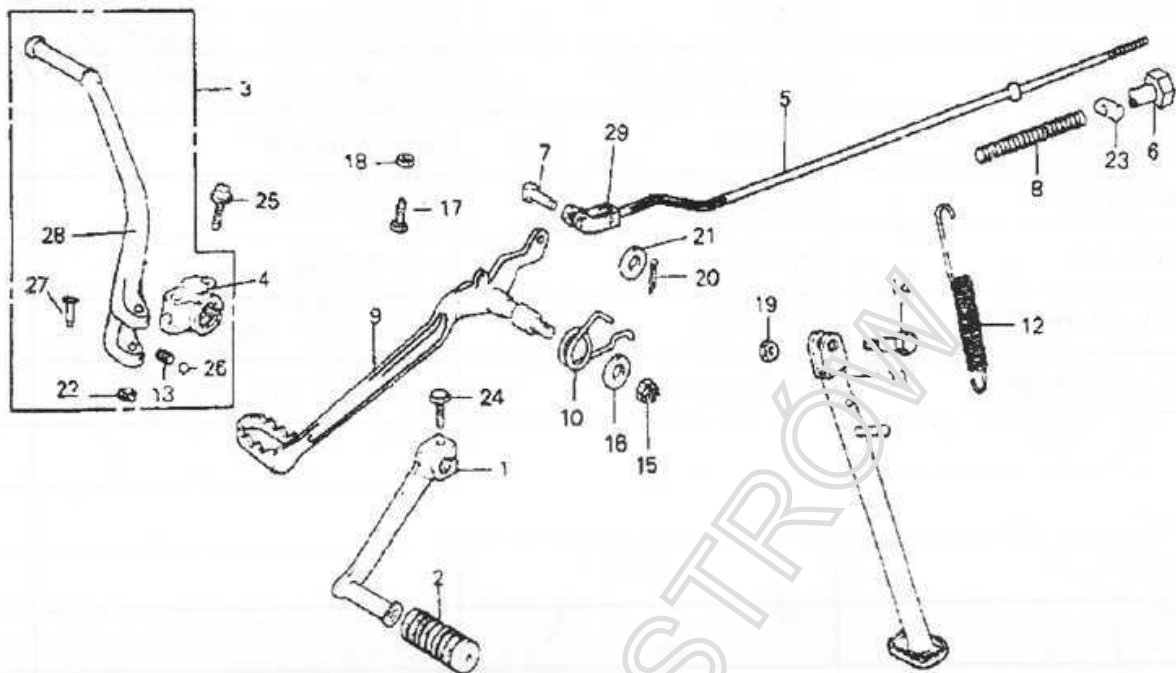 

F13


1 Change Speed Pedal	18.20
2 Change Speed Lever Cover	n/a
3 Kick Start Lever Assy	36.60
4 Kick Start Crank Throw Bracket	see 13-3 above
5 Rear Brake Connecting Cover	6.96
6 Butterfly Nut	1.20
7 Brake Connecting Lever Axle Pin	2.00
8 Spring	1.44
9 Rear Brake Arm	35.76
10 Return Spring	5.52
11 Side Stand	52.68
12 Side Stand Tension Spring	1.68
13 Compression Spring	see 13-3 above
14 Side Stand Bolt	1.44
15 Nut M10X1.25	1.00
16 Washer	1.00
17 Bolt M6X25	1.00
18 Nut M6	1.00

19 Nut M1-X1.25	1.00
20 Pin 2X16	1.00
21 Washer 6-140HV	1.00
22 Circlip 8	see 13-3 above
23 Bushing	1.00
24 Bolt M6X20	1.00
25 Bolt M8X40	1.00
26 Steel Ball 6.000	see 13-3 above
27 Pin	see 13-3 above
28 Kick Start Lever Assy	see 13-3 above
29 Rear Brake Connecting Fender	7.20

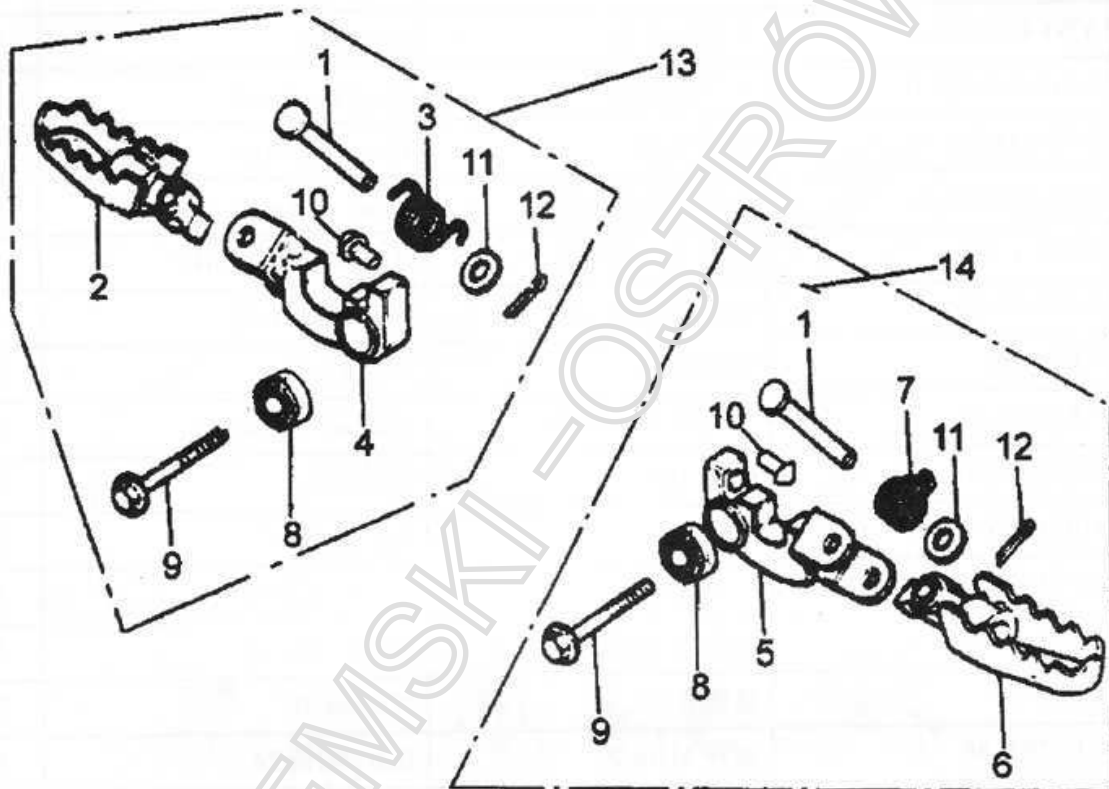 


F-14	1 Axle Pin 8X40	n/a
	2 Right Pedal Assy	n/a
	3 Return Spring of Right Pedal	n/a
	4 Connecting Seat Assy/Right Pedal	n/a
	5 Connecting Seat Assy/Left Pedal	n/a
	6 Left Pedal Assy	n/a
	7 Return spring of Left Pedal	n/a
	8 Shock Cover	n/a
	9 Bolt M8X40	n/a

10 Shock Gasket	n/a
11 Washer 8-140HV	n/a
12 Pin 3.2X14	n/a
13 Right Front Foot Rest	36.24
14 Left Front Foot Rest	36.24

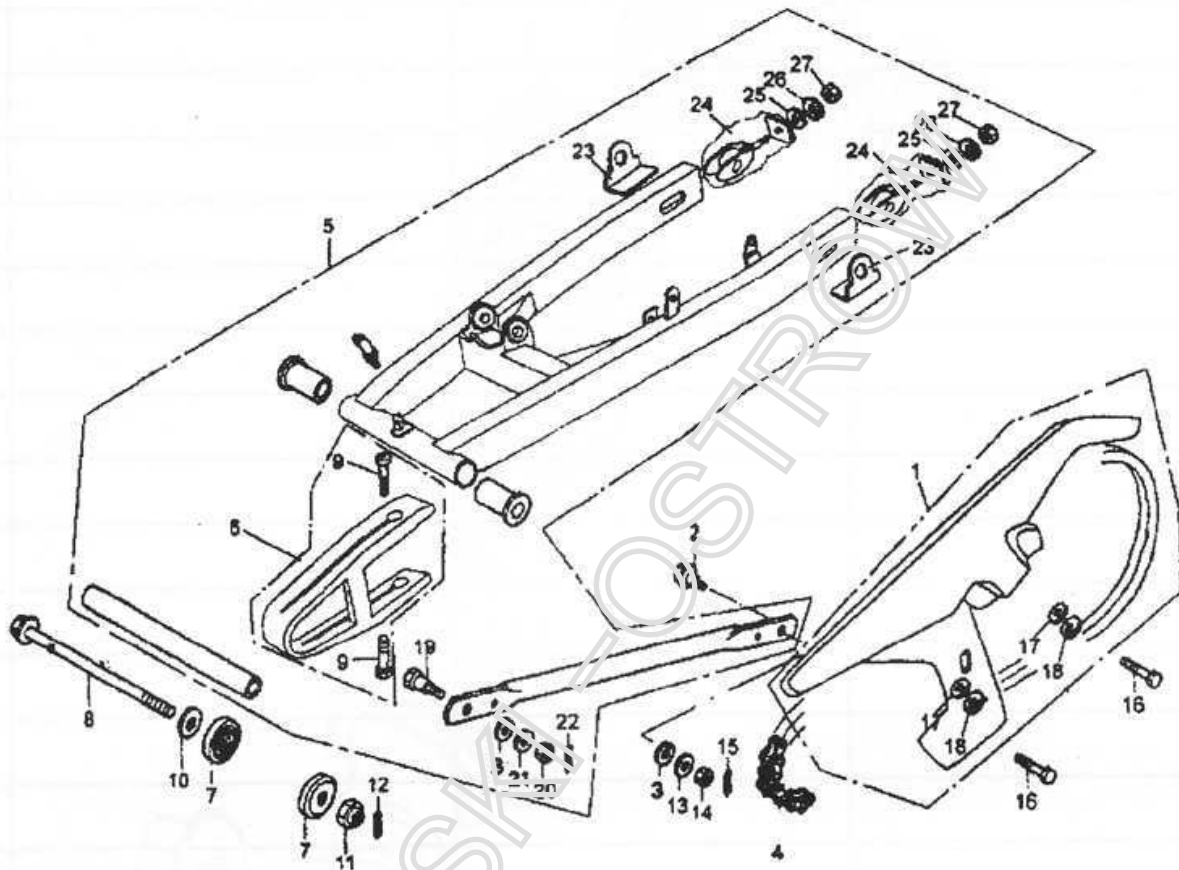 


F-15	1 Chain cover	18.80
	2 Brake Bolt	1.00
	3 Washer	1.00
	4 Chain 08MB-130	46.00
	5 Rear Arm	420.00
	6 Seal quar	7.32
	7 Dust Boot Unit	3.72
	8 Rear Arm Axle	9.48
	9 Head Screw	1.00
	10 Washer 12-140HV	1.00
	11 Nut M12X1.25	1.00
	12 Pin 3.2X30	1.00
	13 Washer 8-140HV	1.00
	14 Nut M8	1.00


15 Pin 2X16	1.00
16 Screw M6X12	1.00
17 Screw m6X12	1.00
18 Washer	1.00
19 Bolt M10X24	1.00
20 Nut M8	1.00
21 Washer 8-140HV	1.00
22 Pin 2X16	1.00
23 Cut-off Shoulder	2.88
24 Chain Adjuster	17.40
25 Washer 6-140HV	1.00
26 Washer 6	1.00
27 Nut M6	1.00

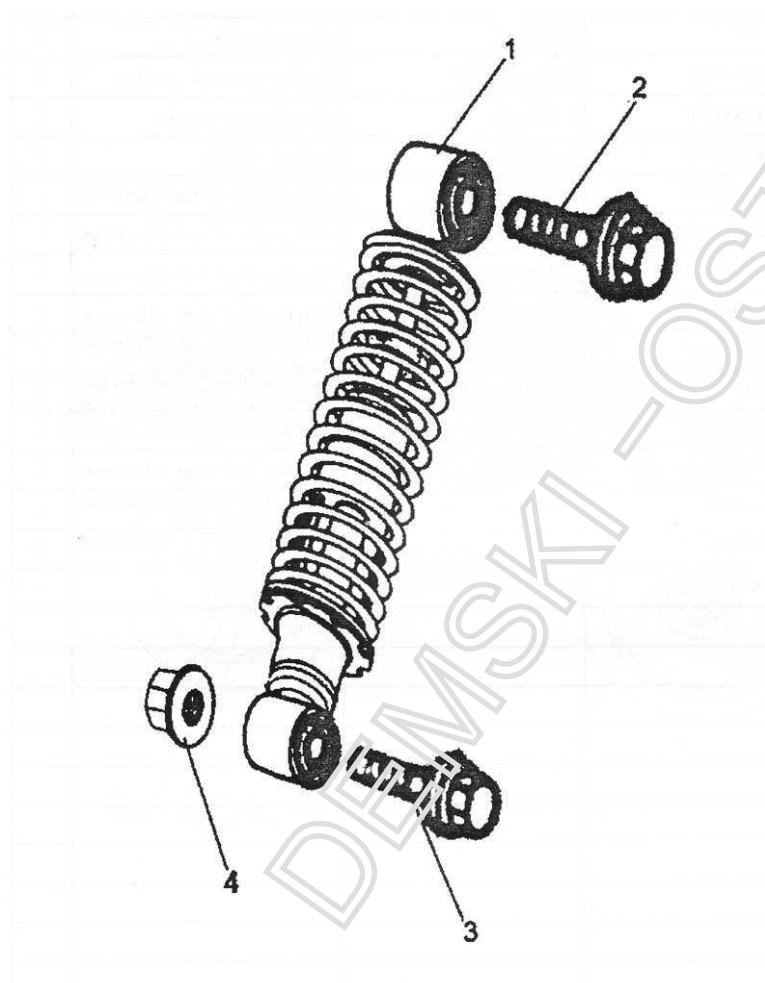 


F-16	1 Rear Shock Absorber	312.36
	2 Bolt M10X1.25X65	0.48
	3 Bolt M10X80	0.60
	4 Nut M10X1.25	0.96

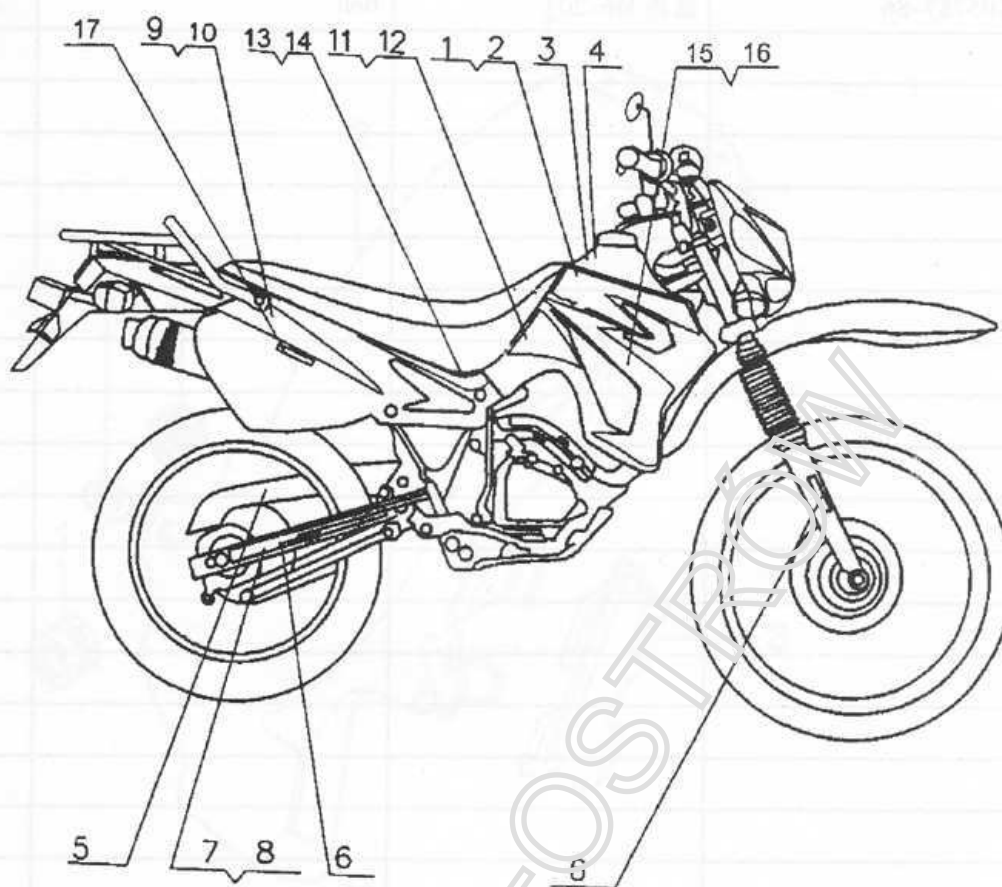 

F-17	1 L graphic 1 of ornamental hood of fuel tank	n/a
	2 R graphic 1 of ornamental hood of fuel tank	n/a
	3 warning mark	n/a
	4 quality approval graphic	n/a
	5 manufacturer graphic	n/a
	6 symbol graphic	n/a
	7 R graphic of rear wheel fork	n/a
	8 L graphic of rear wheel fork	n/a
	9 Graphic 2 of Left Side cover	n/a
	10 Graphic 2 of Right side of cover	n/a
	11 L graphic 2 of ornamental hood of fuel tank	n/a
	12 R graphic 2 of ornamental hood of fuel tank	n/a
	13 Graphic 1 of left side cover	n/a
	14 Graphic 2 of Right side of cover	n/a
	15 L graphic 3 of ornamental hood of fuel tank	n/a
	16 R graphic 3 of ornamental hood of fuel tank	n/a
	17 model graphic	n/a

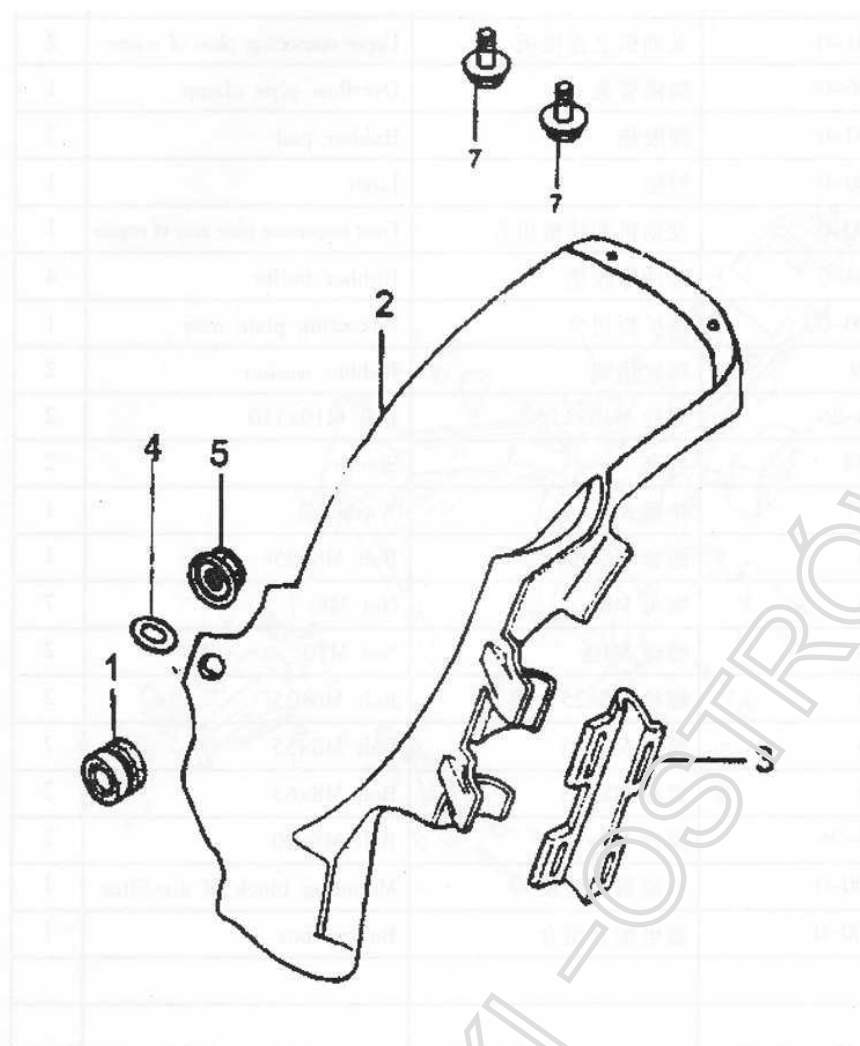 


F-18	1 Rubber Washer	1.00
	2 Rear Fender	24.00
	3 Rear protector washer	6.20
	4 washer	1.00
	5 nut	1.00
	6 bolt	1.00

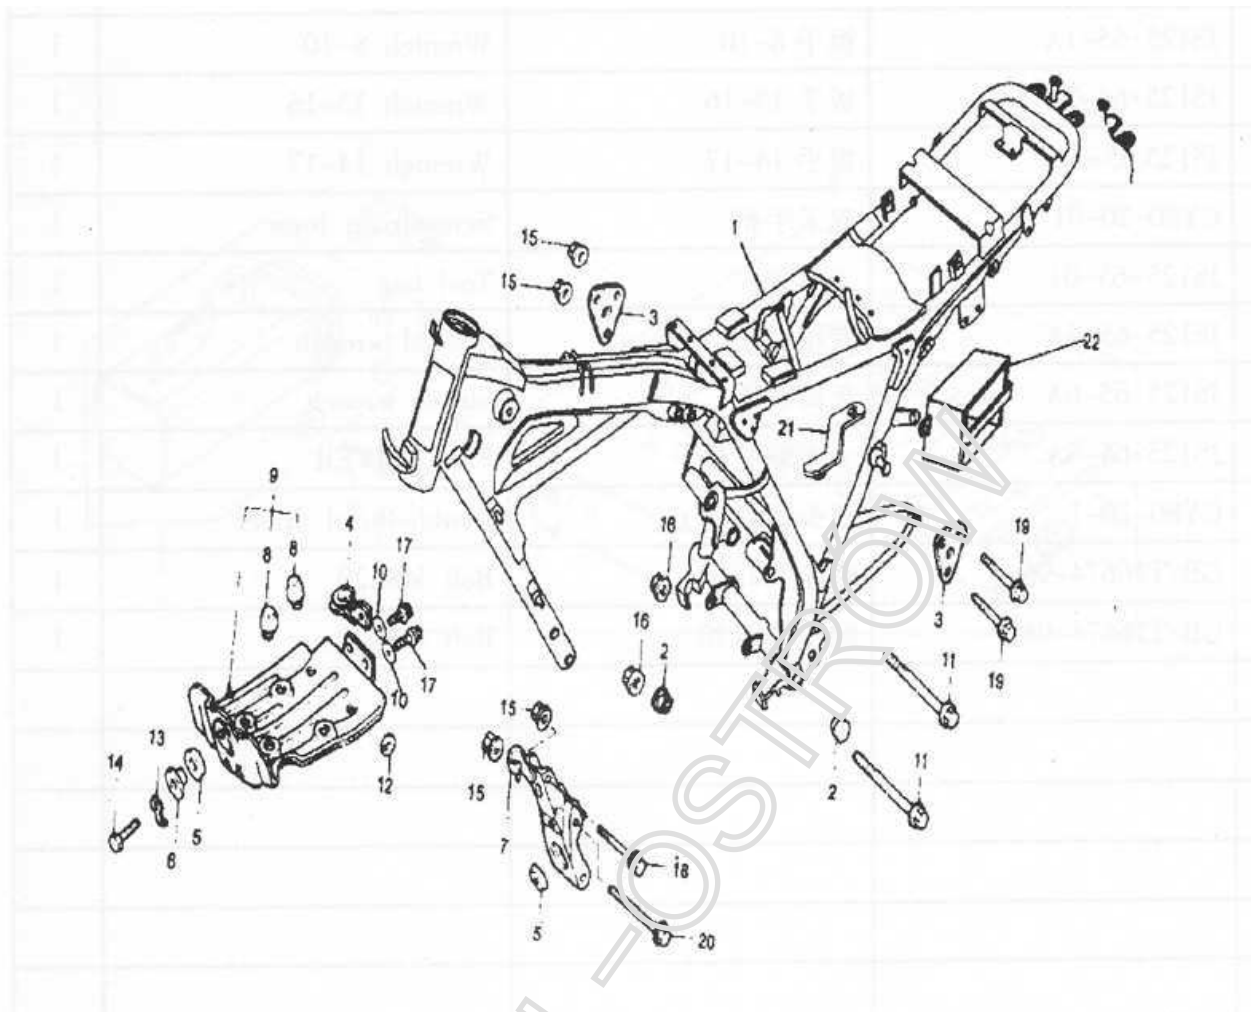 


F-19	1 Frame	n/a
	2 Spout plug of frame	4.00
	3 upper connectint plate of engine	12.00
	4 overflow pipe clamp	8.00
	5 rubber pad	8.00
	6 liner	4.00
	7 front susp plate assy of engine	6.36
	8 rubber buffer	2.00
	9 protecting plate assy	54.84
	10 rubber washer	2.00
	11 bolt M10X10	2.00
	12 sleeve	2.00
	13 Washer 8-140HV	2.00
	14 bolt M8X35	2.00
	15 Nut M8	2.00
	16 Nut M10X1.25	2.00
	17 Bolt M6X25	2.00
	18 Bolt M8X55	2.00
	19 Bolt M8X65	2.00

20 Bolt M8X90	2.00
21 Mounting block of air filter	2.00
22 battery box	40.56

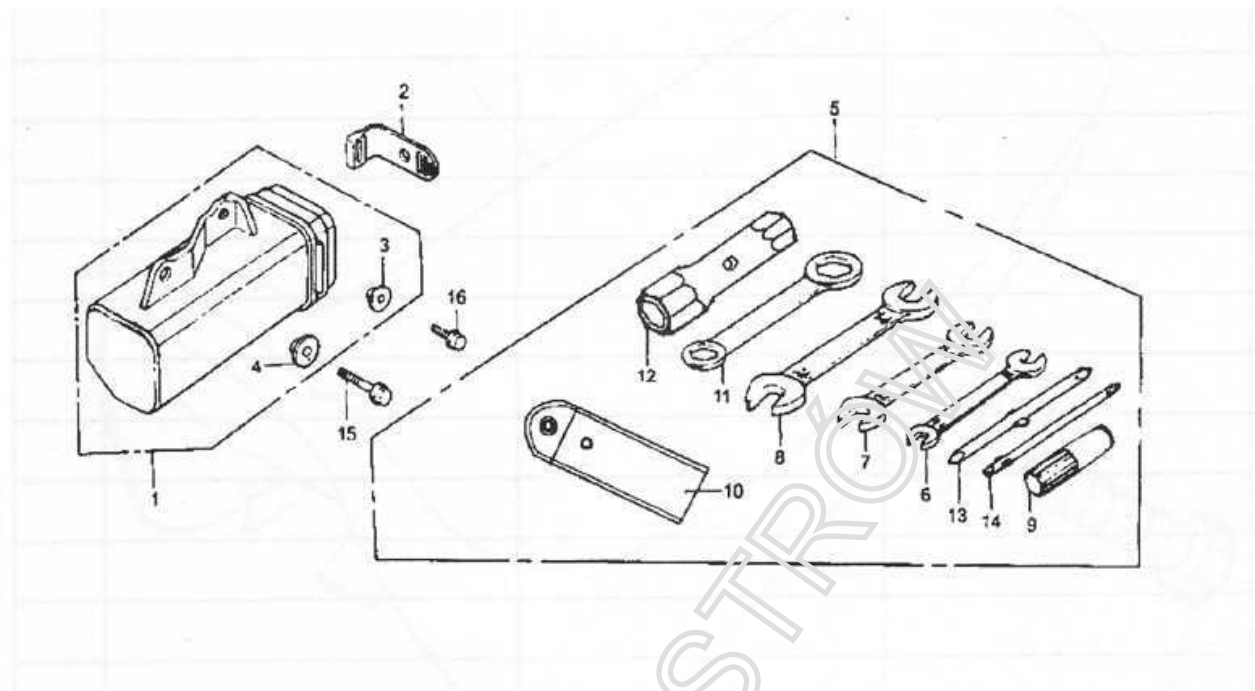 


F-20	1 tool box body	16.60
	2 rubber bolt	6.24
	3 callar	2.00
	4 liner	2.00
	5 tool kit	24.00
	6 wrench 8-10	n/a
	7 wrench 13-16	n/a
	8 wrench 14-17	n/a
	9 screwdriver lever	n/a
	10 tool bag	n/a
	11 special wrench	n/a
	12 sleeve wrench	n/a
	13 plug driver	n/a
	14 double-head driver	n/a
	15 bolt M8X20	1.00
	16 Bolt M6X20	1.00

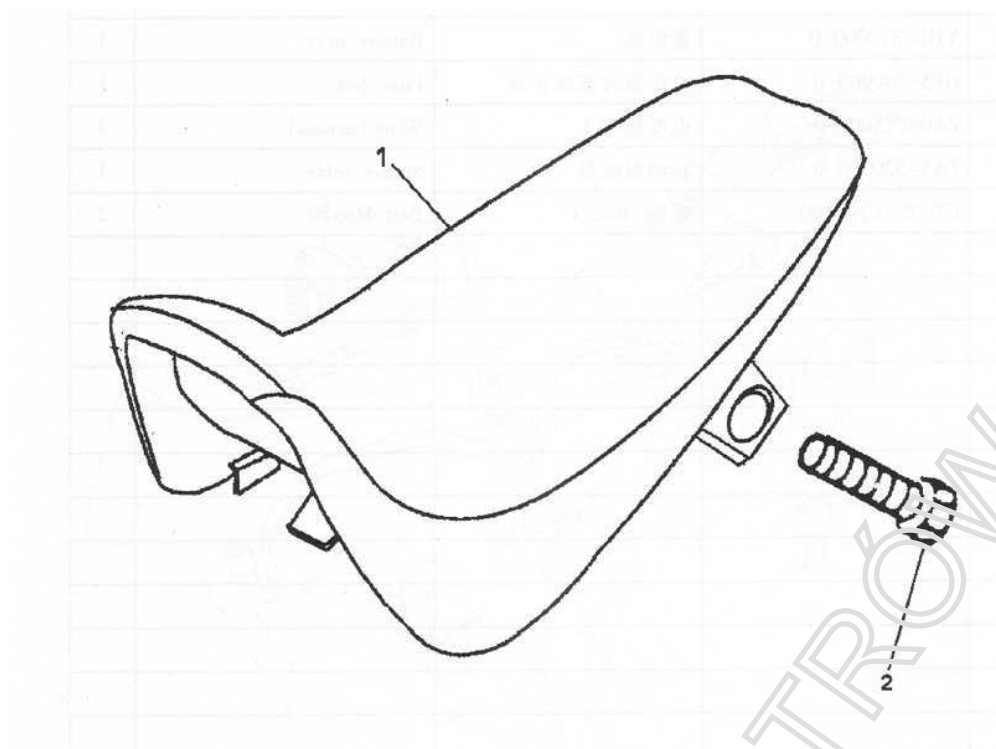 

F-21


1 Seat
2 Bolt M8X20

 153.36
1.00

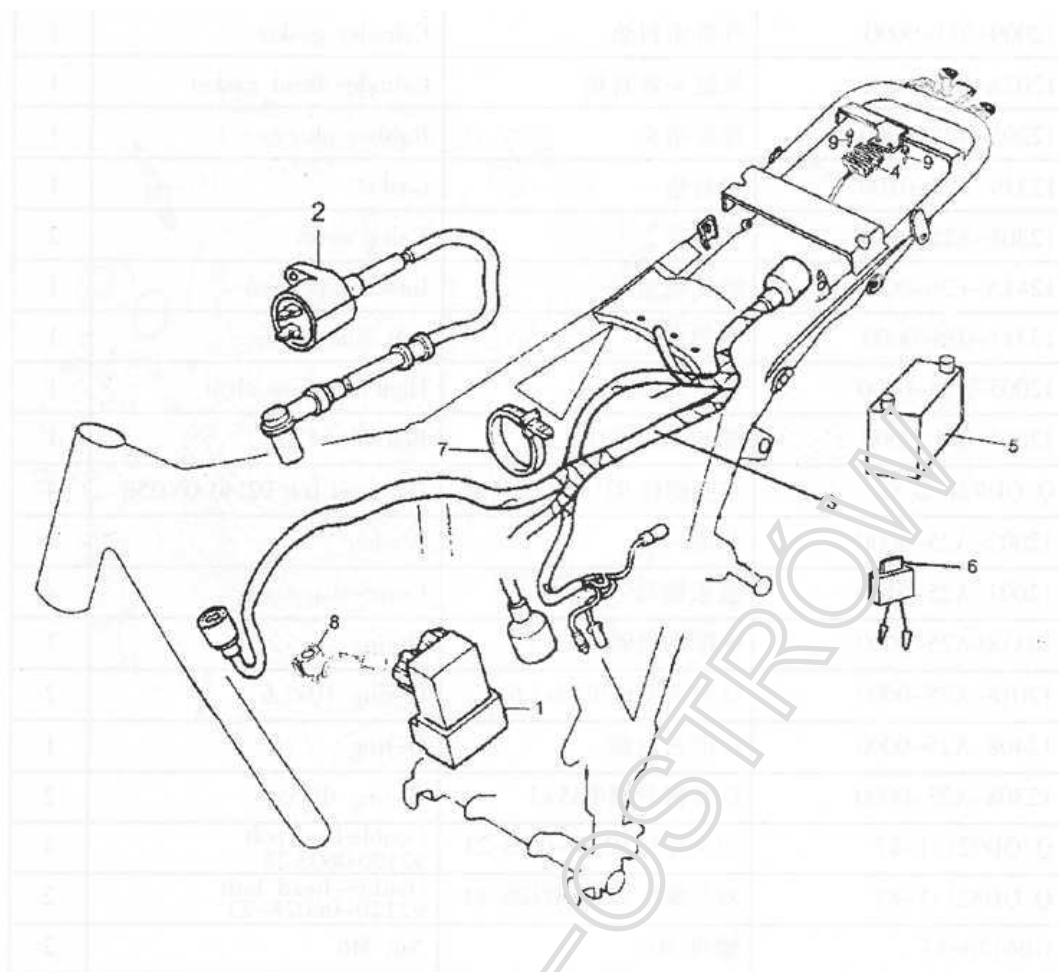


F-22

1 CDI Assy	65.00
2 ignition coil assy	47.28
3 wire harness assy	59.64
4 rectification regulator	39.00
5 battery assy	88.00
6 fuse box	12.00
7 wire harness 1	2.00
8 starter relay	27.96
9 bolt M6X20	1.00

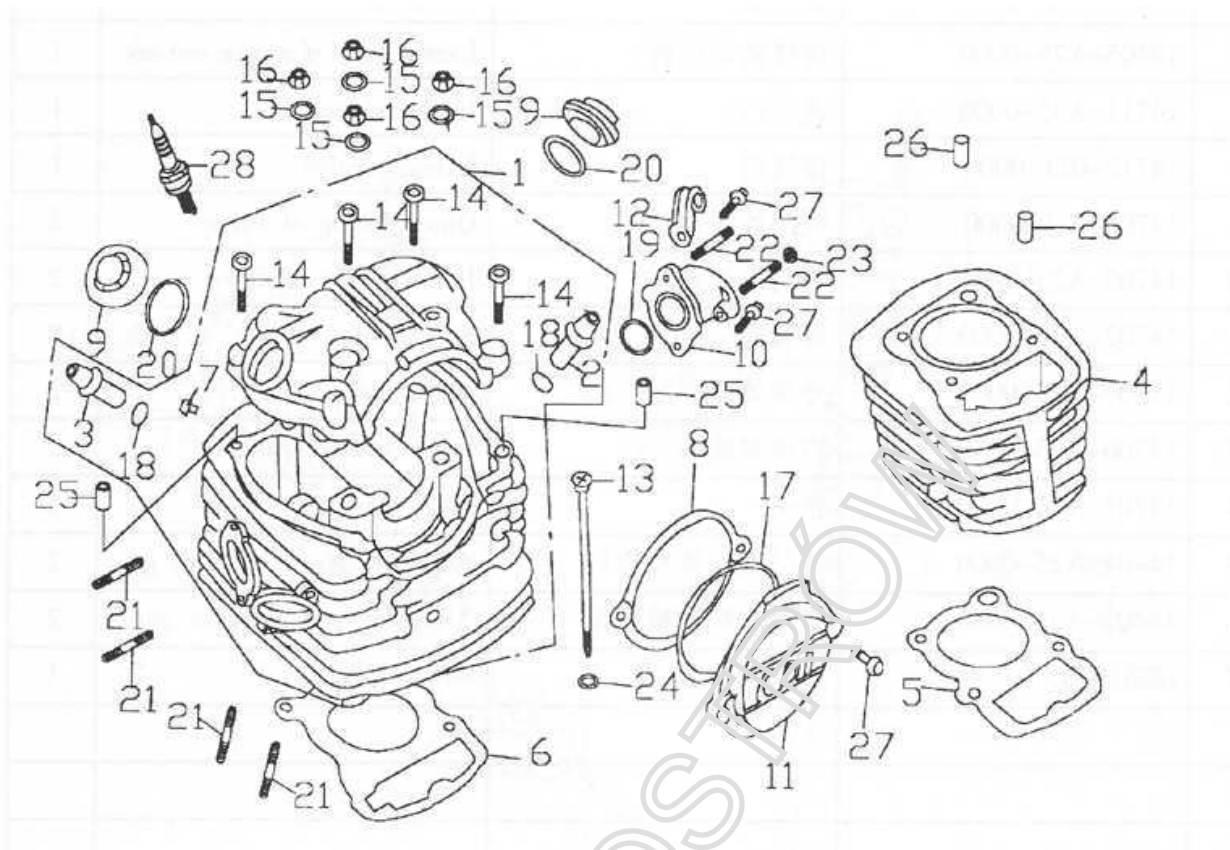 

E-1	1 Cylinder head component	245.00
	2 guide pipe of intake valve	4.00
	3 guide pipe of exhaust valve	4.00
	4 cylinder body	267.72
	5 cylinder gasket	8.00
	6 cylinder head gasket	12.00
	7 rubber plug	4.00
	8 gasket	4.00
	9 valve cover	9.00
	10 intake pipe assy	14.64
	11 left side cover	21.00
	12 high pressure cleat	4.00
	13 bolt M6X120	4.00
	14 pan-head bolt 92140-06035B	4.00
	15 washer	4.00
	16 cover-shape nut	4.00
	17 O-ring	4.00
	18 O-ring 10X1.6	4.00
	19 O-Ring	4.00
	20 O-Ring 35X3	4.00
	21 double-head bolt 92120-0603-23	4.00
	22 double-head bolt 92120-06028-23	4.00
	23 nut M6	4.00

24 washer	4.00
25 locating pin 92401-10014	4.00
26 locating pin 92401-10020	4.00
27 pan head bolt 92130-06020	4.00
28 resistance type spark plug	7.00

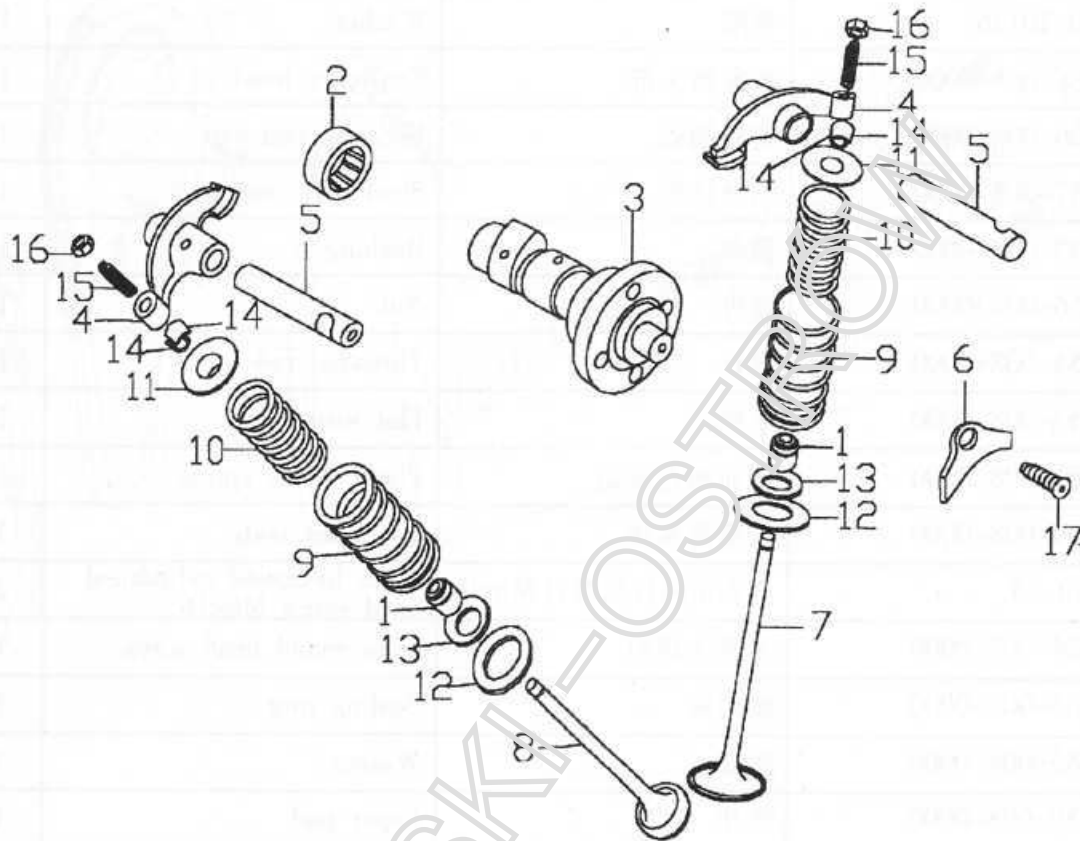 


E-2	1 Oil Catch hood	21.00
	2 right bearing of cam shaft	9.00
	3 cam shaft assy	22.00
	4 swaying arm	12.00
	5 swaying arm axle	12.00
	6 locating board of swaying arm axle	6.00
	7 intake valve	32.00
	8 exhaust valve	32.00
	9 outer spring of valve	6.00
	10 inner spring of valve	6.00
	11 spring seat	6.00
	12 outer spring seat	6.00
	13 inner spring seat	6.00
	14 lock clamp	6.00
	15 adjusting screw of valve gap	6.00

16 adjusting nut of valve gap

6.00

17 screw M6X20

 
4.00

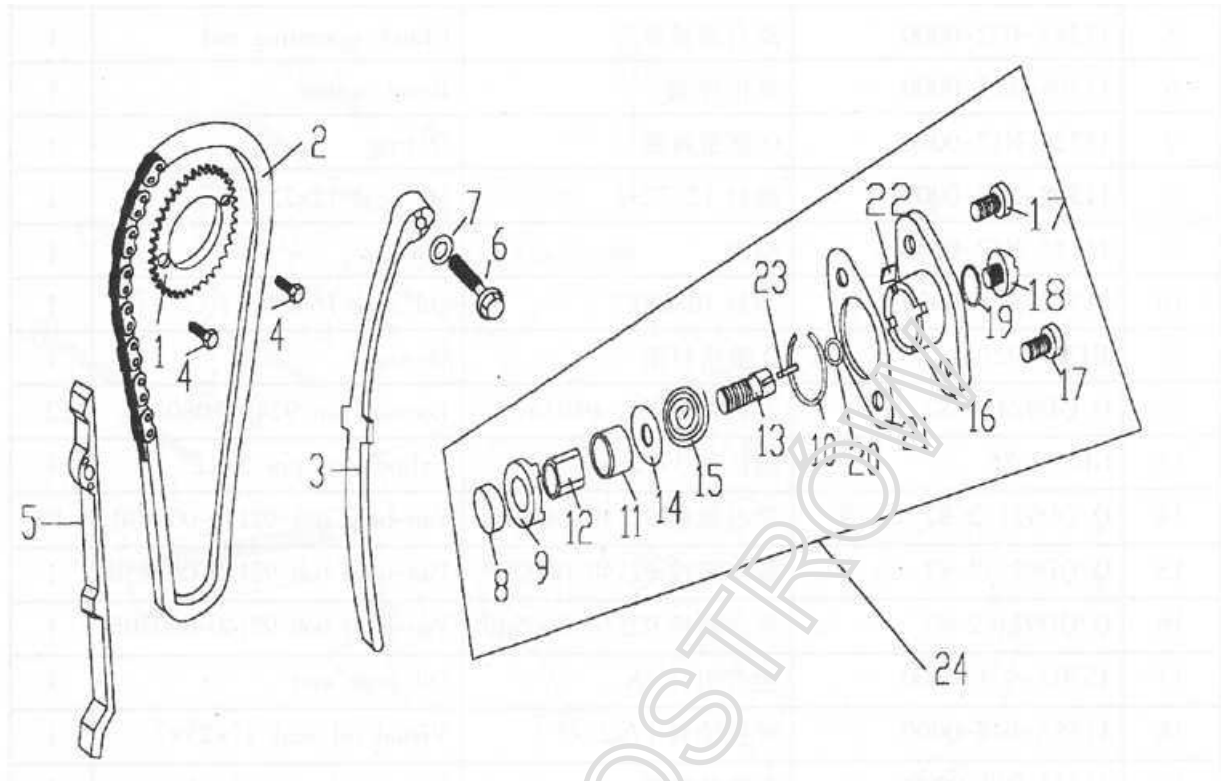


E-3

- 1 Timing driven sprocket
- 2 timing chain
- 3 chain adjusting board
- 4 bolt M6X10
- 5 chain guide board
- 6 locating pin axle of adjusting board
- 7 washer
- 8 tensioner head
- 9 locating end cap
- 10 steel wire circlip
- 11 bushing
- 12 nut
- 13 threaded rod
- 14 flat washer
- 15 plane volume spring
- 16 tensioner body
- 17 inner hexagon cylindrical head scre M6X16
- 18 semi-round head screw
- 19 sealing ring
- 20 washer
- 21 paper pad
- 22 rubber cap
- 23 tensioner key

 24 tensioner component

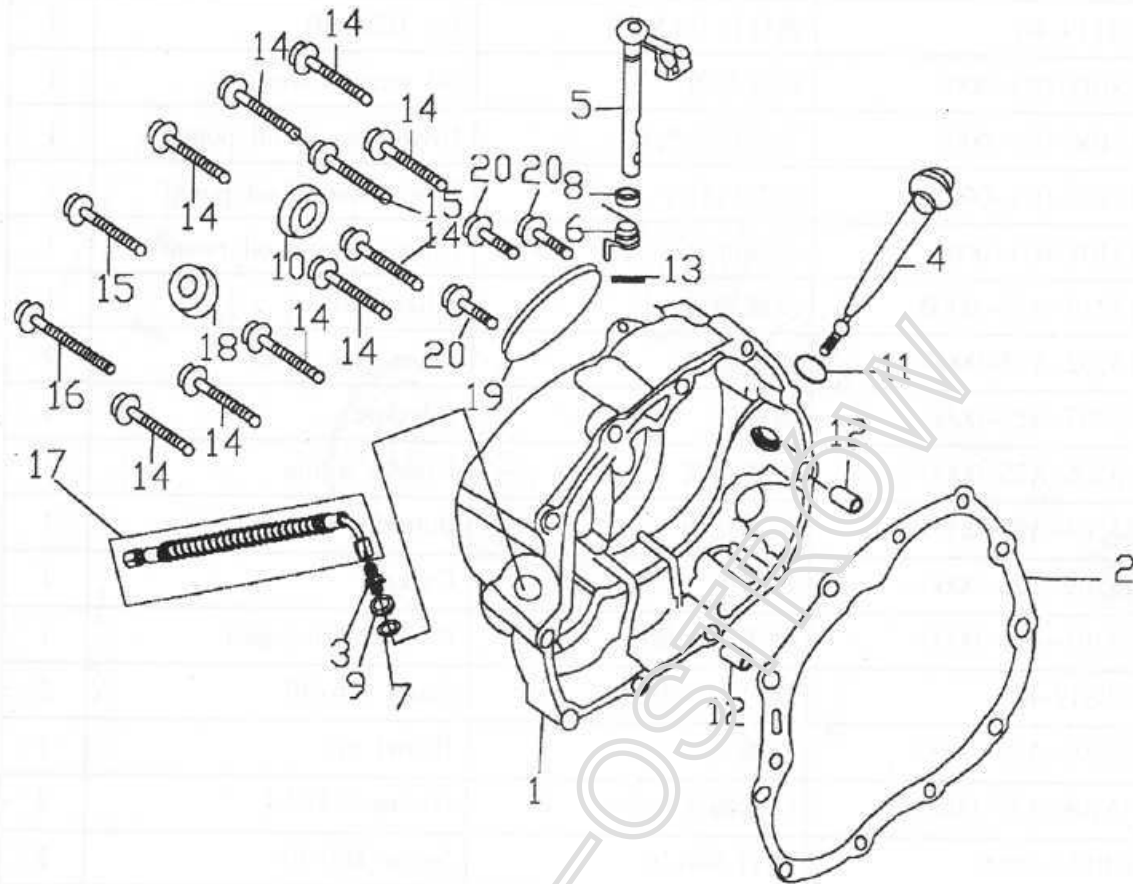


E-4	1 right crank case cover	87.00
	2 right crank case cover gasket	8.00
	3 oil pipe joint bolt	4.00
	4 engine oil stick	8.00
	5 clutch operating rod	21.00
	6 reset spring	6.00
	7 O-ring	4.00
	8 oil seal 12X22X25	8.00
	9 washer	4.00
	10 oil seal 16X28X7	8.00
	11 O-ring	4.00
	12 locating pin 92401-08014	4.00
	13 cylindrical pin 3X12	4.00
	14 pan head bolt 9210-06040B	4.00
	15 pan head bolt 02140-06025B	4.00
	16 pan head bolt 92140-06050B	4.00
	17 oil pipe assy	4.00
	18 visual oil seal 17X25X7	8.00
	19 ornamental cover of right cover	12.00

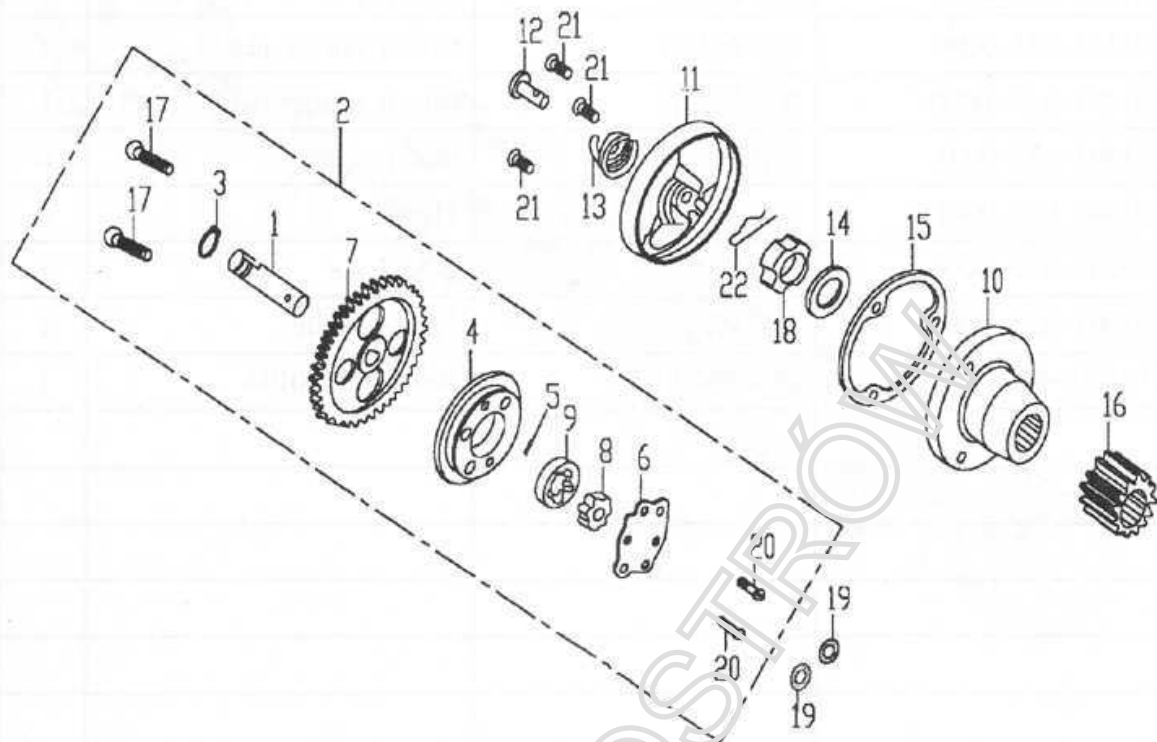 

E-5

- 1 drive shaft
- 2 oil pump part
- 3 circlip 5
- 4 oil pump body
- 5 pin B2.5X10
- 6 oil pump cover
- 7 drive gear of oil pump
- 8 inner rotor of oil pump
- 9 outer rotor of oil pump
- 10 filter case
- 11 filter case cover
- 12 oil pipe
- 13 pagoda spring
- 14 butterfly washer
- 15 gasket
- 16 primary drive gear
- 17 screw M6X30
- 18 round nut
- 19 O-ring 9.4X2.4
- 20 screw M4X10
- 21 screw M5X12

 
22 limit clip

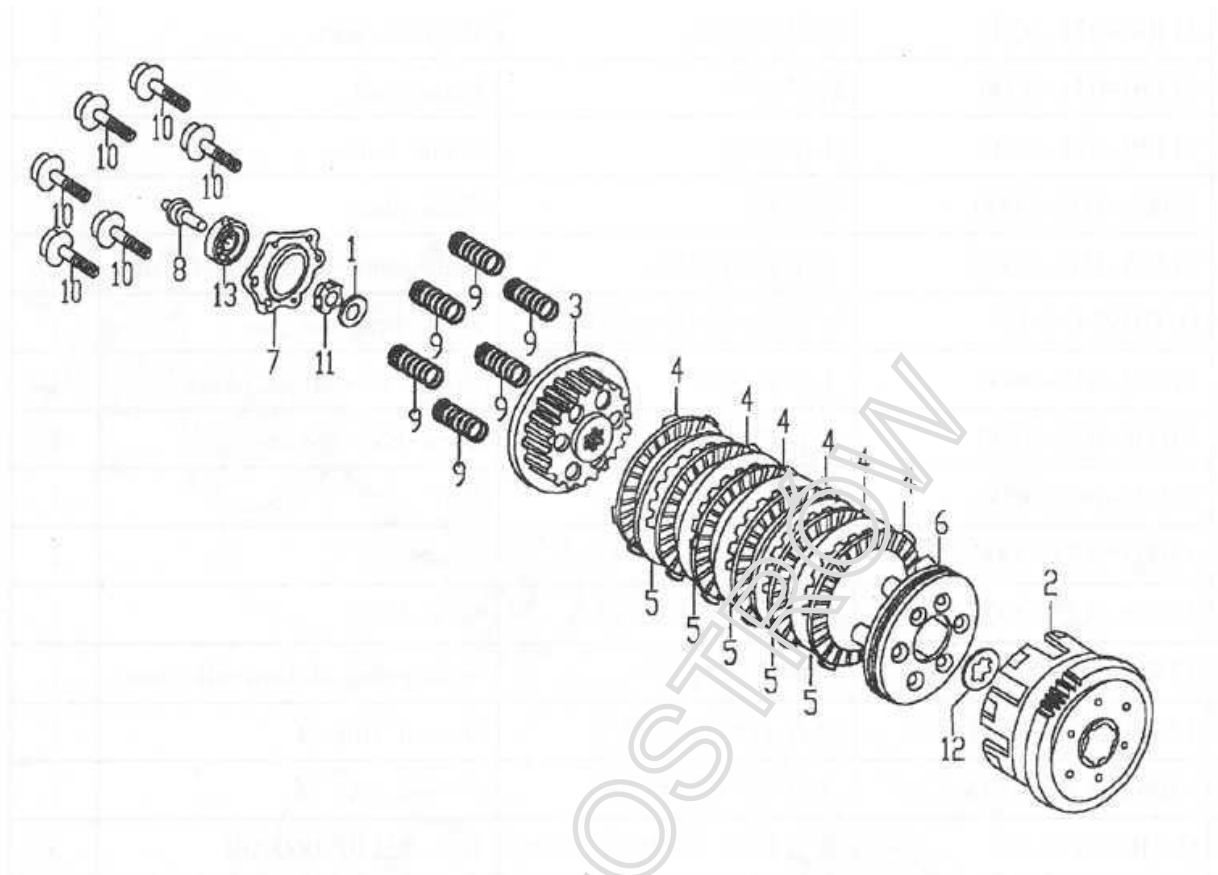

E-6


- 1 butterfly washer
- 2 outer case assy of clutch
- 3 center cover of clutch
- 4 friction plate of clutch
- 5 clutch plate
- 6 clutch pressure plate
- 7 lutch raising plate
- 8 clutch raising rod
- 9 clutch spring
- 10 flange
- 11 round nut
- 12 spline clip
- 13 bearing 7000103
- 14 complete clutch

 285.00

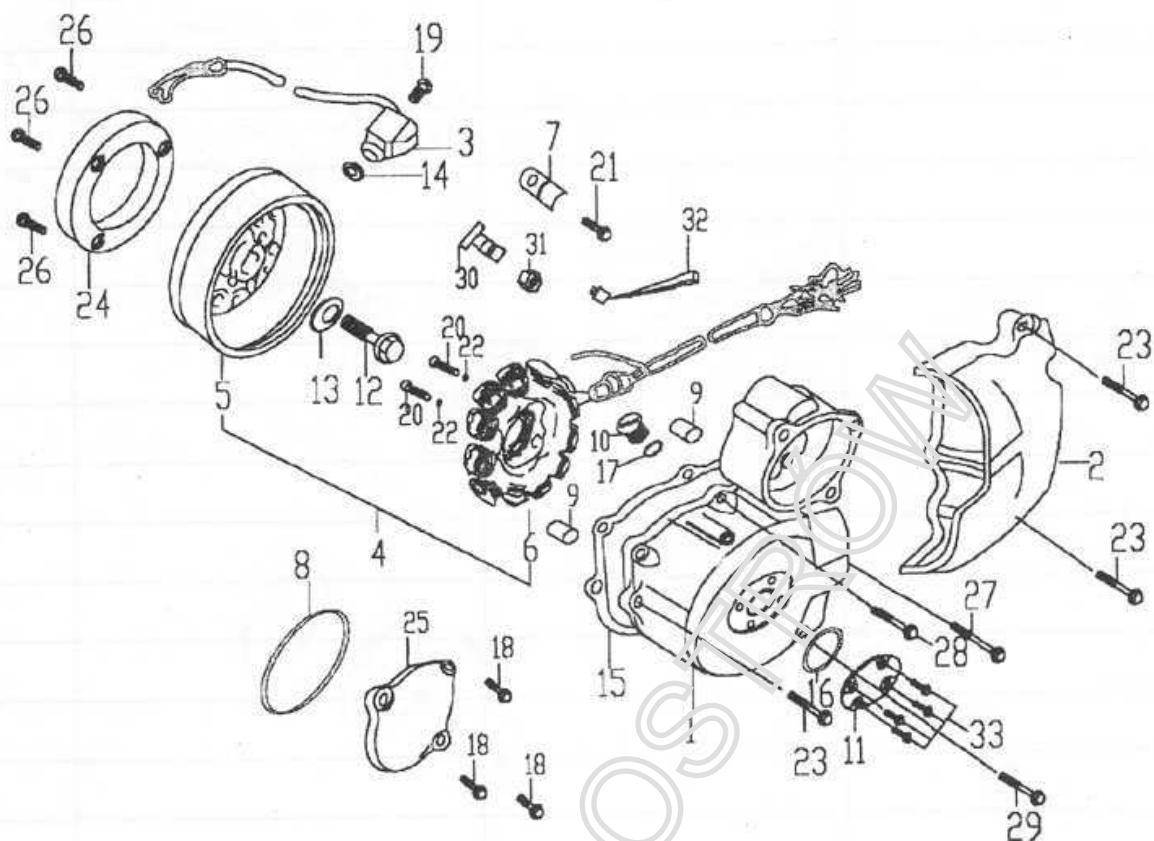


E-7	1 front left cover	87.00
	2 rear left cover	40.56
	3 sensor unit	16.00
	4 magneto part	227.00
	5 rotor unit	114.96
	6 stator unit	128.00
	7 wire plate	4.00
	8 sealing-ring of upper left cover	4.00
	9 positioning set pin	4.00
	10 upper view-hole cover	4.00
	11 view-hole cover	4.00
	12 bolt	4.00
	13 washer	4.00
	14 O-sealring	4.00
	15 sealing-ring of front left cover	6.00
	16 O-seal ring of	4.00
	17 O-seal ring of	4.00
	18 Bolt 92140-06020B	4.00
	19 screw M5X16	4.00

20 Screw M5X30	4.00
21 Screw M5X12	4.00
22 Washer 5	4.00
23 Bolt 92140-06025B	4.00
24 unilateral transducer	24.00
25 upper left cover	32.00
26 screw M6X12	4.00
27 bolt 92140-06045B	4.00
28 bolt 92140-06025B	4.00
29 Bolt 92140-06045B	4.00
30 switch board unit	4.00
21 Nut M10X1	4.00
32 shift switch clamp unit	4.00
33 Bolt 92140-06016B	4.00

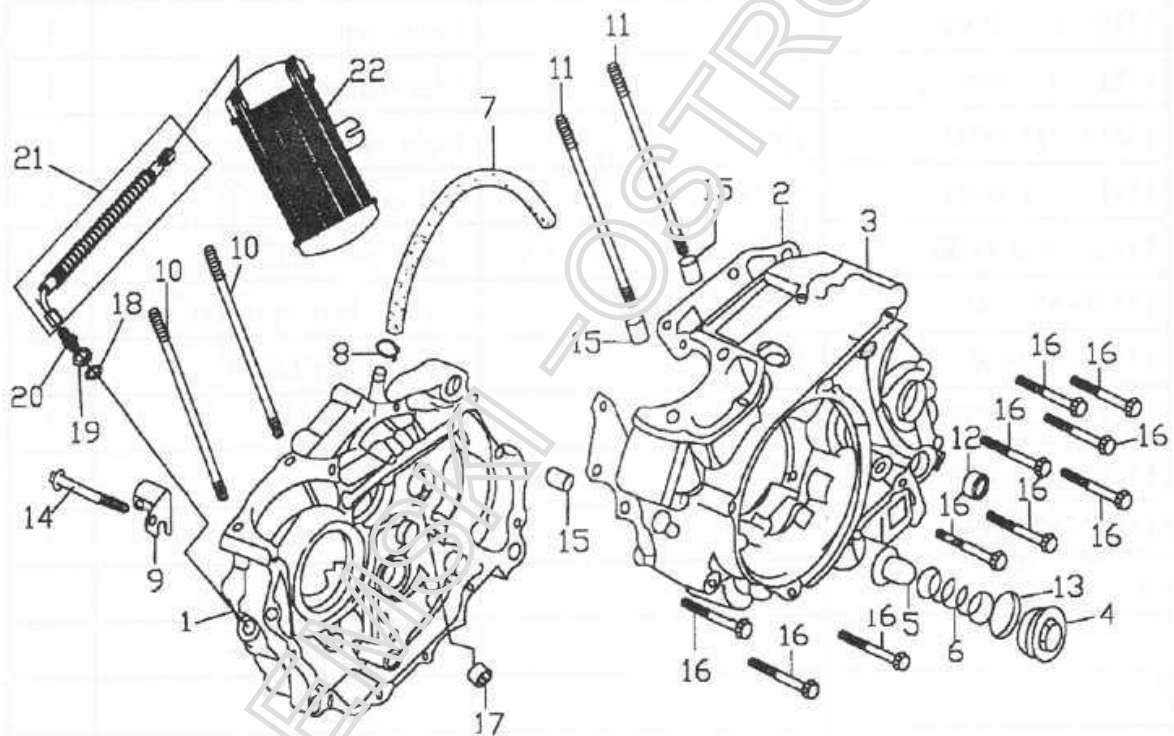 

E-8	1 right crankcase	
	2 seal pad of crankcase	
	3 left crankcase	
	4 valve cover	12.00
	5 Filter Net Fastening Plate	8.00
	6 fixing spring	6.00
	7 breather tube	
	8 pipe clamp	
	9 locating board of clutch cable	

 
- 10 cylinder stud bolt (A)
- 11 cylinder stud bolt (B)
- 12 oil sealing
- 13 O-seal ring
- 14 bolt M6X60
- 15 positioning set pin
- 16 bolt
- 17 needle bearing
- 18 O-Seal ring
- 19 washer
- 20 oil pipe bolt
- 21 oil pile unit
- 22 radiator parts

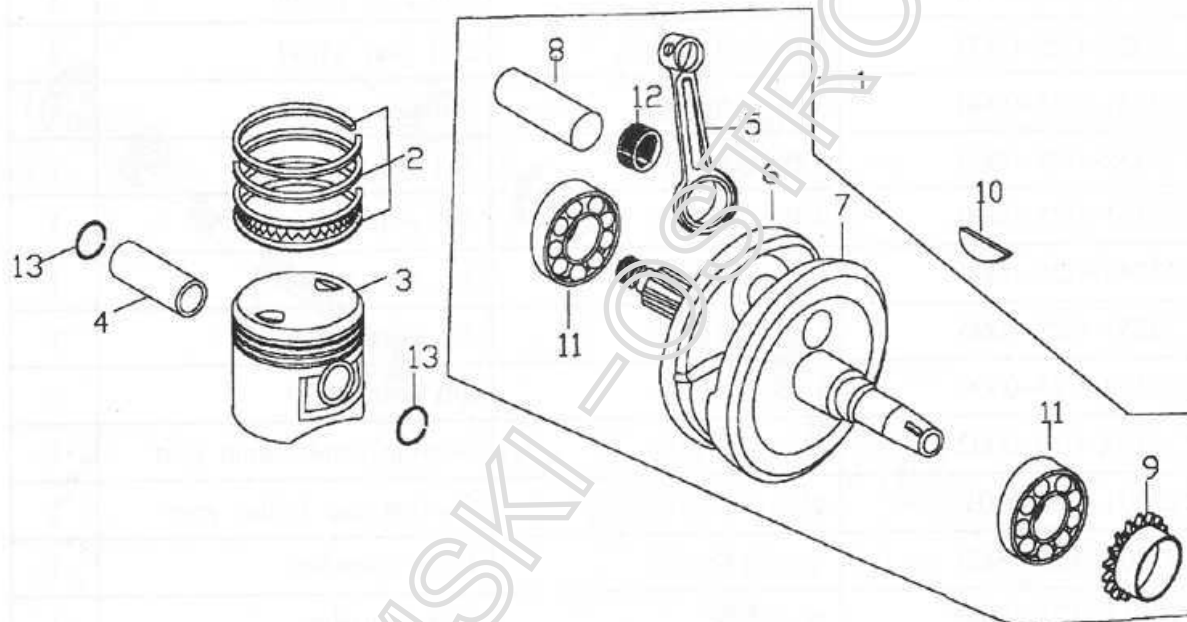

E-9	1 div. components/crank connecting rod	265.00
	2 piston ring A	37.80
	Piston ring B	37.80
	oil control ring	30.24
	3 piston	17.04
	4 piston pin	8.00
	5 connectint rod	
	6 right crank	
	7 left crankcase	
	8 crank pin unit	
	9 timing drive sprocket wheel	
	10 semicircular key	
	11 ball bearing	

12 needle bearing
13 piston pin stopper

 
12.00
1.00

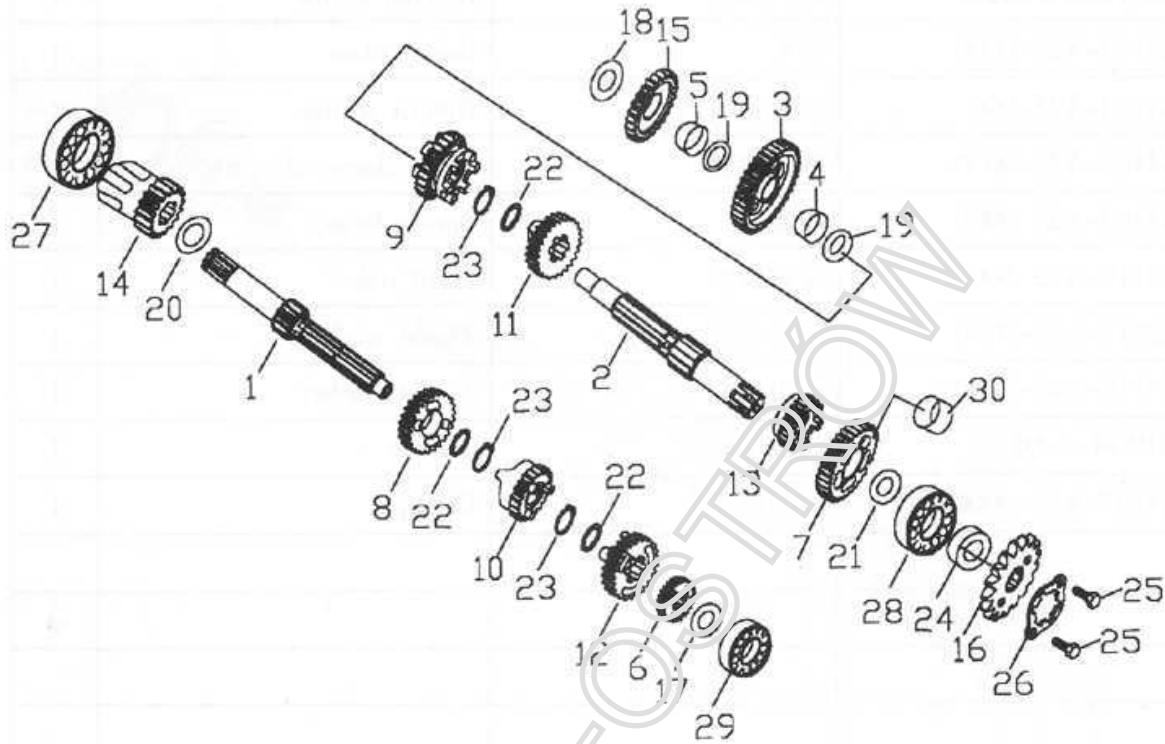

E-10


1 main axle
2 secondary axle
3 1st gear pinion
4 collar
5 collar
6 2nd gear pinion
7 2nd gear wheel
8 3rd gear pinion
9 3rd gear pinion
10 4th gear pinion
11 4th gear wheel
12 5th gear pinion
13 5th gear wheel
14 starting combination gear
15 starting gap bridge gear
16 drive sprocket
17 thrust washer
18 thrust washer
19 limit washer

 - 20 thrust washer
- 21 washer
- 22 spline washer
- 23 circlip
- 24 oil seal 20X34X7
- 25 bolt M6X10
- 26 locating plate of drive chain
- 27 bearing 204
- 28 bearing 204
- 29 bearing 204
- 30 collar

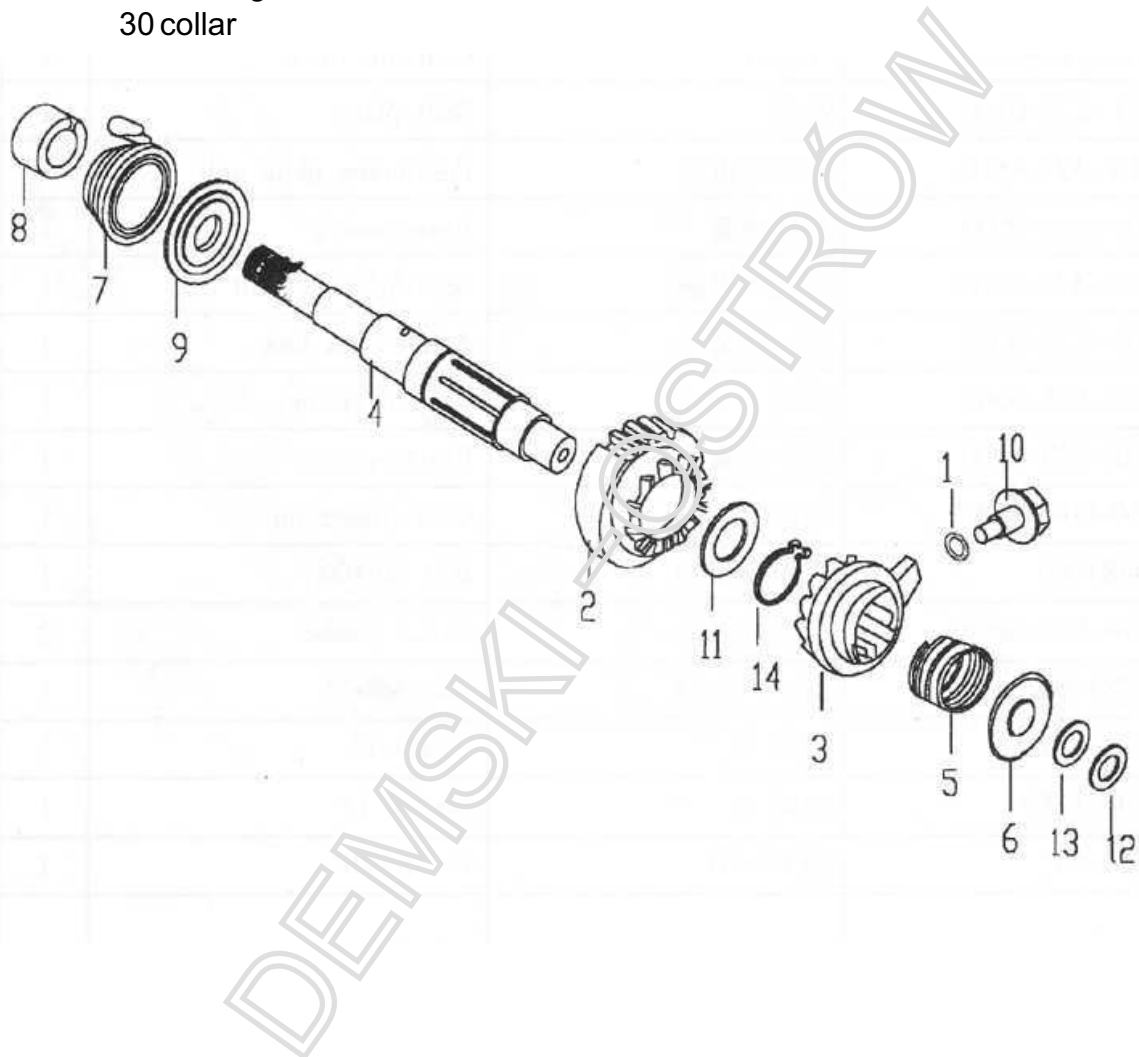

- E-11
- 1 O-ring 1.8X2.65
 - 2 starting gear
 - 3 starting ratchet
 - 4 starting shaft
 - 5 ratchet spring
 - 6 guide plate
 - 7 return spring
 - 8 inner sleeve of spring
 - 9 spring base
 - 10 limit nut

 - 11 thrust washer
- 12 thrust washer
- 13 circlip
- 14 circlip

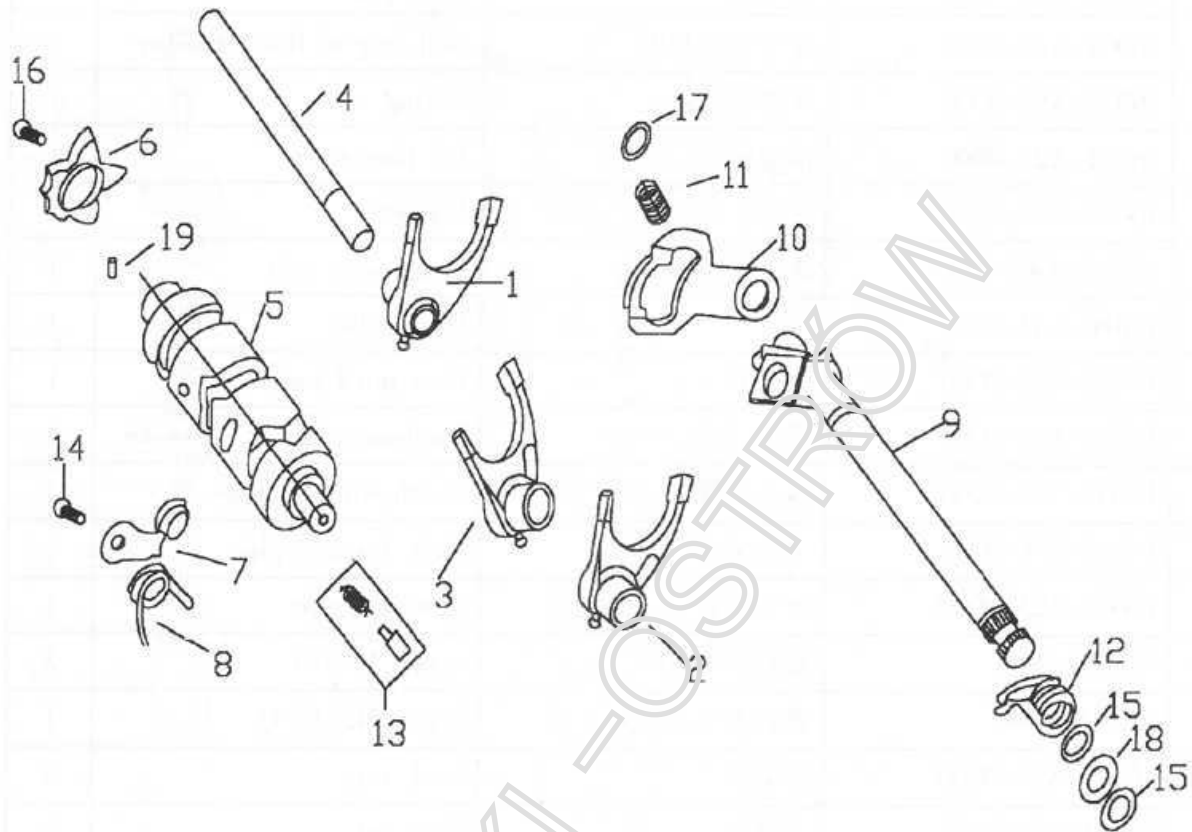

E-12

- 1 shift fork 1
- 2 shift fork III
- 3 shift fork II
- 4 shift fork axle
- 5 gearshift drum
- 6 shift plate
- 7 positioning plate unit
- 8 reset spring
- 9 gearshift axle unit
- 10 active shift fork
- 11 pressed spring
- 12 reset spring
- 13 gear trigger unit
- 14 bolt M6X20
- 15 thrust washer
- 16 bolt M6X25
- 17 circlip 12

This diagram shows an exploded view of a mechanical assembly. The main components are labeled with numbers 1 through 38. The assembly includes a central housing (1) with various internal parts like a piston (2), connecting rod (3), and crankshaft (4). There are also several smaller components like bolts (5, 6, 7, 8, 9, 10, 11, 12, 13, 14, 15, 16, 17, 18, 19, 20, 21, 22, 23, 24, 25, 26, 27, 28, 29, 30, 31, 32, 33, 34, 35, 36, 37, 38), a spring (39), and a lever (40). The diagram is a technical drawing showing the relative positions and assembly sequence of the parts.

E-13	1 carburetor unit	282.00
	2 float needle unit	n/a
	3 float needle nangk spring	n/a
	4 float unit	n/a
	5 float pin	n/a
	6 seal ring of float chamber	n/a
	7 O-ring	n/a
	8 oil plug screw	n/a
	9 plunger	n/a
	10 float cover unit	n/a
	11 oil needle	n/a
	12 dust proof bush	n/a
	13 positioning plate of air choke	n/a
	14 overflowing oil pipe	n/a
	15 main foaming pipe	n/a
	16 ventilate pipe	n/a
	17 screw M4X16	n/a
	18 screw M5X12-Q	n/a


19 lock ring	n/a
20 main jet	n/a
21 idle foaming pipe	n/a
22 nozzle	n/a
23 idle adjusting screw	n/a
24 idle adjusting spring	n/a
25 washer	n/a
26 O-ring	n/a
27 lever of air choke	n/a
28 end cover	n/a
29 washer 5	n/a
30 plunger adjusting screw	n/a
31 plunger adjusting spring	n/a
32 oil needle adjusting circlip	n/a
33 oil needle limiting plate	n/a
34 reset spring of plunger cover	n/a
35 seal gasket of plunger cover	n/a
36 plunge cover	n/a
37 adjusting screw of valve gap	n/a
38 O-ring	n/a

DEMSKI-OSTRÓW


E-14	1 starting motor components 2 siamese gear unit 3 axle gear 4 disk-shaped gear unit 5 thrust washer 6 driving axle 7 needle bearing HK101410 8 O-ring	217.92
------	--	--------

PARTS LIST
JS200Y DIRT BIKE


Fig.	Ref.	Description	Price
------	------	-------------	-------

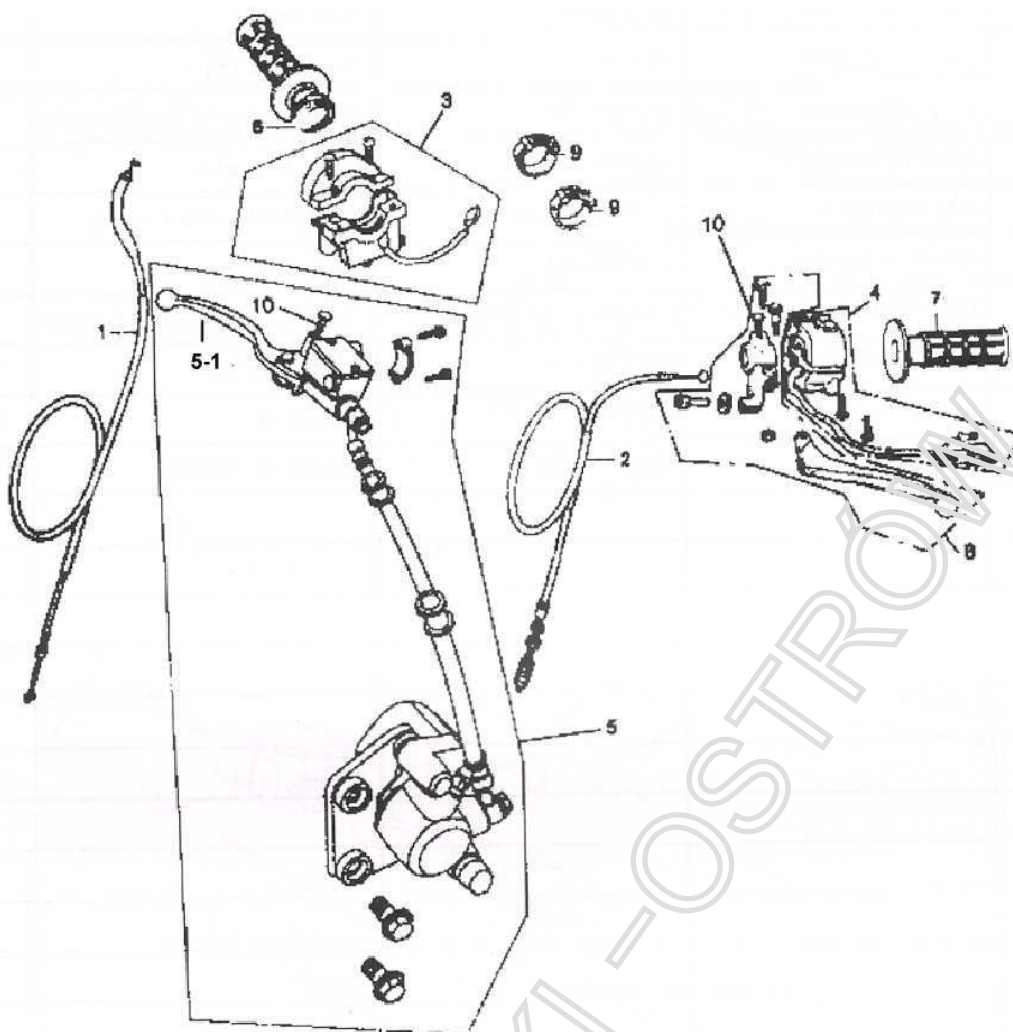 


F-1	1	Throttle cable	24.00
F-1	2	Clutch cable	22.00
F-1	3	Right handle bar switch	50.52
F-1	4	Stop switch	24.00
F-1	5	Front brake assy	363.84
F-1	5-1	Brake lever	24.00
F-1	5-2	Front brake master cylinder	172.00
F-1	5-3	Front brake caliper	168.00
F-1	5-4	Front brake pad - set	32.00
F-1	6	Right grip assy	16.00
F-1	7	Left grip	9.00
F-1	8	Left handlebar	23.76
F-1	9	Handlebar tube hoop	2.00
F-1	10	Screw hole top Cap	1.00

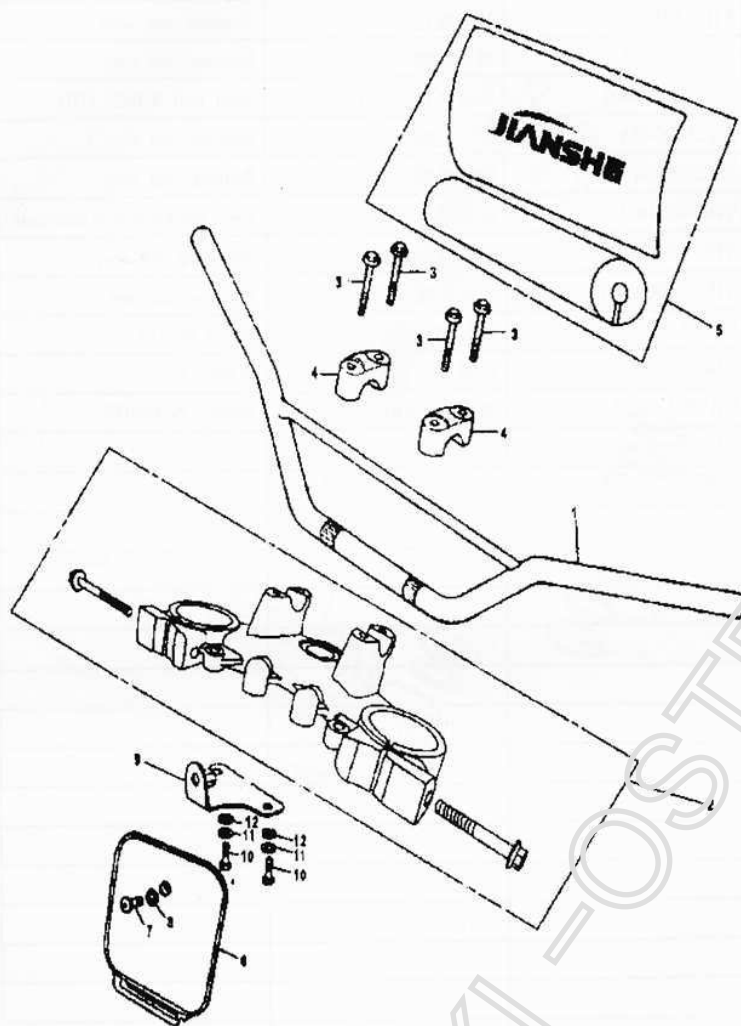 


F-2	1	Handlebar tube assy	58.56
F-2	2	upper connecting plate	74.04
F-2	3	bolt m8x35	1.00
F-2	4	handlebar clip	7.20
F-2	5	protecting hood of handlebar tube	34.80
F-2	6	front face plate	9.23
F-2	7	big cylinder head screw	1.00
F-2	8	rubber washer	1.00
F-2	9	upper bracket assy of frnt face plate	6.24
F-2	10	screw m16x6	1.00
F-2	11	washer 6	1.00
F-2	12	washer 6-140HV	1.00

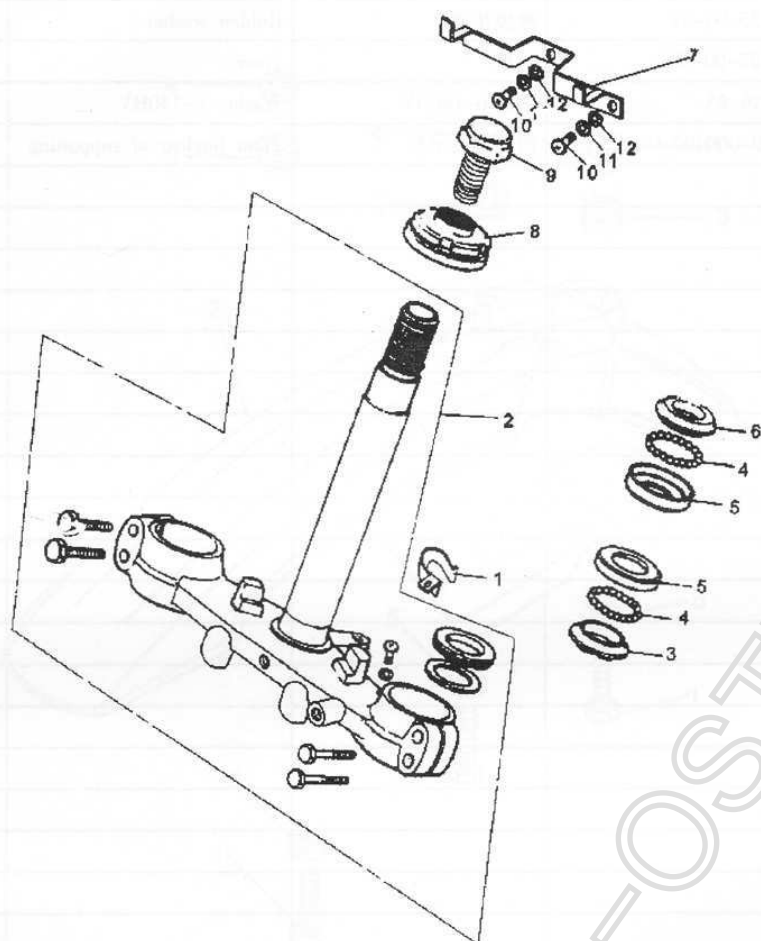 

F-3	1	brake pipe bracket	
F-3	2	steering seat assy	124.00
F-3	3	bearing seat ring	12.00
F-3	4	steel ball 4.7625 g10	5.52
F-3	5	bearing seat ring 1	8.00
F-3	6	bearing seat ring	8.00
F-3	7	lower bracket or front face plate	4.20
F-3	8	adjusting nut assy	11.52
F-3	9	steering axle nut	7.20
F-3	10	screw m6x16	1.00
F-3	11	washer 6	1.00
F-3	12	washer 6-140HV	1.00

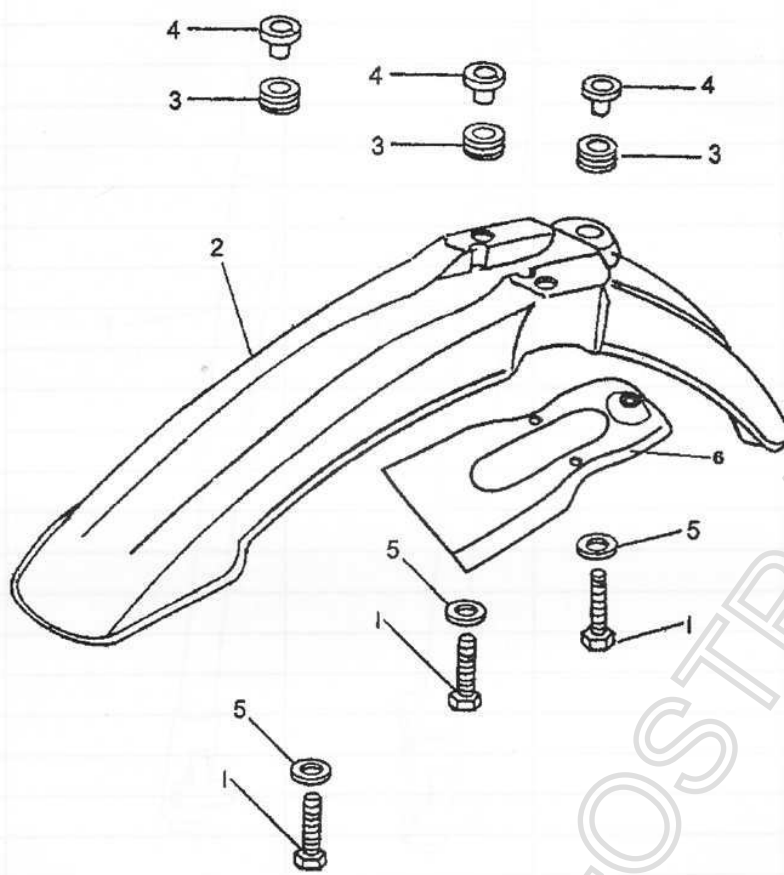 

F-4	1	bolt m6x30	1.00
F-4	2	front fender	51.24
F-4	3	rubber washer	3.84
F-4	4	liner	4.92
F-4	5	washer 6-140HV	2.00
F-4	6	front fender of supporting	16.00

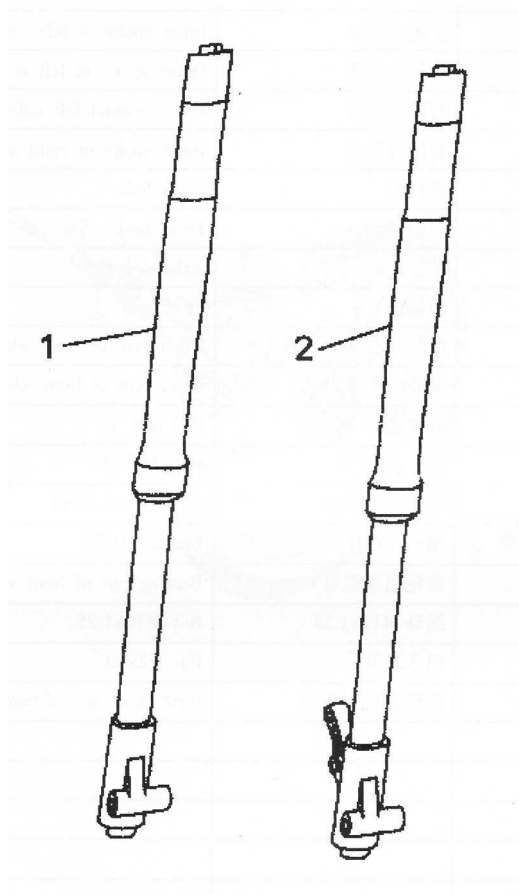 


F-5	1	right front shock	321.00
F-5	2	left front shock absorber	321.00




F-6	1	Supporting Ring	2.28
F-6	2	Front Wheel Shaft	12.00
F-6	3	Left Sleeve of Front Wheel	3.23
F-6	4	Inner Spoke of Left Side	n/a
F-6	5	Outer Spoke of Left Side	n/a
F-6	6	Outer Spoke Right Side	n/a
F-6	7	Innter Spoke of Right Side	n/a
F-6	8	Front Hub	n/a
F-6	9	Front Brake Disk	97.68
F-6	10	Axle Sleeve	5.76
F-6	11	Front Rim	222.00
F-6	12	Outer Tyre of Front Wheel	82.00
F-6	13	Inner Tyre of Front Wheel	26.60
F-6	14	Pad Belt	3.00
F-6	15	Bolt M8X25	1.00
F-6	16	Oil Seal 37X23X7	9.00
F-6	17	Bearing 16301	6.00
F-6	18	Bearing Nut of Front Wheet	6.00

F-6	19	Nut M12X1.25	1.32
F-6	20	Pin 3.2X30	4.00
F-6	21	Right Sleeve Assy of Front Wheel	6.00
F-6	22	Front Wheel - COMPLETE	322.00
F-6	23	Front Brake Pad	32.00

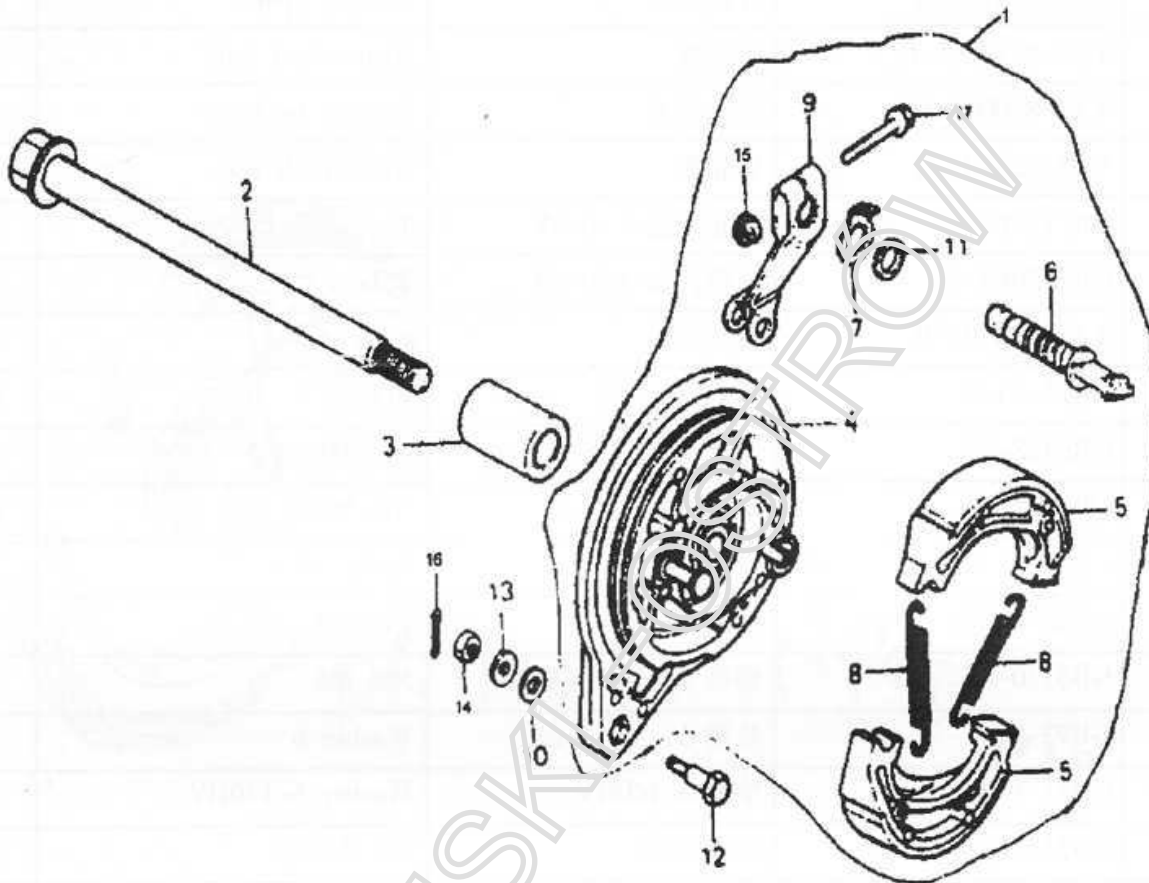 


F-7	1	Rear Brake	81.24
F-7	2	Rear Wheel Shaft	8.88
F-7	3	Right Sleeve of Rear Wheel	4.08
F-7	4	Rear Brake Cover	36.00
F-7	5	Rear Brake Shoe Assy	32.88
F-7	6	Rear Brake Cam	4.00
F-7	7	Indicating Plate	4.00
F-7	8	Tension Spring	4.00
F-7	9	Rear Brake Arm	6.00
F-7	10	Washer 8-140HV	2.00
F-7	11	Sealed Part	4.00
F-7	12	Brake Bolt	5.00
F-7	13	Washer 8-140HV	1.00

F-7	14	Nut M8	1.00
F-7	15	Nut M6	1.00
F-7	16	Pin 2X16	1.00
F-7	17	Bolt M6X35	1.00

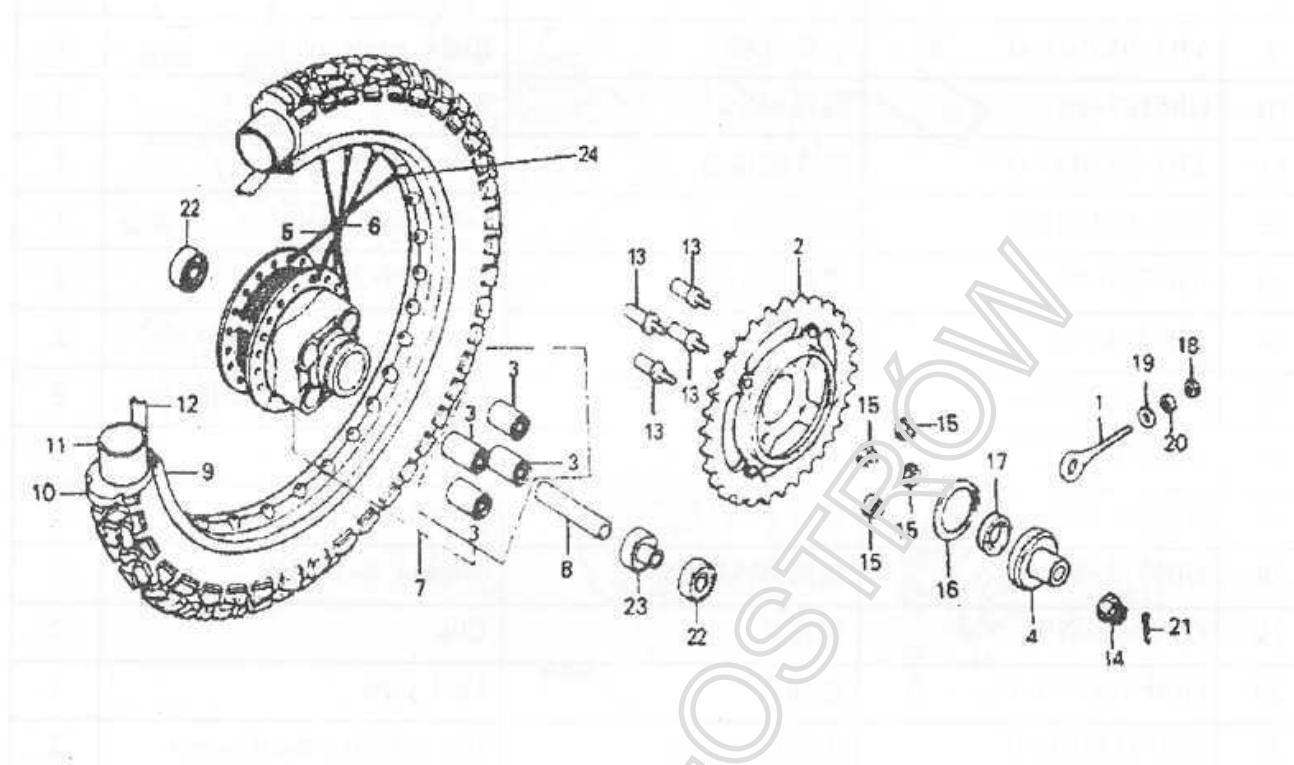 


F-8	1	Chain Adjuster	15.60
F-8	2	Sprocket	80.88
F-8	3	Shock Block	4.80
F-8	4	Left Bushing of Rear Wheel	2.76
F-8	5	Inside Spoke	n/a
F-8	6	Outside Spoke	n/a
F-8	7	Rear Wheel Hub	n/a
F-8	8	Bearing Bushing	4.00
F-8	9	Rear Wheel Rim - COMPLETE	175.08
F-8	10	Tire 4.10-18	88.00
F-8	11	Tube	26.00
F-8	12	Rear Spacer	1.68
F-8	13	Bolt - pressed fit - each	2.75
F-8	14	Nut M15X1.5	2.04
F-8	15	Nut M8	1.00
F-8	16	Circlip 58	1.00
F-8	17	Oil Seal	6.00
F-8	18	Nut M6	1.00
F-8	19	Washer 6	1.00
F-8	20	Washer 6-140HV	1.00
F-8	21	Pin 3.2X30	1.00

F-8	22	Bearing 16302	1.00
F-8	23	Spacer	11.52
F-8	24	Spoke Nut	n/a

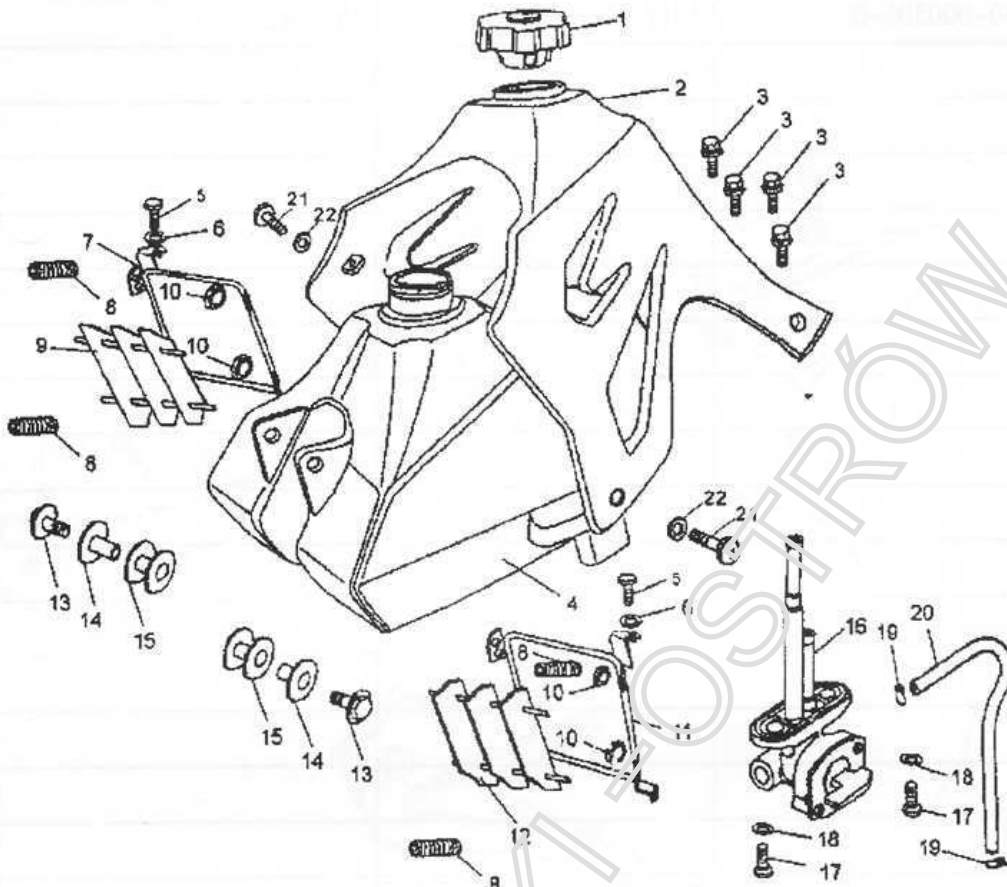 


F-9	1	Fuel Tank Cover Assy	32.28
F-9	2	Decorative Case of Fuel Tank	110.64
F-9	3	Bolt M6X16	1.00
F-9	4	Fuel Tank	251.04
F-9	5	Screw M6X20	1.00
F-9	6	washer 6-140HV	1.00
F-9	7	Right Bracket Assy	4.00
F-9	8	Spring	4.00
F-9	9	Right Guide Plate	8.64
F-9	10	Nut M6	1.00
F-9	11	Left Bracket Assy	4.00
F-9	12	Left Guide Plate	8.64
F-9	13	Bolt M6X25	1.00
F-9	14	Gasket	4.00
F-9	15	Fuel Tank Installing Rubber Ring	4.00
F-9	16	Fuel Cock	22.92
F-9	17	Screw M6X12	1.00


F-9	18	washer 6-140HV	1.00
F-9	19	Clip	1.00
F-9	20	Fuel Pipe	4.00
F-9	21	big cylinder head screw	6.48
F-9	22	rubber washer	2.88

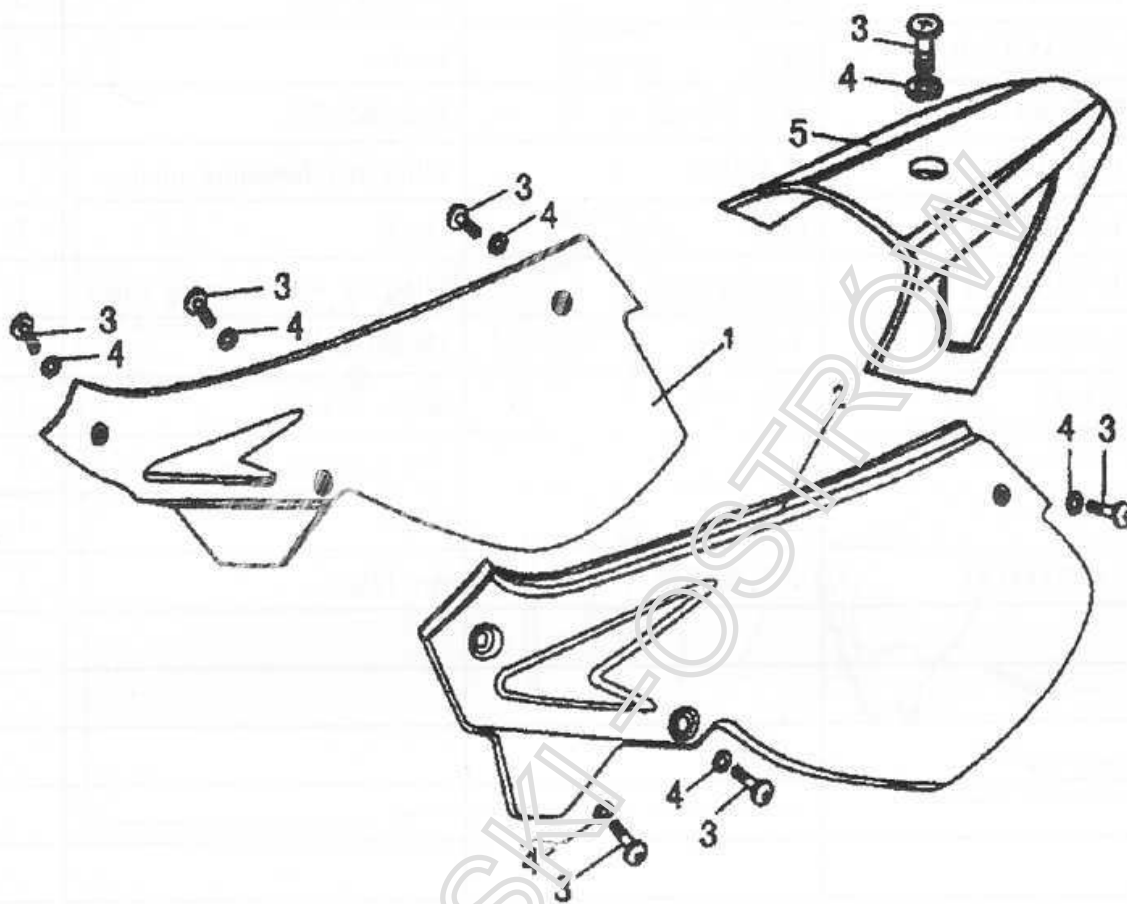 


F-10	1	Right Side Cover	43.92
F-10	2	Left Side Cover	43.92
F-10	3	Fruss-Head Screw	2.00
F-10	4	rubber washer	2.88
F-10	5	Rear Case	34.50

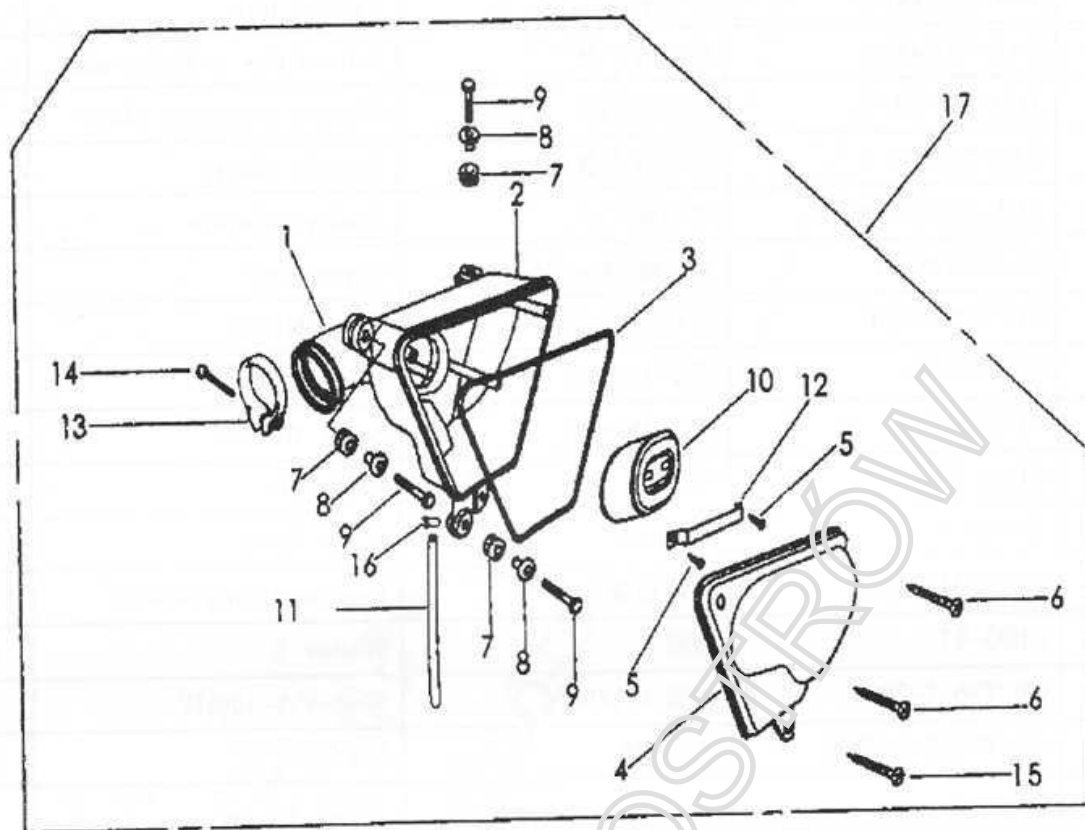 

F-11	1	Connecting Pipe	n/a
F-11	2	Case Assy	n/a
F-11	3	O-Ring	n/a
F-11	4	Case Cover Assy	n/a
F-11	5	Self-tapping screw M3.8X12	n/a
F-11	6	Self-tapping screw M4.8X25	n/a
F-11	7	Rubber Core	n/a
F-11	8	Gasket	n/a
F-11	9	Bolt M6X25	n/a
F-11	10	Filter Net Fastening Plate	n/a
F-11	11	Hose	n/a
F-11	12	Filtering Net Fastening Plate	n/a
F-11	13	Clamp Assy	n/a
F-11	14	Screw M4X30	n/a
F-11	15	Self-tapping Screw	n/a
F-11	16	Clip	n/a
F-11	17	Air Filter	75.60

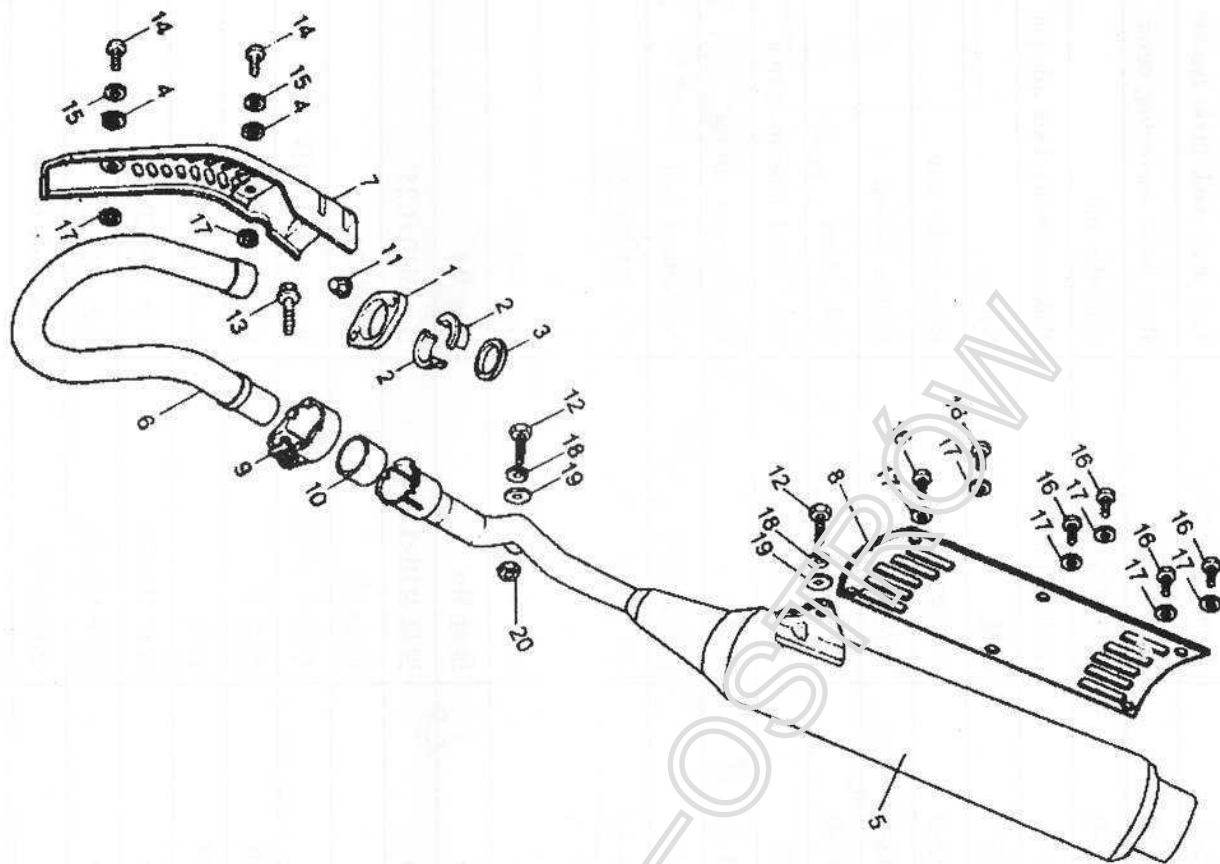 


F-12	1	Silencer Conecting Block	3.00
F-12	2	Silencer Installing Gasket	3.72
F-12	3	Exhaust Pipe Washer	6.00
F-12	4	Washer 6-140HV	1.00
F-12	5	Silencer Assy	278.40
F-12	6	Exhaust Pipe Washer	28.92
F-12	7	Exhaust Pipe protection Plate	14.52
F-12	8	Silencer protectionplate	28.92
F-12	9	silencer clamp	5.76
F-12	10	sealing cartridge	7.20
F-12	11	capped nut	4.00
F-12	12	Bolt DM8X20	1.00
F-12	13	Bolt M8X30	1.00
F-12	14	Screw M6X10	1.00
F-12	15	Washer 6	1.00
F-12	16	Screw M6X6	1.00
F-12	17	Heat-insulating washer	5.00
F-12	18	Washer 8-140HV	1.00
F-12	19	Washer 8-140HV	1.00

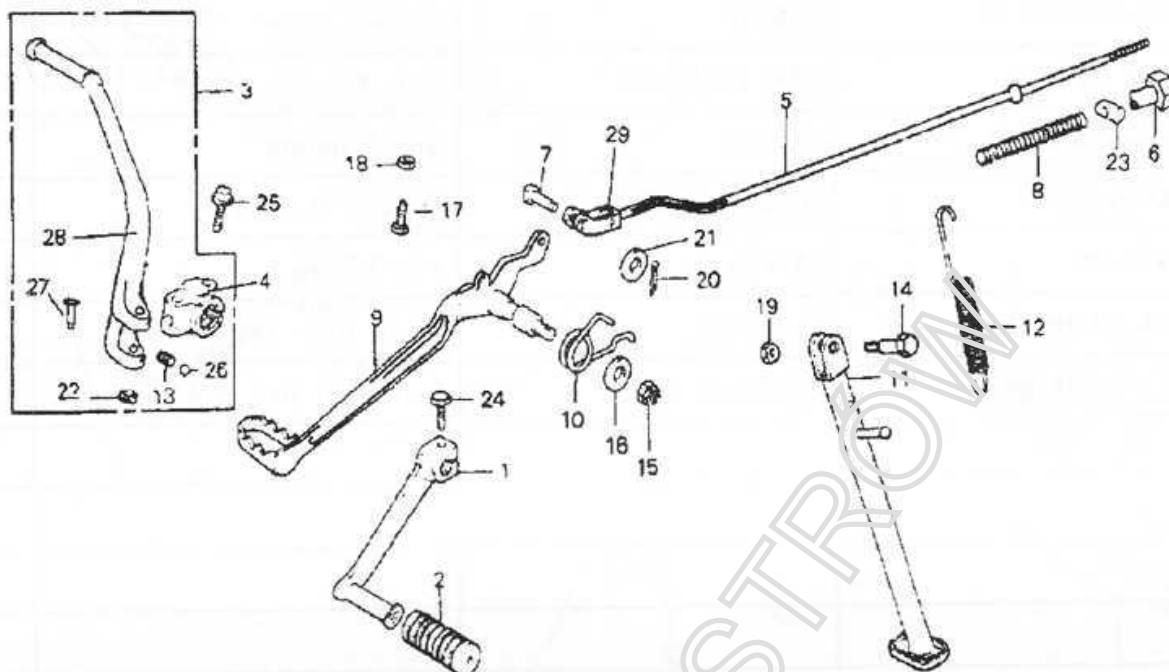 


F13	1	Change Speed Pedal	18.20
F13	2	Change Speed Lever Cover	n/a
F13	3	Kick Start Lever Assy	36.60
F13	4	Kick Start Crank Throw Bracket	see 13-3 above
F13	5	Rear Brake Connecting Cover	6.96
F13	6	Butterfly Nut	1.20
F13	7	Brake Connecting Lever Axle Pin	2.00
F13	8	Spring	1.44
F13	9	Rear Brake Arm	35.76
F13	10	Return Spring	5.52
F13	11	Side Stand	52.68
F13	12	Side Stand Tension Spring	1.68
F13	13	Compression Spring	see 13-3 above
F13	14	Side Stand Bolt	1.44
F13	15	Nut M10X1.25	1.00
F13	16	Washer	1.00
F13	17	Bolt M6X25	1.00
F13	18	Nut M6	1.00

F13	19	Nut M1-X1.25	1.00
F13	20	Pin 2X16	1.00
F13	21	Washer 6-140HV	1.00
F13	22	Circlip 8	see 13-3 above
F13	23	Bushing	1.00
F13	24	Bolt M6X20	1.00
F13	25	Bolt M8X40	1.00
F13	26	Steel Ball 6.000	see 13-3 above
F13	27	Pin	see 13-3 above
F13	28	Kick Start Lever Assy	see 13-3 above
F13	29	Rear Brake Connecting Fender	7.20

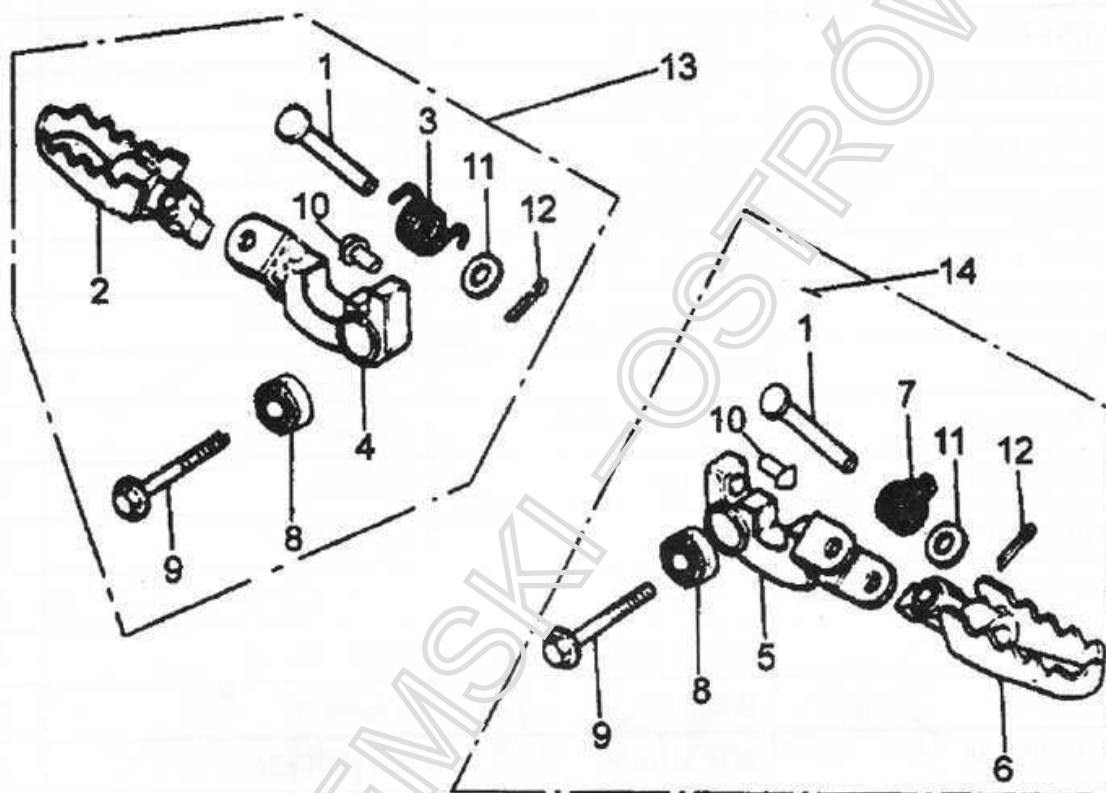 


F-14	1	Axle Pin 8X40	n/a
F-14	2	Right Pedal Assy	n/a
F-14	3	Return Spring of Right Pedal	n/a
F-14	4	Connecting Seat Assy/Right Pedal	n/a
F-14	5	Connecting Seat Assy/Left Pedal	n/a
F-14	6	Left Pedal Assy	n/a
F-14	7	Return spring of Left Pedal	n/a
F-14	8	Shock Cover	n/a
F-14	9	Bolt M8X40	n/a

F-14	10	Shock Gasket	n/a
F-14	11	Washer 8-140HV	n/a
F-14	12	Pin 3.2X14	n/a
F-14	13	Right Front Foot Rest	36.24
F-14	14	Left Front Foot Rest	36.24

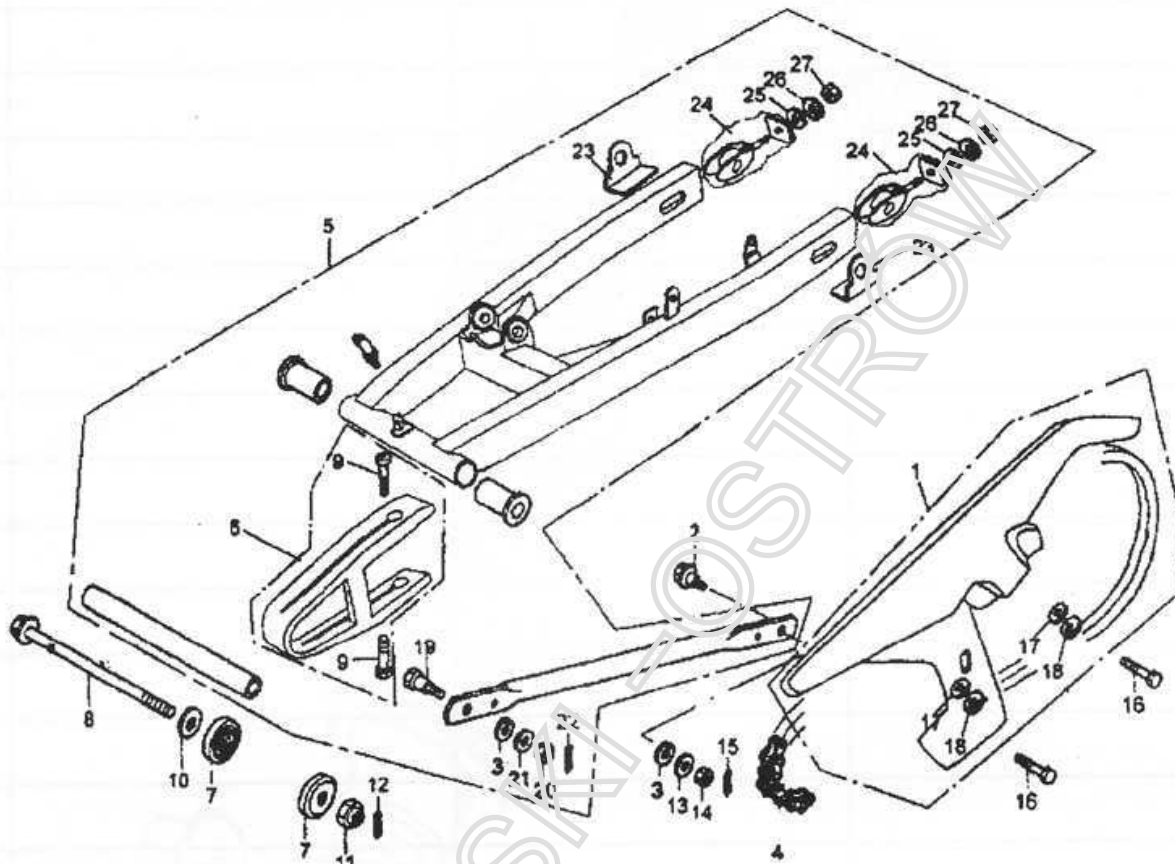 


F-15	1	Chain cover	18.80
F-15	2	Brake Bolt	1.00
F-15	3	Washer	1.00
F-15	4	Chain 08MB-130	46.00
F-15	5	Rear Arm	420.00
F-15	6	Seal quar	7.32
F-15	7	Dust Boot Unit	3.72
F-15	8	Rear Arm Axle	9.48
F-15	9	Head Screw	1.00
F-15	10	Washer 12-140HV	1.00
F-15	11	Nut M12X1.25	1.00
F-15	12	Pin 3.2X30	1.00
F-15	13	Washer 8-140HV	1.00
F-15	14	Nut M8	1.00


F-15	15	Pin 2X16	1.00
F-15	16	Screw M6X12	1.00
F-15	17	Screw m6X12	1.00
F-15	18	Washer	1.00
F-15	19	Bolt M10X24	1.00
F-15	20	Nut M8	1.00
F-15	21	Washer 8-140HV	1.00
F-15	22	Pin 2X16	1.00
F-15	23	Cut-off Shoulder	2.88
F-15	24	Chain Adjuster	17.40
F-15	25	Washer 6-140HV	1.00
F-15	26	Washer 6	1.00
F-15	27	Nut M6	1.00

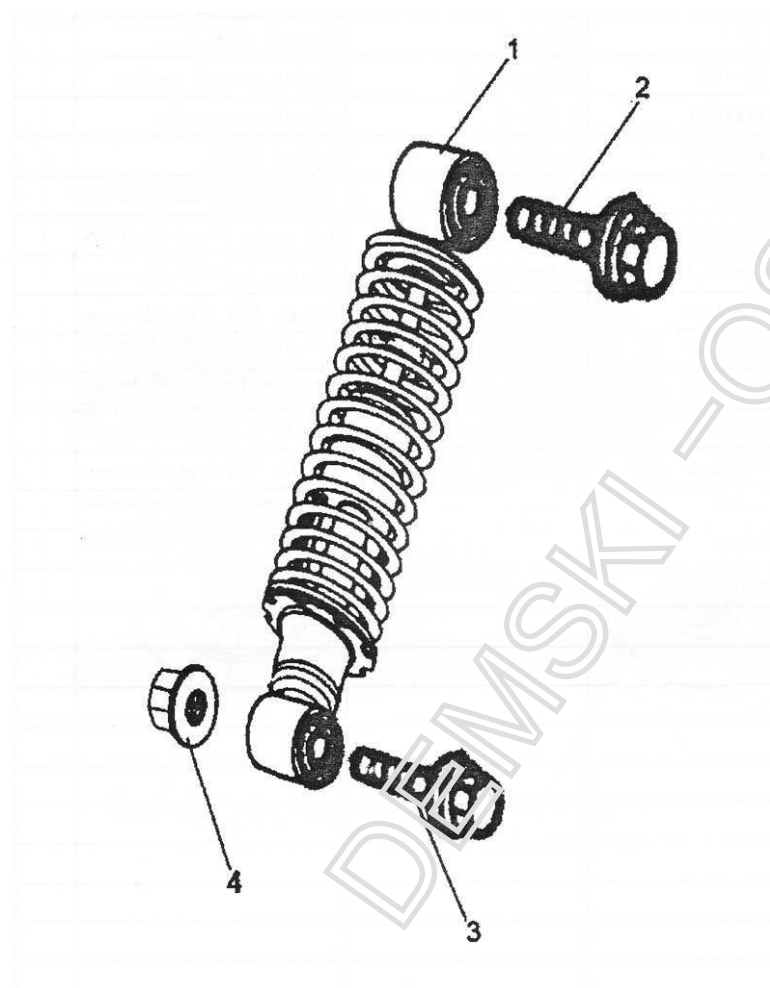 


F-16	1	Rear Shock Absorber	312.36
	2	Bolt M10X1.25X65	0.48
	3	Bolt M10X80	0.60
	4	Nut M10X1.25	0.96

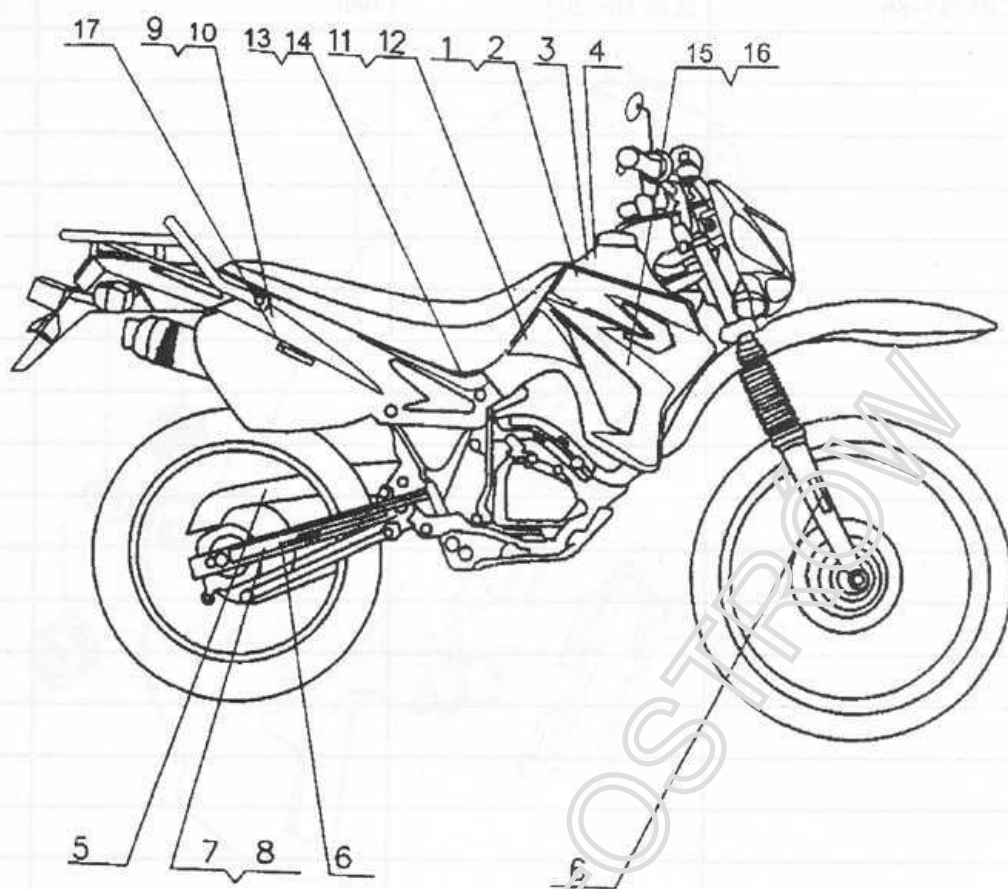 

F-17	1	L graphic 1 of ornamental hood of fuel tank	n/a
F-17	2	R graphic 1 of ornamental hood of fuel tank	n/a
F-17	3	warning mark	n/a
F-17	4	quality approval graphic	n/a
F-17	5	manufacturer graphic	n/a
F-17	6	symbol graphic	n/a
F-17	7	R graphic of rear wheel fork	n/a
F-17	8	L graphic of rear wheel fork	n/a
F-17	9	Graphic 2 of Left Side cover	n/a
F-17	10	Graphic 2 of Right side of cover	n/a
F-17	11	L graphic 2 of ornamental hood of fuel tank	n/a
F-17	12	R graphic 2 of ornamental hood of fuel tank	n/a
F-17	13	Graphic 1 of left side cover	n/a
F-17	14	Graphic 2 of Right side of cover	n/a
F-17	15	L graphic 3 of ornamental hood of fuel tank	n/a
F-17	16	R graphic 3 of ornamental hood of fuel tank	n/a
F-17	17	model graphic	n/a

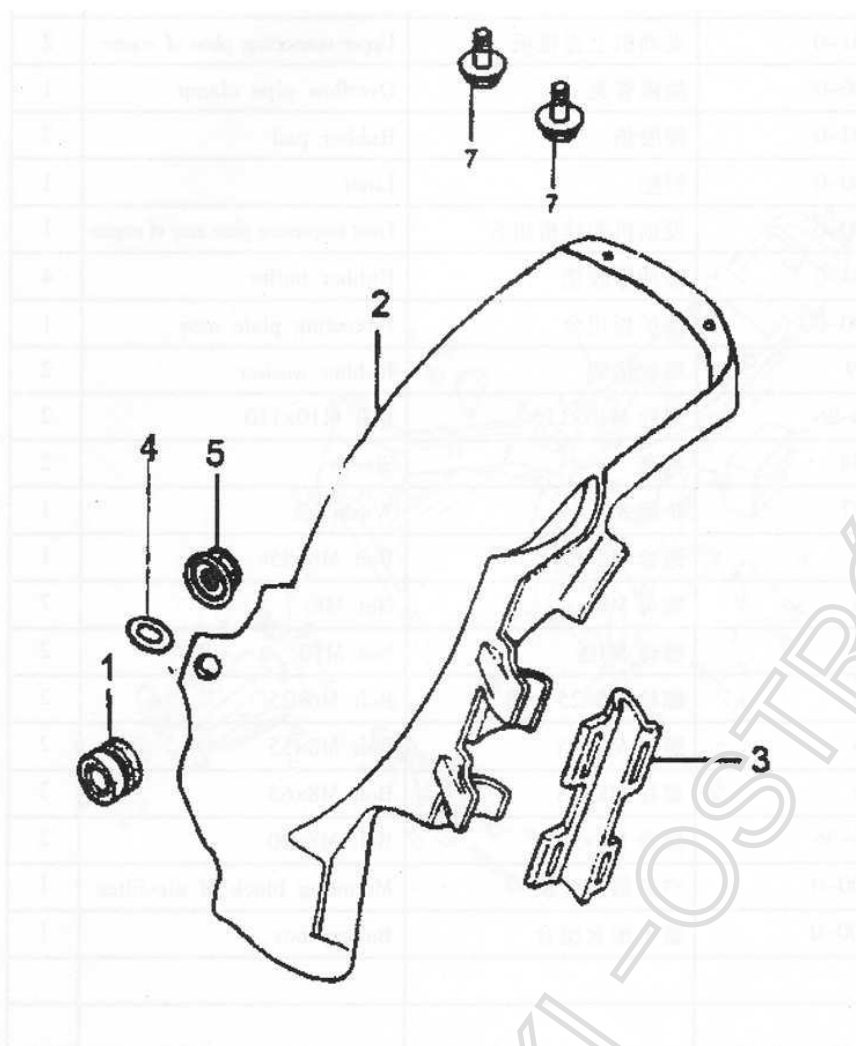 


F-18	1	Rubber Washer	1.00
F-18	2	Rear Fender	24.00
F-18	3	Rear protector washer	6.20
F-18	4	washer	1.00
F-18	5	nut	1.00
F-18	6	bolt	1.00

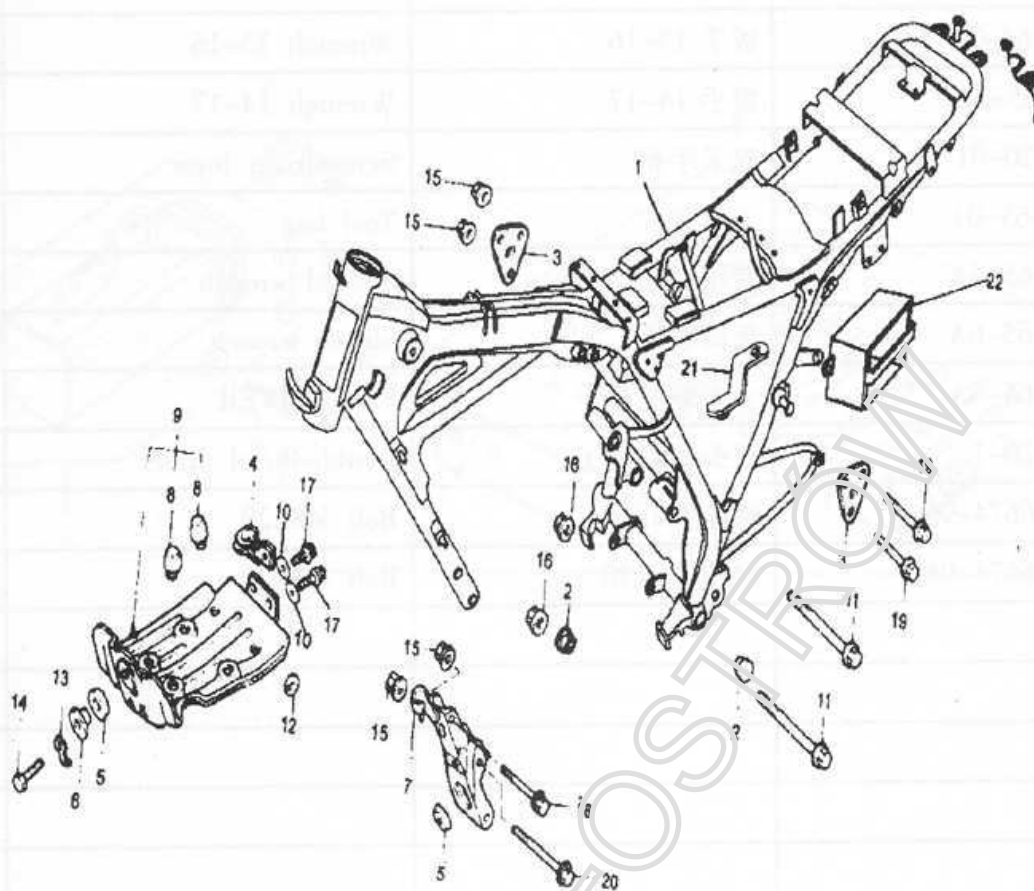 


F-19	1	Frame	n/a
F-19	2	Spout plug of frame	4.00
F-19	3	upper connectint plate of engine	12.00
F-19	4	overflow pipe clamp	8.00
F-19	5	rubber pad	8.00
F-19	6	liner	4.00
F-19	7	front susp plate assy of engine	6.36
F-19	8	rubber bufrer	2.00
F-19	9	protecting plate assy	54.84
F-19	10	rubber washer	2.00
F-19	11	bolt M10X10	2.00
F-19	12	sleeve	2.00
F-19	13	Washer 8-140HV	2.00
F-19	14	bolt M8X35	2.00
F-19	15	Nut M8	2.00
F-19	16	Nut M10X1.25	2.00
F-19	17	Bolt M6X25	2.00
F-19	18	Bolt M8X55	2.00
F-19	19	Bolt M8X65	2.00

F-19	20	Bolt M8X90	2.00
F-19	21	Mounting block of air filter	2.00
F-19	22	battery box	40.56

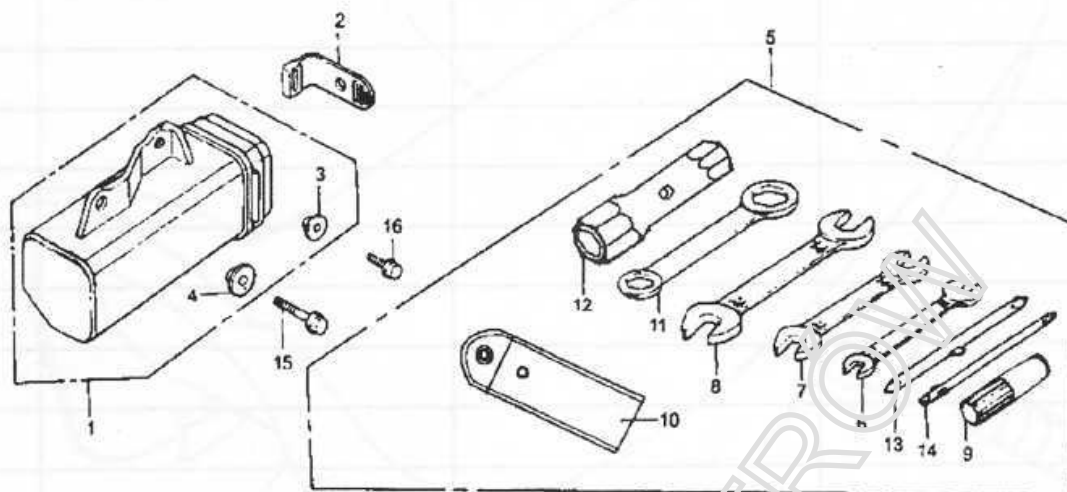 


F-20	1	tool box body	16.60
F-20	2	rubber bolt	6.24
F-20	3	callar	2.00
F-20	4	liner	2.00
F-20	5	tool kit	24.00
F-20	6	wrench 8-10	n/a
F-20	7	wrench 13-16	n/a
F-20	8	wrench 14-17	n/a
F-20	9	screwdriver lever	n/a
F-20	10	tool bag	n/a
F-20	11	special wrench	n/a
F-20	12	sleeve wrench	n/a
F-20	13	plug driver	n/a
F-20	14	double-head driver	n/a
F-20	15	bolt M8X20	1.00
F-20	16	Bolt M6X20	1.00

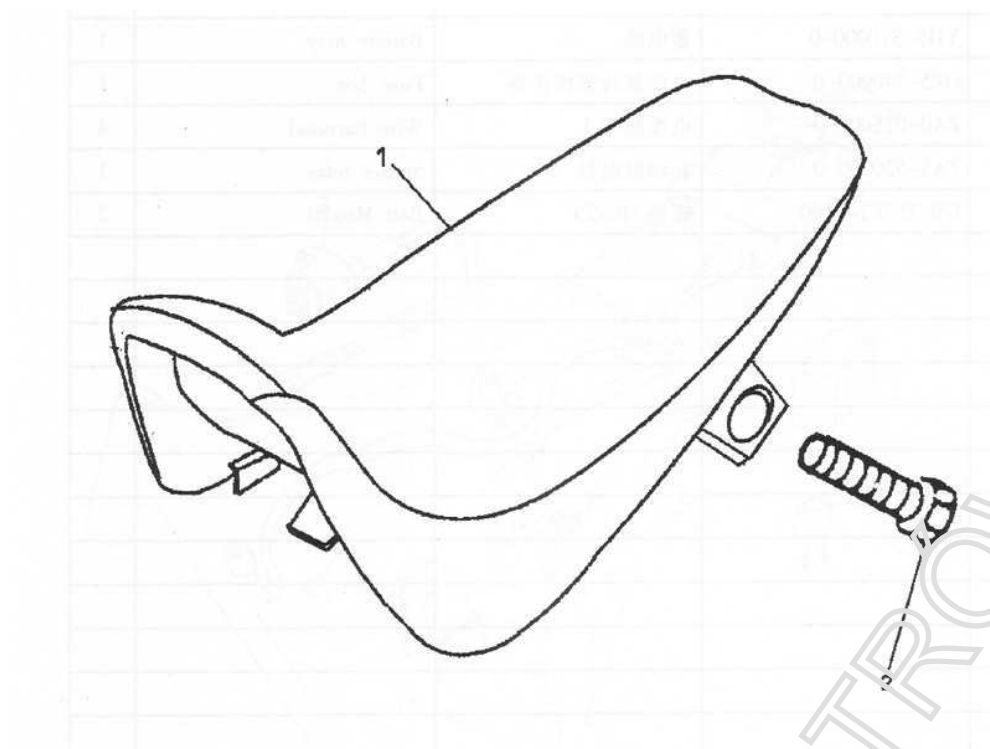 


F-21	1	Seat
F-21	2	Bolt M8X20

 153.36
1.00

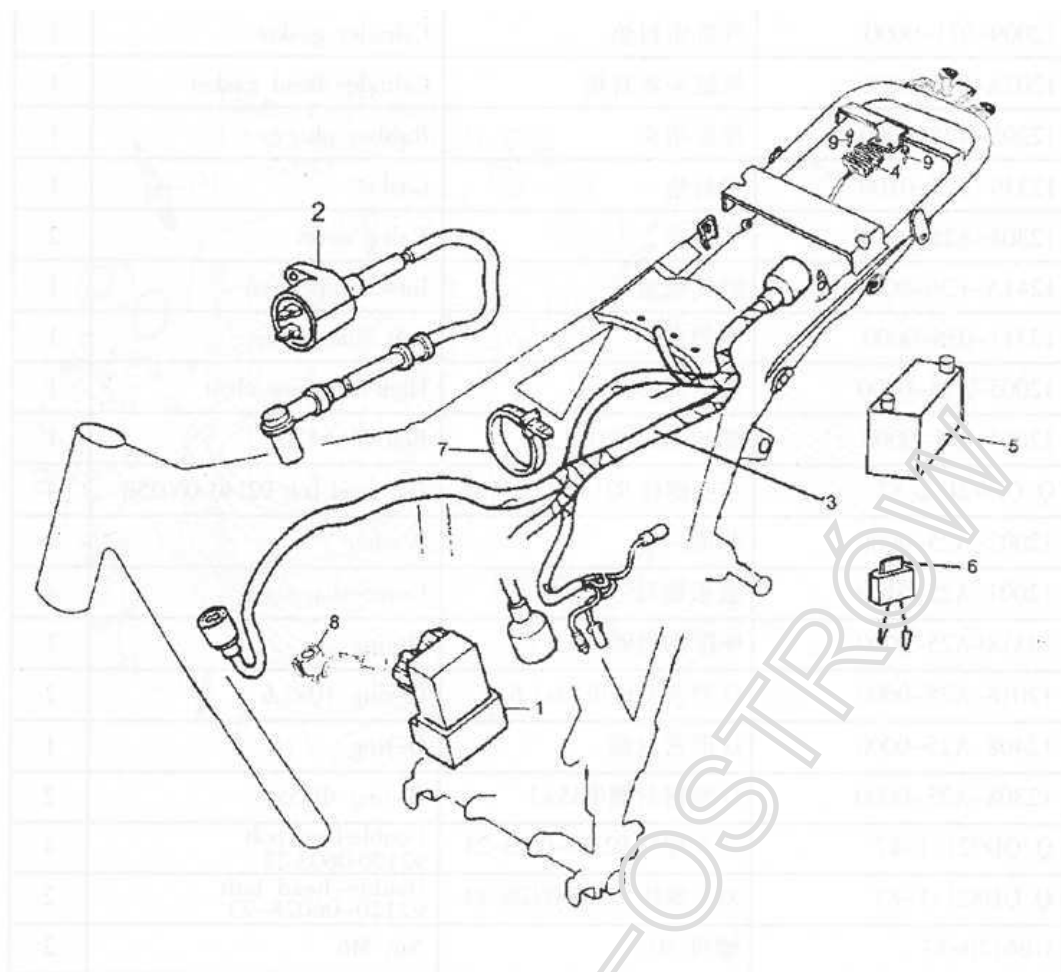


F-22	1	CDI Assy	65.00
F-22	2	ignition coil assy	47.28
F-22	3	wire harness assy	59.64
F-22	4	rectification regulator	39.00
F-22	5	battery assy	88.00
F-22	6	fuse box	12.00
F-22	7	wire harness 1	2.00
F-22	8	starter relay	27.96
F-22	9	bolt M6X20	1.00

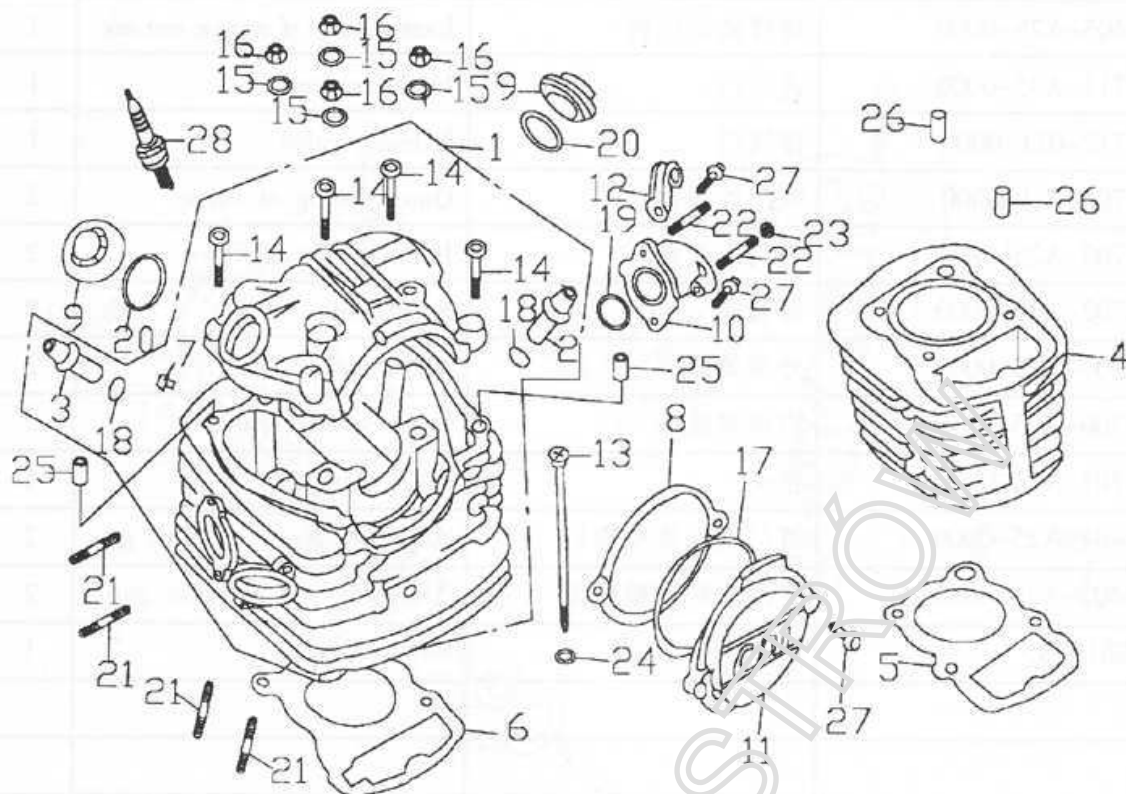 

E-1	1	Cylinder head component	245.00
E-1	2	guide pipe of intake valve	4.00
E-1	3	guide pipe of exhaust valve	4.00
E-1	4	cylinder body	267.72
E-1	5	cylinder gasket	8.00
E-1	6	cylinder head gasket	12.00
E-1	7	rubber plug	4.00
E-1	8	gasket	4.00
E-1	9	valve cover	9.00
E-1	10	intake pipe assy	14.64
E-1	11	left side cover	21.00
E-1	12	high pressure cleat	4.00
E-1	13	bolt M6X120	4.00
E-1	14	pan-head bolt 92140-06035B	4.00
E-1	15	washer	4.00
E-1	16	cover-shape nut	4.00
E-1	17	O-ring	4.00
E-1	18	O-ring 10X1.6	4.00
E-1	19	O-Ring	4.00
E-1	20	O-Ring 35X3	4.00
E-1	21	double-head bolt 92120-0603-23	4.00
E-1	22	double-head bolt 92120-06028-23	4.00
E-1	23	nut M6	4.00


E-1	24	washer	4.00
E-1	25	locating pin 92401-10014	4.00
E-1	26	locating pin 92401-10020	4.00
E-1	27	pan head bolt 92130-06020	4.00
E-1	28	resistance type spark plug	7.00

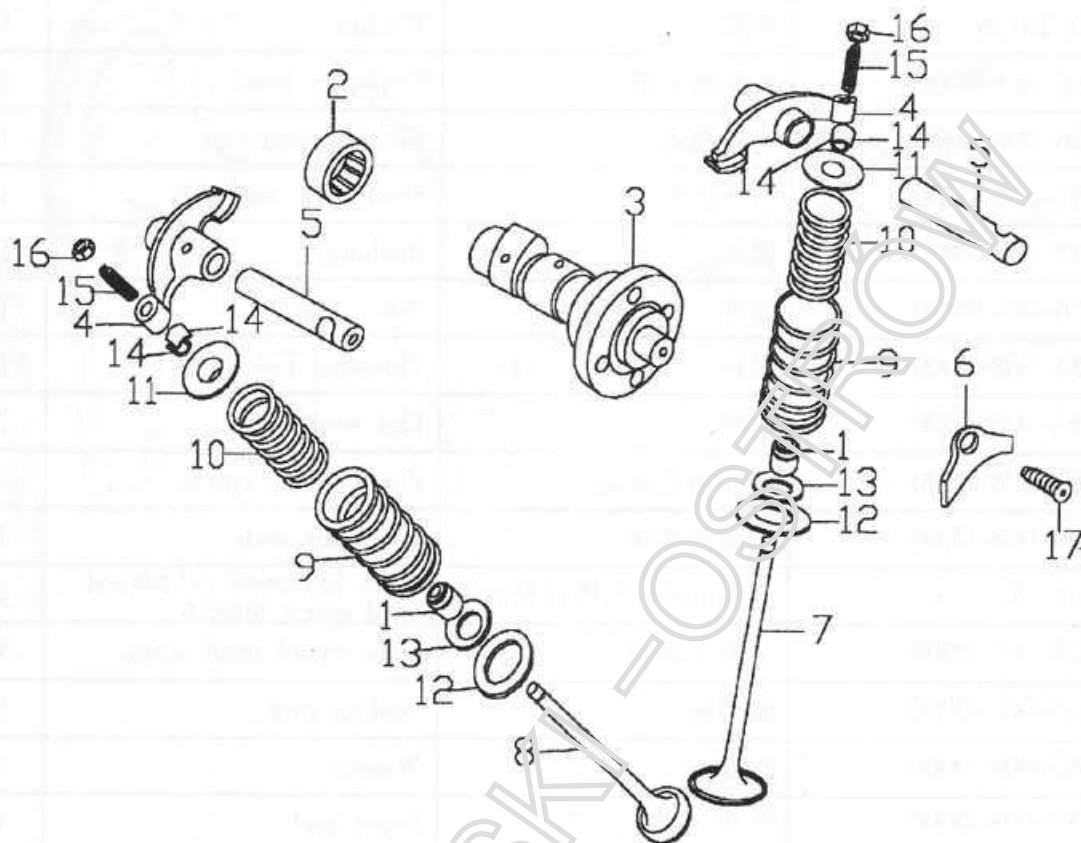 

E-2	1	Oil Catch hood	21.00
E-2	2	right bearing of cam shaft	9.00
E-2	3	cam shaft assy	22.00
E-2	4	swaying arm	12.00
E-2	5	swaying arm axle	12.00
E-2	6	locating board of swaying arm axle	6.00
E-2	7	intake valve	32.00
E-2	8	exhaust valve	32.00
E-2	9	outer spring of valve	6.00
E-2	10	inner spring of valve	6.00
E-2	11	spring seat	6.00
E-2	12	outer spring seat	6.00
E-2	13	inner spring seat	6.00
E-2	14	lock clamp	6.00
E-2	15	adjusting screw of valve gap	6.00


- | | | |
|-----|----|----------------------------|
| E-2 | 16 | adjusting nut of valve gap |
| E-2 | 17 | screw M6X20 |

 6.00
4.00

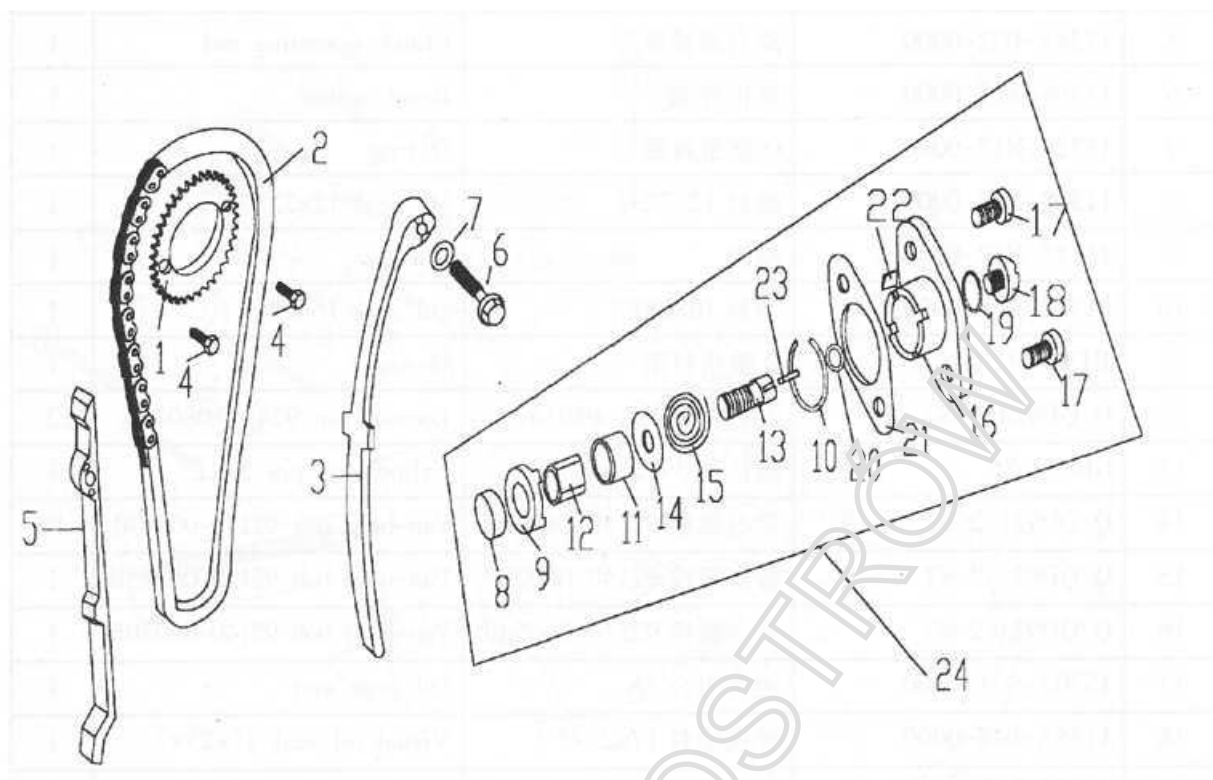


- | | | |
|-----|----|--|
| E-3 | 1 | Timing driven sprocket |
| E-3 | 2 | timing chain |
| E-3 | 3 | chain adjusting board |
| E-3 | 4 | bolt M6X10 |
| E-3 | 5 | chain guide board |
| E-3 | 6 | locating pin axle of adjusting board |
| E-3 | 7 | washer |
| E-3 | 8 | tensioner head |
| E-3 | 9 | locating end cap |
| E-3 | 10 | steel wire circlip |
| E-3 | 11 | bushing |
| E-3 | 12 | nut |
| E-3 | 13 | threaded rod |
| E-3 | 14 | flat washer |
| E-3 | 15 | plane volume spring |
| E-3 | 16 | tensioner body |
| E-3 | 17 | inner hexagon cylindrical head screw M6X16 |
| E-3 | 18 | semi-round head screw |
| E-3 | 19 | sealing ring |
| E-3 | 20 | washer |
| E-3 | 21 | paper pad |
| E-3 | 22 | rubber cap |
| E-3 | 23 | tensioner key |

 E-3 24 tensioner component

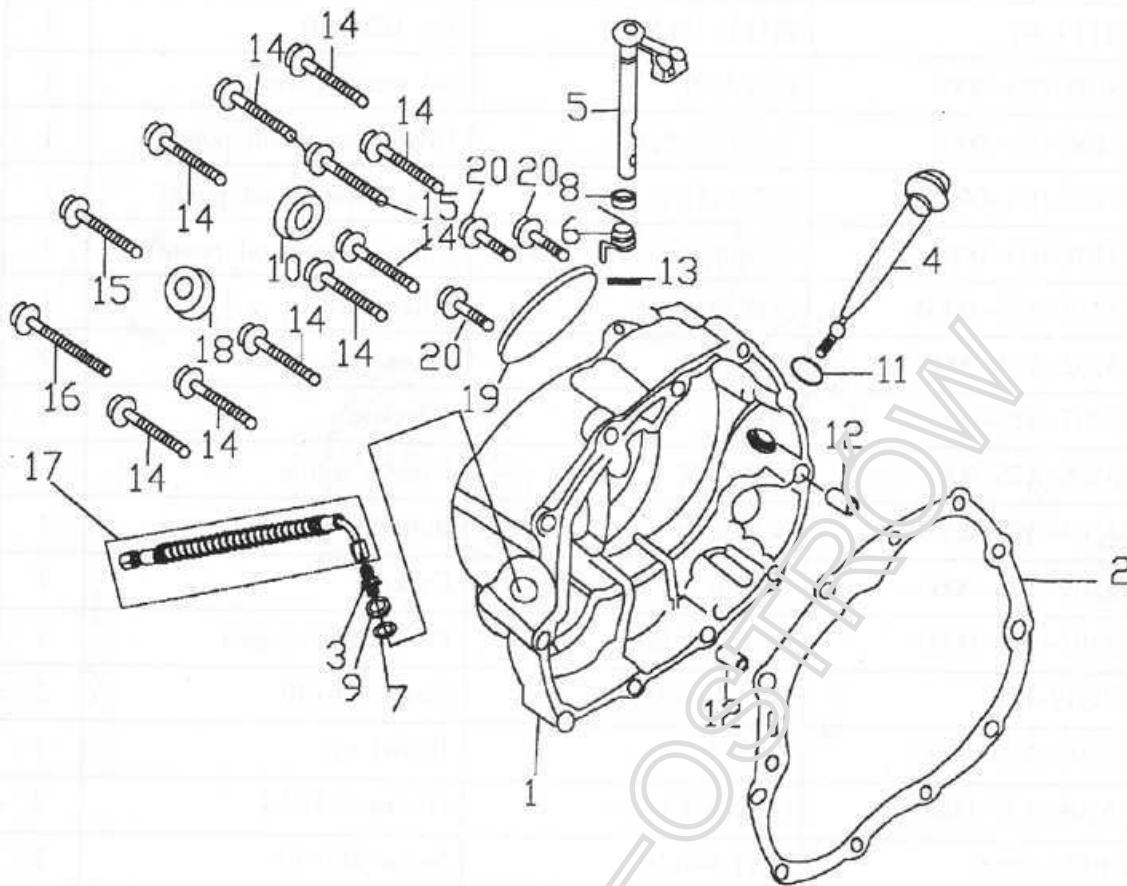


E-4	1	right crank case cover	87.00
E-4	2	right crank case cover gasket	8.00
E-4	3	oil pipe joint bolt	4.00
E-4	4	engine oil stick	8.00
E-4	5	clutch operating rod	21.00
E-4	6	reset spring	6.00
E-4	7	O-ring	4.00
E-4	8	oil seat 12X22X25	8.00
E-4	9	washer	4.00
E-4	10	oil seal 16X28X7	8.00
E-4	11	O-ring	4.00
E-4	12	locating pin 92401-08014	4.00
E-4	13	cylindrical pin 3X12	4.00
E-4	14	pan head bolt 9210-06040B	4.00
E-4	15	pan head bolt 02140-06025B	4.00
E-4	16	pan head bolt 92140-06050B	4.00
E-4	17	oil pipe assy	4.00
E-4	18	visual oil seal 17X25X7	8.00
E-4	19	ornamental cover of right cover	12.00

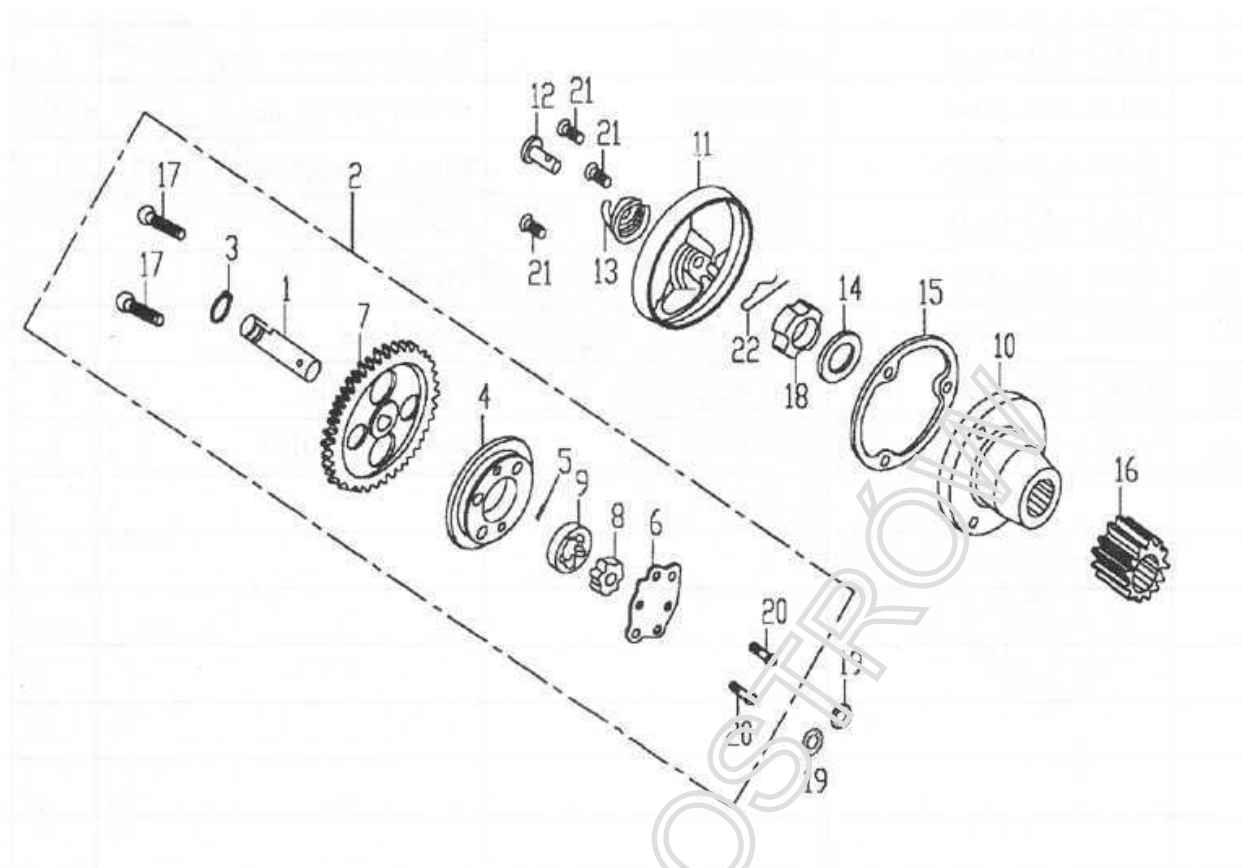 


- | | | |
|-----|----|-------------------------|
| E-5 | 1 | drive shaft |
| E-5 | 2 | oil pump part |
| E-5 | 3 | clrclip 5 |
| E-5 | 4 | oil pump body |
| E-5 | 5 | pin B2.5X10 |
| E-5 | 6 | oil pump cover |
| E-5 | 7 | drive gear of oil pump |
| E-5 | 8 | inner rotor of oil pump |
| E-5 | 9 | outer rotor of oil pump |
| E-5 | 10 | filter case |
| E-5 | 11 | filter case cover |
| E-5 | 12 | oil pipe |
| E-5 | 13 | pagoda spring |
| E-5 | 14 | butterfly washer |
| E-5 | 15 | gasket |
| E-5 | 16 | primary drive gear |
| E-5 | 17 | screw M6X30 |
| E-5 | 18 | round nut |
| E-5 | 19 | O-ring 9.4X2.4 |
| E-5 | 20 | screw M4X10 |
| E-5 | 21 | screw M5X12 |

 E-5 22 limit clip

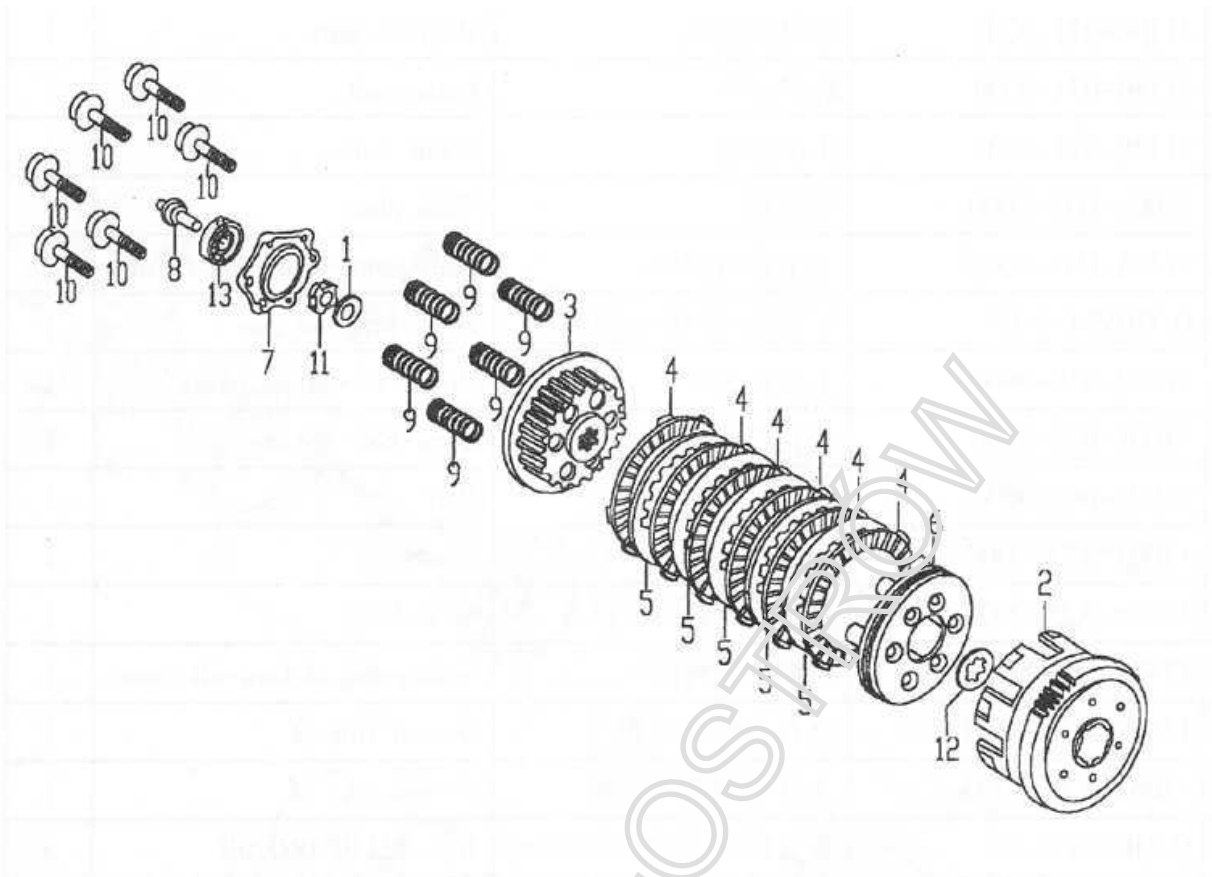


- E-6 1 butterfly washer
- E-6 2 outer case assy of clutch
- E-6 3 center cover of clutch
- E-6 4 friction plate of clutch
- E-6 5 clutch plate
- E-6 6 clutch pressure plate
- E-6 7 clutch raising plate
- E-6 8 clutch raising rod
- E-6 9 clutch spring
- E-6 10 flange
- E-6 11 round nut
- E-6 12 spline circlip
- E-6 13 bearing 7000103
- E-6 14 complete clutch

 285.00

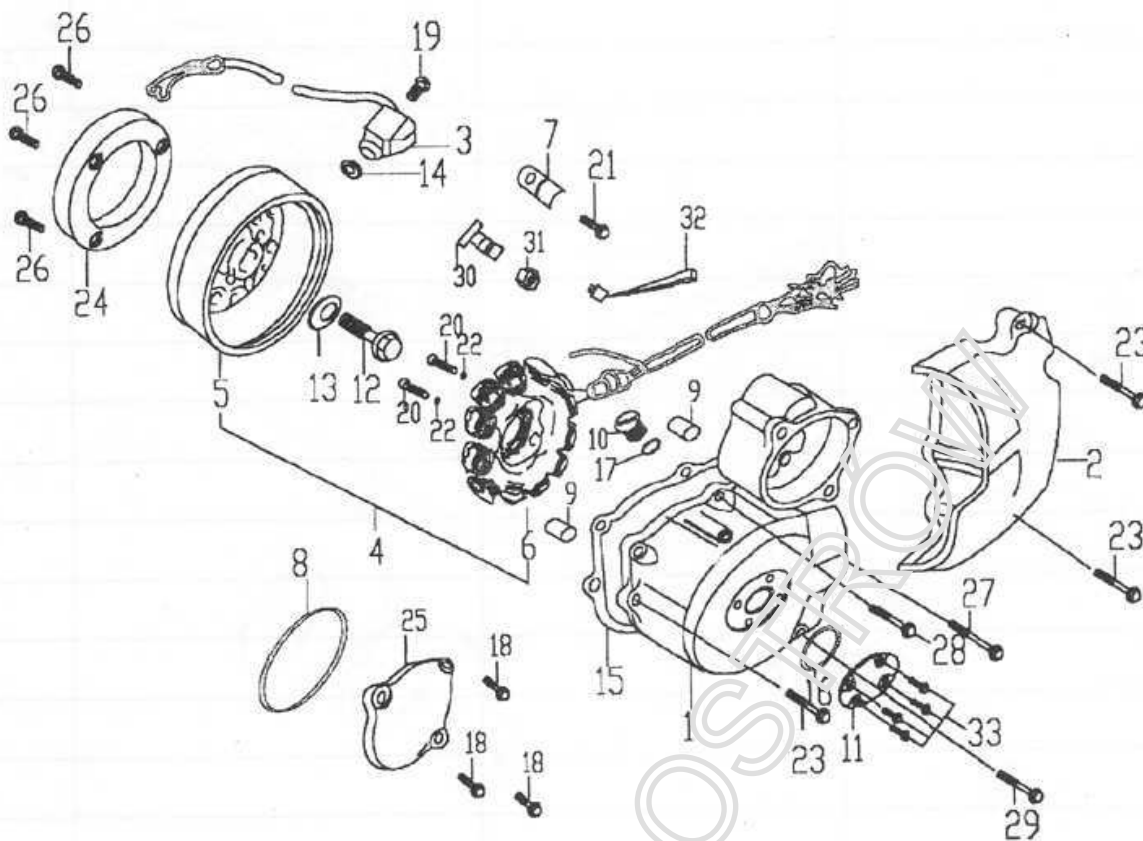


E-7	1	front left cover	87.00
E-7	2	rear left cover	40.56
E-7	3	sensor unit	16.00
E-7	4	magneto part	227.00
E-7	5	rotor unit	114.96
E-7	6	stator unit	128.00
E-7	7	wire plate	4.00
E-7	8	sealing-ring of upper left cover	4.00
E-7	9	positioning set pin	4.00
E-7	10	upper view-hole cover	4.00
E-7	11	view-hole cover	4.00
E-7	12	bolt	4.00
E-7	13	washer	4.00
E-7	14	O-sealring	4.00
E-7	15	sealing-ring of front left cover	6.00
E-7	16	O-seal ring of	4.00
E-7	17	O-seal ring of	4.00
E-7	18	Bolt 92140-06020B	4.00
E-7	19	screw M5X16	4.00

E-7	20	Screw M5X30	4.00
E-7	21	Screw M5X12	4.00
E-7	22	Washer 5	4.00
E-7	23	Bolt 92140-06025B	4.00
E-7	24	unilateral transducer	24.00
E-7	25	upper left cover	32.00
E-7	26	screw M6X12	4.00
E-7	27	bolt 92140-06045B	4.00
E-7	28	bolt 92140-06025B	4.00
E-7	29	Bolt 92140-06045B	4.00
E-7	30	switch board unit	4.00
E-7	21	Nut M10X1	4.00
E-7	32	shift switch clamp unit	4.00
E-7	33	Bolt 92140-06016B	4.00

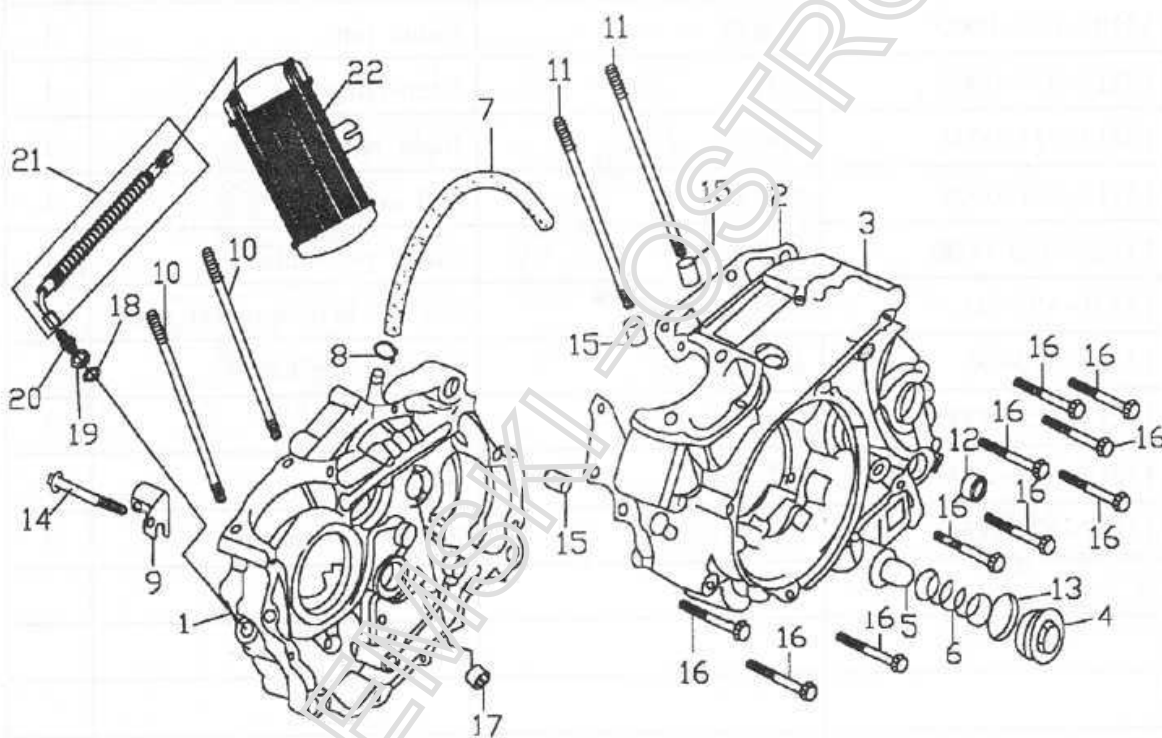 

E-8	1	right crankcase	
E-8	2	seal pad of crankcase	
E-8	3	left crankcase	
E-8	4	valve cover	12.00
E-8	5	Filter Net Fastening Plate	8.00
E-8	6	fixing spring	6.00
E-8	7	breather tube	
E-8	8	pipe clamp	
E-8	9	locating board of clutch cable	


E-8	10	cylinder stud bolt (A)
E-8	11	cylinder stud bolt (B)
E-8	12	oil sealing
E-8	13	O-seal ring
E-8	14	bolt M6X60
E-8	15	positioning set pin
E-8	16	bolt
E-8	17	needle bearing
E-8	18	O-Seal ring
E-8	19	washer
E-8	20	oil pipe bolt
E-8	21	oil pile unit
E-8	22	radiator parts

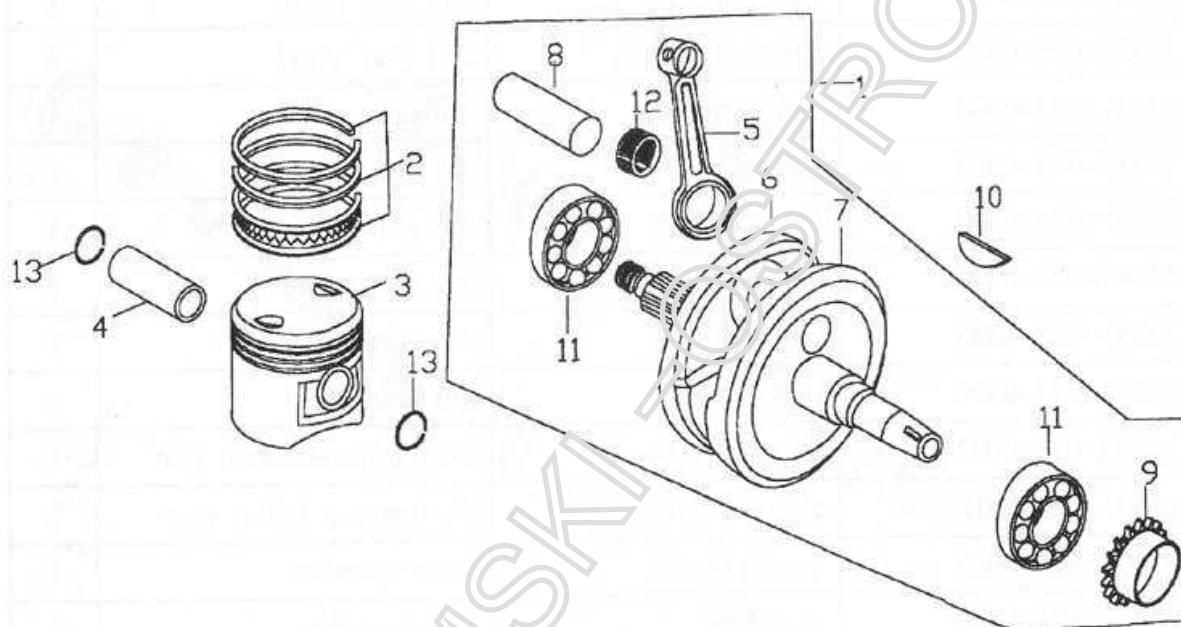 

E-9	1	div. components/crank connecting rod	265.00
E-9	2	piston ring A	37.80
E-9		Piston ring B	37.80
E-9		oil control ring	30.24
E-9	3	piston	17.04
E-9	4	piston pin	8.00
E-9	5	connectint rod	
E-9	6	right crank	
E-9	7	left crankcase	
E-9	8	crank pin unit	
E-9	9	timing drive sprocket wheel	
E-9	10	semicircular key	
E-9	11	ball bearing	


E-9	12	needle bearing
E-9	13	piston pin stopper

 12.00
1.00

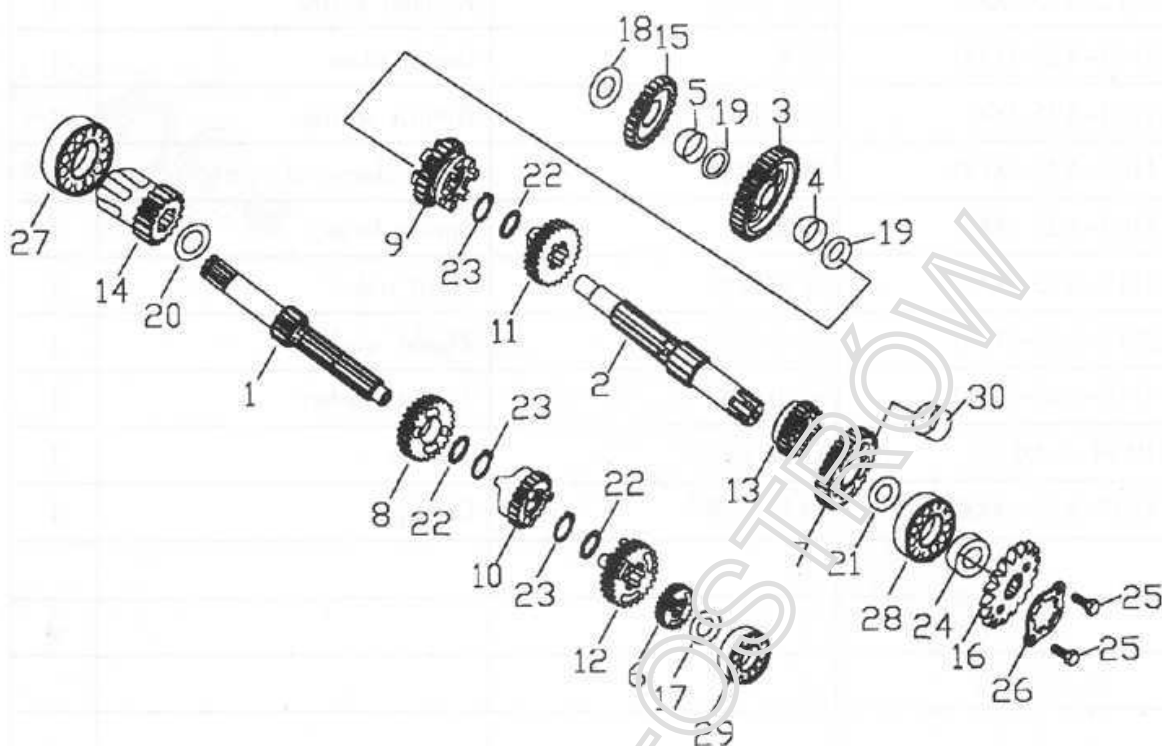


E-10	1	main axle
E-10	2	secondary axle
E-10	3	1st gear pinion
E-10	4	collar
E-10	5	collar
E-10	6	2nd gear pinion
E-10	7	2nd gear wheel
E-10	8	3rd gear pinion
E-10	9	3rd gear pinion
E-10	10	4th gear pinion
E-10	11	4th gear wheel
E-10	12	5th gear pinion
E-10	13	5th gear wheel
E-10	14	starting combination gear
E-10	15	starting gap bridge gear
E-10	16	drive sprocket
E-10	17	thrust washer
E-10	18	thrust washer
E-10	19	limit washer

E-10	20	thrust washer
E-10	21	washer
E-10	22	spline washer
E-10	23	circlip
E-10	24	oil seal 20X34X7
E-10	25	bolt M6X10
E-10	26	locating plate of drive chain
E-10	27	bearing 204
E-10	28	bearing 204
E-10	29	bearing 204
E-10	30	collar

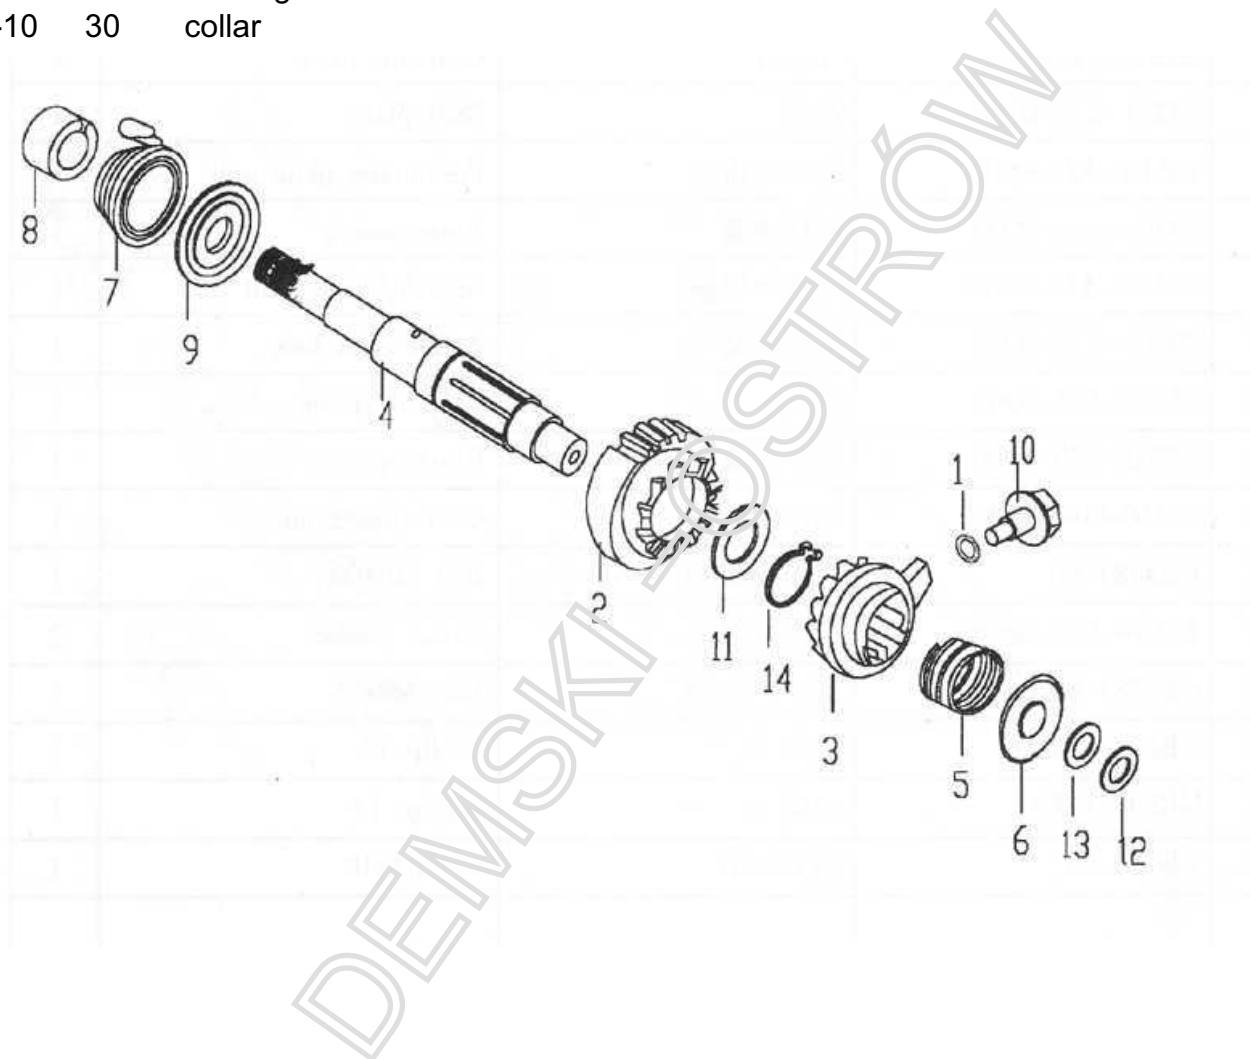 


E-11	1	O-ring 1.8X2.65
E-11	2	starting gear
E-11	3	starting ratchet
E-11	4	starting shaft
E-11	5	ratchet spring
E-11	6	guide plate
E-11	7	return spring
E-11	8	inner sleeve of spring
E-11	9	spring base
E-11	10	limit nut

E-11	11	thrust washer
E-11	12	thrust washer
E-11	13	circlip
E-11	14	circlip

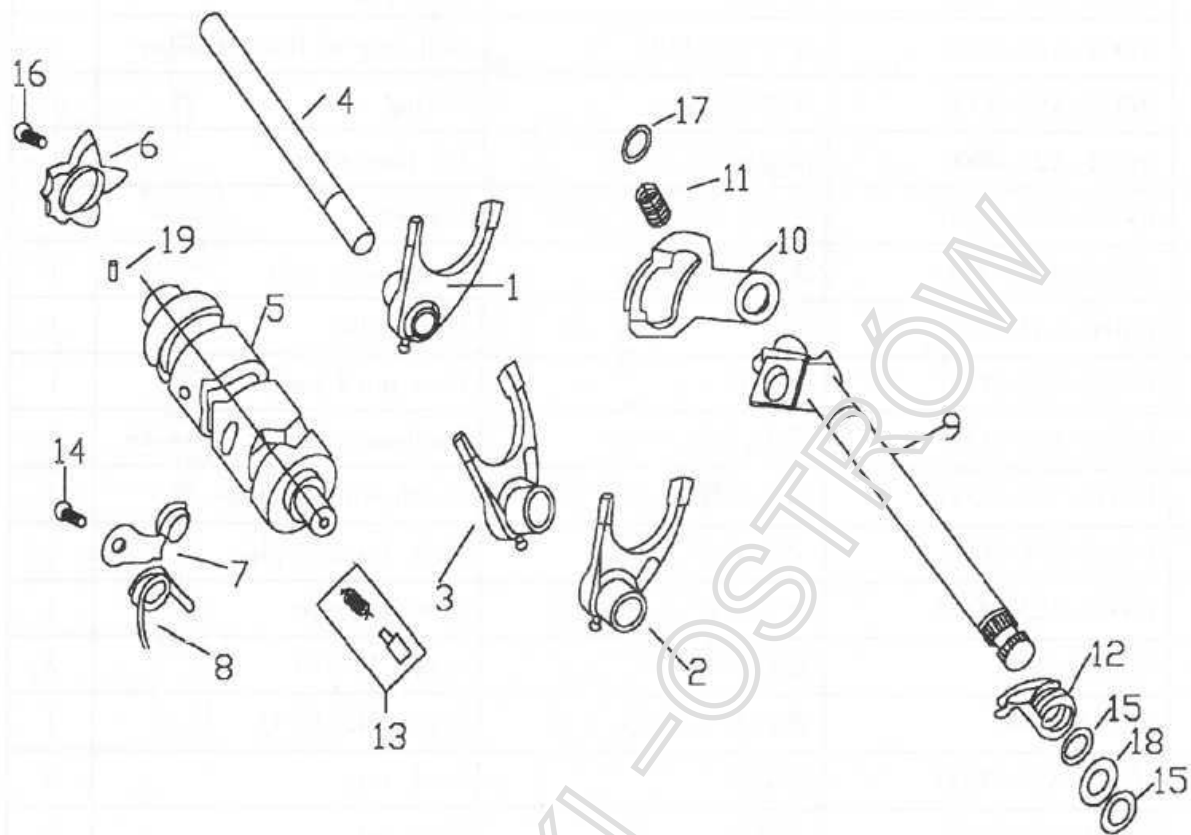 


E-12	1	shift fork 1
E-12	2	shift fork III
E-12	3	shift fork II
E-12	4	shift fork axle
E-12	5	gearshift drum
E-12	6	shift plate
E-12	7	positioning plate unit
E-12	8	reset spring
E-12	9	gearshift axle unit
E-12	10	active shift fork
E-12	11	pressed spring
E-12	12	reset spring
E-12	13	gear trigger unit
E-12	14	bolt M6X20
E-12	15	thrust washer
E-12	16	bolt M6X25
E-12	17	circlip 12

 - E-12 18 circlip 14
- E-12 19 pin B4X10

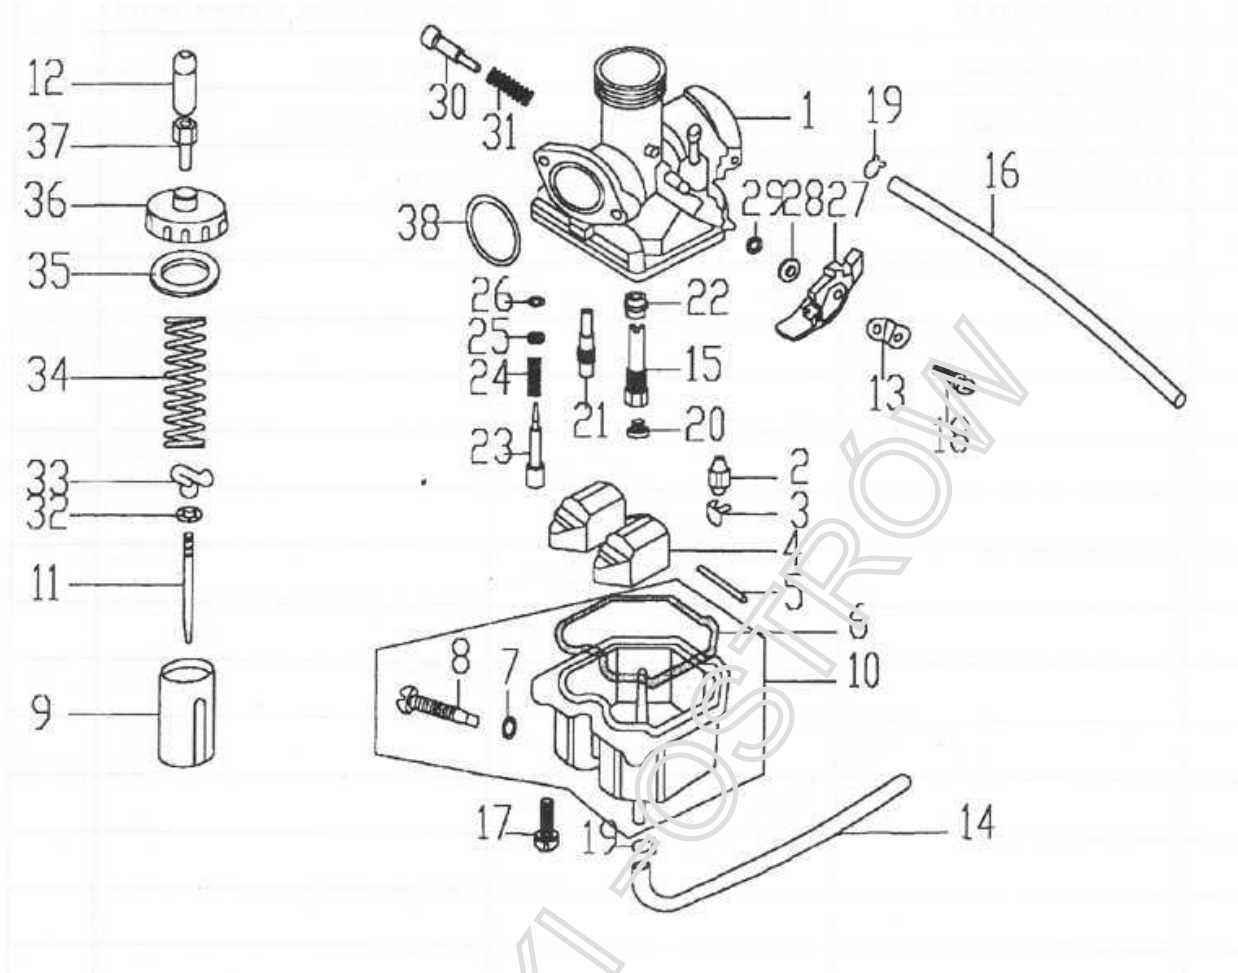

- E-13 1 carburetor unit 282.00

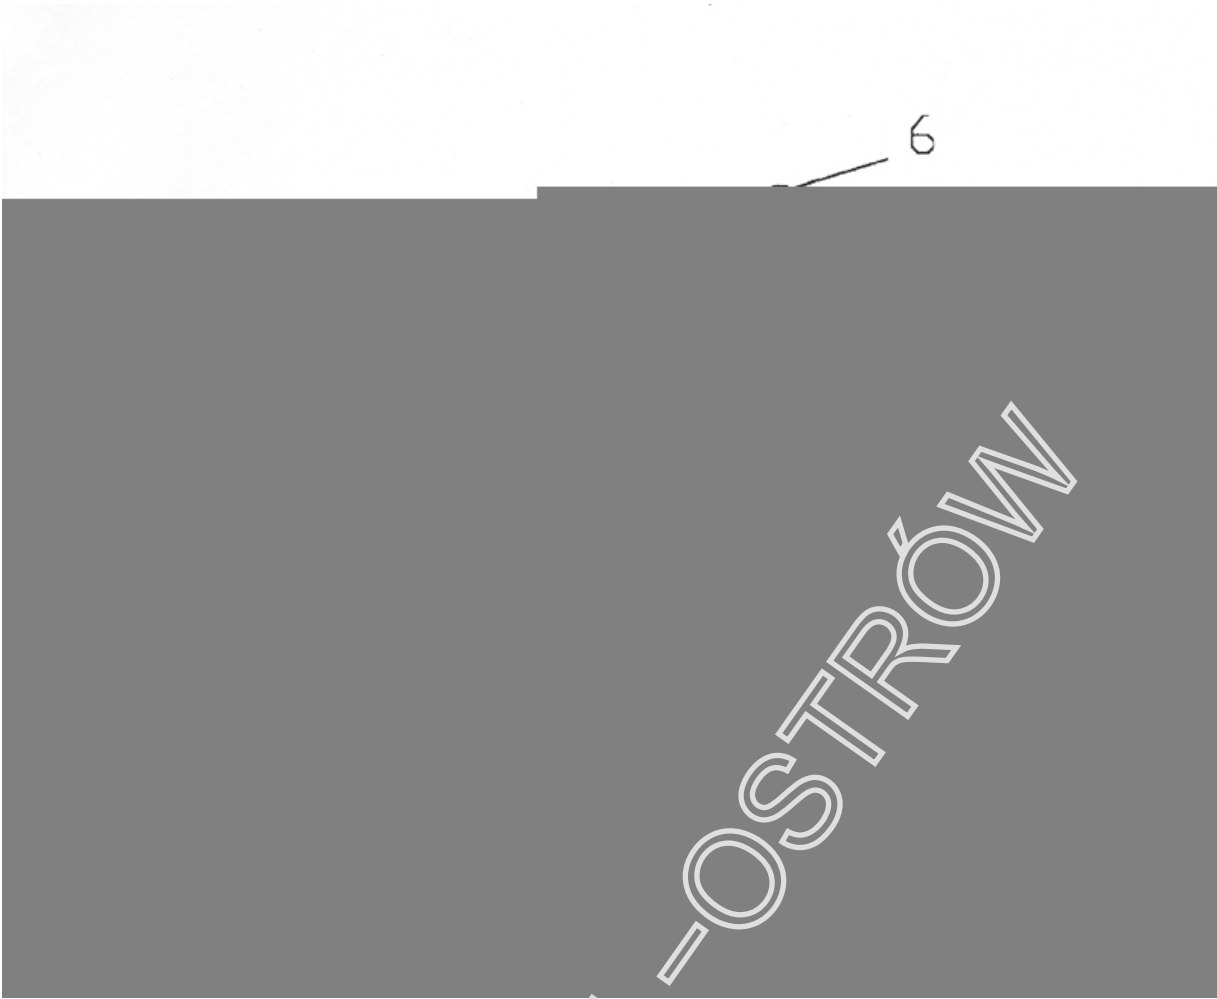 

E-14	1	starting motor components	217.92
------	---	---------------------------	--------